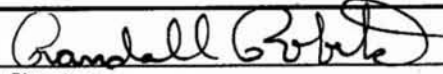

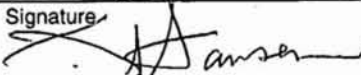
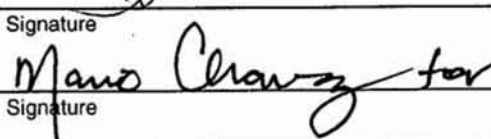


Appendix G

<p style="text-align: center;"><b>NUCLEAR WASTE MANAGEMENT PROGRAM</b></p> <p>Sandia National Laboratories</p>	<h2 style="margin: 0;">User's Manual Criteria Form</h2>	<p><b>Form Number:</b> NP 19-1-6</p> <p><b>Page 1 of 1</b></p>
--	---	--

**Does the user's manual contain as appropriate:**

1. <b>Software Name:</b> <u>nSIGHTS</u>					
2. <b>Software Version:</b> <u>1.0</u>					
3. <b>Document Version:</b> <u>1.0</u>					
4. <b>ERMS #:</b> <u>522061</u>					
5. A statement(s) of functional requirements (consistent with those in the RD) and system limitations?	<input type="checkbox"/>	Yes	<input type="checkbox"/>	No	<input checked="" type="checkbox"/> N/A <input type="checkbox"/> N/R
6. An explanation of the mathematical model and numerical models?	<input type="checkbox"/>	Yes	<input type="checkbox"/>	No	<input checked="" type="checkbox"/> N/A <input type="checkbox"/> N/R
7. Physical and mathematical assumptions?	<input type="checkbox"/>	Yes	<input type="checkbox"/>	No	<input checked="" type="checkbox"/> N/A <input type="checkbox"/> N/R
8. The capabilities and limitations inherent in the software?	<input checked="" type="checkbox"/>	Yes	<input type="checkbox"/>	No	<input type="checkbox"/> N/A <input type="checkbox"/> N/R
9. Instructions that describe the user's interaction with the software?	<input checked="" type="checkbox"/>	Yes	<input type="checkbox"/>	No	<input type="checkbox"/> N/A <input type="checkbox"/> N/R
10. The identification of input parameters, formats, and valid ranges?	<input checked="" type="checkbox"/>	Yes	<input type="checkbox"/>	No	<input type="checkbox"/> N/A <input type="checkbox"/> N/R
11. Messages initiated as a result of improper input and how the user can respond?	<input type="checkbox"/>	Yes	<input type="checkbox"/>	No	<input checked="" type="checkbox"/> N/A <input type="checkbox"/> N/R
12. The identification and description of output specifications and formats?	<input checked="" type="checkbox"/>	Yes	<input type="checkbox"/>	No	<input type="checkbox"/> N/A <input type="checkbox"/> N/R
13. A description of any required training necessary to use the software?	<input checked="" type="checkbox"/>	Yes	<input type="checkbox"/>	No	<input type="checkbox"/> N/A <input type="checkbox"/> N/R
14. The identification of components of the code that were not tested?	<input type="checkbox"/>	Yes	<input type="checkbox"/>	No	<input checked="" type="checkbox"/> N/A <input type="checkbox"/> N/R

15. <u>Randy Roberts</u>		<u>11/26/2002</u>
<b>Code Team/Sponsor (print)</b>	Signature	Date
16. <u>Dave Chace</u>		<u>11/26/2002</u>
<b>Technical Reviewer (print)</b>	Signature	Date
17. <u>Frank Hansen</u>		<u>11/26/2002</u>
<b>Responsible Manager (print)</b>	Signature	Date
18. <u>Mario Chavez</u> <sup>11/26/02</sup>		<u>11/26/2002</u>
<b>SCM Coordinator (print)</b>	Signature	Date
<u>Rodger Coman</u>		

Rev 13-DEC-02

Key for check boxes above:

Check <b>Yes</b> for each item reviewed and found acceptable	Check <b>No</b> for each item which requires further work
Check <b>N/A</b> for items not applicable	Check <b>N/R</b> for items not reviewed (multiple technical reviews)

# Information Only

Addendum to User Manual Criteria form.

This addendum contains explanations for boxes marked N/A.

Explanation for 5 – A statement of the functional requirements is contained in the Requirements Document ERMS#522058.

Explanation for 6 – A functional description and theoretical development is contained in the GTFM – User Documentation ERMS# 240244, August 15, 1996. nSIGHTS contains the functionality of the DOS based well-test simulator GTFM, re-architected and re-implemented for the Windows platform

Explanation for 7 – The physical and mathematical assumptions are contained in GTFM – User Documentation ERMS# 240244, August 15, 1996.

Explanation 11 – Messages initiated as a result of improper input are echoed in the software screens indicating source of improper input.

Explanation 14 – Code components that were not tested are listed in the Validation and Verification Plan ERMS#522060 and in the Verification Document ERMS#522063.

**Information Only**



# **nSIGHTS USER MANUAL**

Document Version 1.0  
ERMS# 522061

**06 November 2002**

## TABLE OF CONTENTS

TABLE OF CONTENTS.....	II
1 INTRODUCTION .....	1
1.1 Overview.....	1
1.2 User Manual Nomenclature .....	2
1.3 Getting Help.....	2
2 USING NSIGHTS .....	4
2.1 Overview.....	4
2.2 Basic Concepts.....	5
2.2.1 Model Runs and Simulations.....	5
2.2.2 Pages and Objects .....	5
2.3 User Interface.....	6
2.3.1 nPre Control Bar .....	8
2.3.2 nPre Input Window .....	8
2.3.3 Object Tree.....	9
2.3.4 Object Property Window .....	11
2.3.5 Menu Bar .....	12
2.3.6 Tool Bar .....	19
2.3.7 Object Description Area .....	19
2.3.8 Message Line .....	19
2.3.9 Status Bar .....	19
2.3.10 Window List Menu Window .....	19
2.4 Program Settings.....	20
2.4.1 Plot Tab.....	21
2.4.2 TreeView.....	21
2.4.3 OpenGL Visual .....	21
2.4.4 OpenGL Properties .....	23
2.4.5 OpenGL Fonts.....	23
2.4.6 Calculation Priority.....	24
2.4.7 Country Settings.....	24
3 NPRES INPUT WINDOWS.....	25
3.1 Configuration Input Window .....	27
3.1.1 Main Tab.....	27
3.1.2 Curve Files Tab.....	29
3.1.3 Liquid Tab.....	30
3.1.4 Gas Tab .....	31
3.1.5 Matrix Tab .....	31
3.1.6 Default Units Tab.....	32
3.1.7 Test Description Tab.....	32
3.2 Field Data Input Window.....	32
3.3 Sequence Input Window .....	33
3.3.1 Time-Base Tab.....	34
3.3.2 Sequences Tab .....	34
3.3.3 Process/Plot Tab.....	37
3.3.4 TZ Curves Tab .....	37

3.3.5	Dynamic Time Step Tab .....	39
3.3.6	Partial Run Tab .....	39
3.4	Parameter Input Window .....	39
3.4.1	Value Dialog .....	43
3.5	f(p)/f(r) Points Parameter Input Window .....	44
3.5.1	Point Entry Tab .....	44
3.5.2	Interpolation Tab .....	46
3.5.3	Units/Transform Tab .....	46
3.5.4	Optimization Tab .....	47
3.6	Simulation Output Input Window .....	47
3.6.1	Main Tab .....	47
3.6.2	Production Restart Tab .....	49
3.6.3	Superposition Tab .....	49
3.7	Fit Specification Input Window .....	49
3.7.1	Fit Specification/Graphics Tab .....	50
3.7.2	Fit Selection Tab .....	50
3.8	Optimization Input Window .....	51
3.8.1	Main Tab .....	51
3.8.2	Tolerances Tab .....	53
3.8.3	L-M Algorithm Tab .....	53
3.8.4	Simplex Algorithm Tab .....	54
3.8.5	Perturbation Tab .....	54
3.9	Sampling Input Window .....	54
3.9.1	Main Tab .....	55
3.9.2	Correlations Tab .....	56
3.9.3	Samples Tab .....	56
3.9.4	Graphics Tab .....	57
3.10	Suite/Range Input Window .....	57
3.10.1	Priority Tab .....	57
3.11	Output File Setup Input Window .....	57
3.12	Processing Setup Input Window .....	58
4	NPRES AUTO SETUP .....	59
4.1	Field Data Plots Auto Setup .....	60
4.2	Sequence Plots Auto Setup .....	62
4.3	Basic Fits Auto Setup .....	63
5	RUNNING SIMULATIONS .....	65
6	OBJECTS .....	67
6.1	Object Data Types .....	67
6.2	Object Concepts .....	67
6.2.1	Object ID .....	68
6.2.2	Object Selection .....	68
6.2.3	Object Connections .....	68
6.2.4	Object Execution .....	70
6.2.5	Object Errors .....	70
6.3	General Object Controls .....	70
6.3.1	Masters and Slaves .....	70

6.3.2	Exposed Controls .....	73
6.3.3	Formatting Real Numbers .....	75
6.3.4	Font Selection .....	76
6.4	Global Objects .....	77
6.4.1	System Information Objects .....	77
6.4.2	Standard Pen Set and Linear Color Maps .....	78
6.4.3	nPre Simulation Objects .....	78
7	DATA PROCESSING: DATA OBJECTS .....	79
7.1	Data Object Concepts .....	79
7.1.1	Default Data Objects .....	79
7.1.2	Tables in the Object Property Window .....	79
7.1.3	Scale/Transform Objects .....	80
7.1.4	Interpolation Methods .....	82
7.1.5	Curve Data Functions .....	83
7.2	Data Object Summary .....	84
7.3	Data Object Function Summary .....	87
8	PLOTTING .....	96
8.1	Plot Objects .....	96
8.1.1	Plot Object Types .....	96
8.1.2	Plot Object Concepts .....	98
8.1.3	Plot Object Summary .....	99
8.1.4	Default Plot Objects .....	100
8.1.5	Data Display Plot Objects .....	100
8.1.6	Annotation Plot Objects .....	101
8.1.7	Selection/Active Plot Objects .....	103
8.2	Plot Interaction .....	104
8.2.1	Plot Cursor .....	104
8.2.2	Zoom and Selection mode .....	104
8.2.3	Plot View .....	104
8.2.4	Plot Pop-Up Menus .....	106
8.2.5	Plot Tool Bar .....	107
8.2.6	Plot Object Control .....	108
8.3	Plot Output .....	109
8.3.1	Postscript Output .....	109
8.3.2	Bitmap Output .....	112
8.3.3	Plot Animations .....	113
8.3.4	View Animation Control .....	113
9	NPOST LISTS .....	116
10	NPOST OUTPUT .....	117
11	TUTORIAL .....	118
11.1	Test Description .....	118
11.2	Entering Model Input .....	118
11.2.1	Configuration Input .....	119
11.2.2	Field Data Input .....	119
11.2.3	Sequence Input .....	122
11.2.4	Parameter Input .....	127

11.2.5	Fit Specification Input.....	129
11.2.6	Output File Setup Input.....	132
11.3	Executing The Model.....	133
11.4	Evaluating Model Results.....	134
11.4.1	Evaluation of Constraints and Fitting Parameters .....	135
11.4.2	Residual Analysis.....	138
11.4.3	Evaluation of Joint Confidence Regions.....	141
11.4.4	Perturbation Analysis.....	143
11.4.5	Uncertainty Distributions for Non-fitting Parameters .....	152
12	APPENDIX A – DATA OBJECT DESCRIPTIONS.....	154
12.1	Add Noise .....	154
12.2	Add XY to Array .....	155
12.3	Array Scale/Transform.....	156
12.4	(Basic) Single Fit .....	157
12.5	Calculate Basic Residual.....	159
12.6	Calculate Residual Diagnostic .....	160
12.7	Composite Fit.....	161
12.8	Create Curve from XY Data .....	162
12.9	Create Real Value .....	163
12.10	Create XY Array.....	164
12.11	Data Page Description.....	165
12.12	Dual Scale/Transform .....	166
12.13	Enter Table Data .....	167
12.14	Enter XY Data.....	168
12.15	Extract Covariance Matrices.....	169
12.16	Extract Cube Indexes .....	171
12.17	Extract Grid.....	173
12.18	Extract Jacobian.....	174
12.19	Extract Optimizer Results Table.....	175
12.20	Extract Profile Grid.....	177
12.21	Extract Range.....	178
12.22	Extract Range Cube .....	180
12.23	Extract Range Grid .....	181
12.24	Extract Real from Table.....	182
12.25	Extract Residuals .....	183
12.26	Extract Sequence(s) .....	184
12.27	Extract Table Rows.....	186
12.28	Extract XY .....	188
12.29	Extract XY from XY Results.....	189
12.30	Fourier Transform on Y .....	191
12.31	Full Table Correlations .....	192
12.32	Histogram.....	193
12.33	Integrate .....	195
12.34	Interpolate Table Columns.....	196
12.35	Interpolate XY Data from Curve .....	197
12.36	Jacobian to Table .....	198



12.37	Linear Color Map.....	199
12.38	Matrix Math .....	200
12.39	Merge Color Maps .....	201
12.40	Normalize.....	202
12.41	P(t) Derivative Calculation .....	204
12.42	P(t) Time Processing.....	207
12.43	Pen Set .....	209
12.44	Pulse Normalization.....	210
12.45	Read Color Map.....	211
12.46	Read Cube Data .....	213
12.47	Read Curve File .....	214
12.48	Read Grid Data .....	215
12.49	Read nSIGHTS Optimizer Results .....	217
12.50	Read nSIGHTS Profile Results.....	218
12.51	Read nSIGHTS Range Results .....	219
12.52	Read nSIGHTS XY Results.....	220
12.53	Read Sequence Time Interval Data.....	221
12.54	Read Table File .....	222
12.55	Read XY Data.....	224
12.56	Read XYZ Label Data .....	226
12.57	Real Value(s) To Table.....	228
12.58	Reduction .....	230
12.59	Remove Duplicates .....	232
12.60	Scale/Transform.....	234
12.61	Select Curve from File.....	235
12.62	Select Range Cube .....	236
12.63	Select Range Grid .....	237
12.64	Select XY from XY Array .....	238
12.65	Sequence Fit.....	239
12.66	Single Fit.....	242
12.67	Single Scale/Transform.....	243
12.68	Smooth/Filter .....	244
12.69	Statistics .....	246
12.70	Sum Tables.....	248
12.71	Table Column Correlations.....	249
12.72	Table Column Math .....	250
12.73	Table Column Scale/Transform.....	251
12.74	Table Column Statistics .....	252
12.75	Table Column To Histogram .....	253
12.76	Table Columns To XY.....	254
12.77	Table Row Index Logic .....	255
12.78	Table Row Statistics .....	256
12.79	Time Limits Extraction/Interpolation .....	258
12.80	Transpose .....	260
12.81	Vector Math .....	261
12.82	View Table Data .....	262

12.83	View XY Data.....	263
12.84	Write Color Map.....	264
12.85	Write Curve File.....	265
12.86	Write Table File.....	266
12.87	Write XY File.....	267
13	APPENDIX B – PLOT OBJECT DESCRIPTIONS.....	268
	DEFAULT PLOT OBJECTS.....	269
13.1	2D XY Main Menu.....	269
13.2	2D XY Axes.....	271
13.3	2D Plot Annotation.....	273
13.4	3D XYZ: Main Menu.....	275
13.5	3D XYZ Axes.....	276
13.6	3D Axes Labels.....	277
13.7	3D Axes Format.....	279
13.8	3D Lighting.....	281
	DATA DISPLAY PLOT OBJECTS.....	283
13.9	Confidence Limits.....	283
13.10	Cube Color Block.....	286
13.11	Cube Color Point.....	289
13.12	Grid Color Block.....	292
13.13	Grid Color Fill.....	295
13.14	Grid Color Point.....	298
13.15	Grid Contour.....	301
13.16	Grid Fishnet.....	304
13.17	Multiple Table Series.....	306
13.18	Single Table Series.....	308
13.19	Table Histogram.....	310
13.20	Table Series.....	312
13.21	XY Array Horsetail.....	314
13.22	XY Histogram.....	315
13.23	XY Series.....	317
	ANNOTATION PLOT OBJECTS.....	320
13.24	Color Legend.....	320
13.25	Data Labels.....	323
13.26	Extra Grid Lines.....	325
13.27	Sequence Grid Lines.....	327
13.28	Series Legend.....	329
13.29	User Labels.....	331
13.30	XY Labels.....	333
13.31	XYZ Labels.....	334
	ACTIVE PLOT OBJECTS.....	336
13.32	Analytics: Line Data.....	336
13.33	Modify: Enter/Edit XY.....	338
14	APPENDIX C – NPOST LIST OBJECT DESCRIPTIONS.....	340
14.1	Covariance List.....	340
14.2	Jacobian List.....	341



14.3	Optimization Results.....	342
15	APPENDIX D – NPOST OUTPUT OBJECT DESCRIPTIONS .....	344
15.1	Write Grid File.....	344
16	APPENDIX E – OBJECT NAMES.....	345
16.1	Data Objects.....	345
16.2	Plot Objects.....	347
16.3	List Objects .....	347
16.4	Output Objects .....	348

# 1 INTRODUCTION

## 1.1 Overview

nSIGHTS (n-dimensional Statistical Inverse Graphical Hydraulic Test Simulator) is a comprehensive well test analysis software package. It provides a user-interface, a well test analysis model and many tools to analyze both field and simulated data. The well test analysis model simulates a single-phase, one-dimensional, radial/non-radial flow regime, with a borehole at the center of the modeled flow system.

The nSIGHTS system consists of two independent applications: nPre and nPost. The two applications differ in function, but are similar in their interface. nPre assists the user in model set-up, data pre-processing, running of the model and diagnostics of the simulation. nPost post-processes results calculated in nPre and stored in post-processing files.

This manual intends to guide the user in the use of nSIGHTS software; it does not provide a guide to the well test analysis model or to well test analysis.

The first section, **Using nSIGHTS**, provides an overview of the basic steps in working with nSIGHTS, examines some of the basic concepts in nSIGHTS as well as to describe the user interface.

The remaining sections of the manual detail:

- the input windows used for setting up a simulation in nPre (**nPre Input Windows**)
- nPre input windows Auto-Setup (**nPre Auto Setup**)
- running a simulation (**Running Simulations**)
- general information on data, plot, list and output objects (**Objects**)
- handling data objects for processing data (**Data Processing: Data Objects**)
- plotting data (**Plotting**)
- **nPost Lists**, and
- **nPost Output** options

A final section **Tutorial** will guide one through detailed steps in setting up, running and post-processing an optimization simulation.

## 1.2 User Manual Nomenclature

Within this manual, different fonts are used to indicate menu text, dialog prompts, drop-down list selections, user keyboard entry, jargon, object names, page and object identifiers and parameters. The following key describes the different items and their associated font:

**Menu Text** – this is text that appears on menus, dialog boxes, or menu bars. For text in dialog boxes, it is associated with the dialog heading and "frames" surrounding groups of items.

Dialog Text – this is text that appears in dialog boxes.

*Drop-down List Selection* – this is text that appears in a drop-down list box.

**Keyboard** – this is text entered by the user in text or numeric fields on menus.

*Jargon* – this is text that names an nSIGHTS specific concept for the first time.

**Object Name** – this is the name of an nSIGHTS object. Note that the object name used in the manual refers to the object name used in the **Object** menu. Object names in the object tree or object description area may differ from the object name in the **Object** menu (see Appendix E for tables of alternative object names).

*Page or Object ID* – this is the identifier for a specific nSIGHTS object with the object tree.


*Parameter* – this is the name of an nPre parameter.


## 1.3 Getting Help

The nSIGHTS user manual is available in both hard-copy format and through the on-line help system. To access the on-line help system, select the **Help Topics** command from the **Help** menu in the main window, or select the F1 key.

As well, context sensitive help is available for tool bar buttons and objects.

When a cursor is placed over a tool bar button, context sensitive help displays a small text window providing a short name for the tool bar button, as well as to display a message within the status bar (at the bottom of the main window).

To access help for an object, either select the  button or Shift-F1 and then the object in question. A help window will appear containing the help information for the selected object.

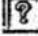The  button provides information on the software, including the software version, a link to register software complaints and a link to the manufacturer's website.

## 2 USING NSIGHTS

### 2.1 Overview

The general steps to creating a model run, executing a model run and viewing the output are outlined below.

- (1) Open nPre. nPre is used to pre-process input data, select model run options and execute the model run.
- (2) Complete input requirements through Input Windows. For all simulation modes, the following input is required:
  - define general model options and physical configuration → Configuration input window
  - import field data and develop constraints and diagnostic plots → Field Data input window
  - define test sequences → Sequence input window
  - enter parameter values → Parameter input window and if applicable,  $f(p)/f(r)$  Points Parameter input window
  - if suite or range parameters are defined, specify related options → Suite/Range input window
  - specify simulation output options → Simulation Output input window
  - specify output files to be created during simulation → Output File Setup input window
  - create plots for viewing during simulation → Processing Setup input windowDepending on the simulation mode, further input may be required:
  - if optimization or forward-range mode is selected, pair field data and simulated data for comparison → Fit Selection input window
  - if optimization mode is selected, pair field data and simulated data for comparison → Fit Selection input window, and specify optimization options → Optimization input window
  - if sampling mode is selected, specify sampling options → Sampling input window
- (3) Execute the model. Select the Minimal or Verbose command from the Run menu. Minimal shows minimal information during the simulation, whereas Verbose provides detailed information, at the cost of slightly increased execution time.
- (4) Examine diagnostic plots. If required, make necessary adjustments in the input and repeat step (3).
- (5) Close nPre.

- (6) Open nPost. nPost is a post-processor for simulation results, and contains many statistical tools to examine the results.
- (7) Read simulation results into nPost. Analyze and plot the results.
- (8) Examine results. If necessary, return to nPre, make necessary changes to the input, and repeat from step (3).

## 2.2 Basic Concepts

### 2.2.1 Model Runs and Simulations

Each time the well test analysis model is executed within nSIGHTS, a *model run* is created. To execute the well test analysis model (and create a model run), a command in the Run menu is selected (see Section 5).

Depending on the model options selected, a model run within nSIGHTS may consist of one or many *simulations* or *cases*. A simulation is the calculation of one flow solution, with one set of parameter values. A case is one or a group of simulations depending on the *simulation mode*:

- In forward mode, a case is one simulation, with one combination of suite, range or sampled parameters.
- In optimization mode, a case is a group of simulations, based on one set of non-fitting parameters, such as a set of sampled parameters or one combination of suite or range variables. Each simulation of the optimization mode case has adjusted values of fitting parameters, with the goal of providing an optimal fit between simulated results and field data.

Simulation mode indicates general model function. For example, optimization mode indicates that the model will conduct several simulations, adjusting the values of user-specified parameters for each simulation, to obtain an optimal fit between simulated and field data. Each model run has only one simulation mode. The simulation modes available are identified and described in Section 3.1.1.

### 2.2.2 Pages and Objects

The nSIGHTS approach to data visualization and data processing is based on the conceptual paradigm of *pages* and *objects*. These pages and objects are organized in an object tree (see Section 2.3.3).

An object has a defined function related to data input/output, data manipulation, or plot construction. For example, a data object may read a file containing a table of pressure data, while a plot object may plot pressure with respect to time. Section 6 describes object basics.

A page contains a collection of related or similar objects. nSIGHTS contains four types of pages: *data pages*, *plot pages*, *list pages* (nPost only) and *output pages* (nPost only).

Data pages are used to collect objects that do not in themselves create a visual representation. For example, table input data are represented by an object named **Read Table File**. There is always at least one data page (the default data page), however the user can add as many data pages as desired. Multiple data pages are used to better organize objects (more than 15 objects to a page can be cluttered). Data objects are further described in Section 7.

Plot pages contain objects that result in a visual representation appearing upon a single plot. Associated with each plot page is a top-level window that contains the actual plot. Only those objects on a specific plot page will appear on the plot. Plot pages and objects are further described in Section 8.

Output pages (nPost only) contain objects whose primary purpose is to write data to a file. The output page, and associated output objects are further described in Section 10.

A list page (nPost only) performs a similar function to the **List** menu in nPre. For each list object, an associated list top-level window is created, displaying text information. The list page and associated objects are further described in Section 9.

## 2.3 User Interface

The nPre or nPost user interface consists of a main window, from which the majority of controls are located. Other top-level windows in the interface include plots, the window list menu and object controls. The user interface description in this section focuses on the main window interface.

Figure 1. shows a typical nPre main window.



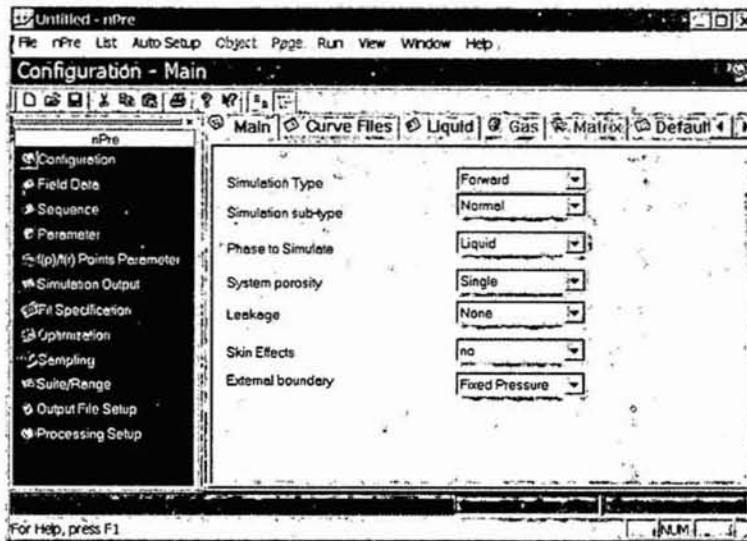


Figure 1. nPre Main Window Screen

Figure 2. shows a typical nPost main window.

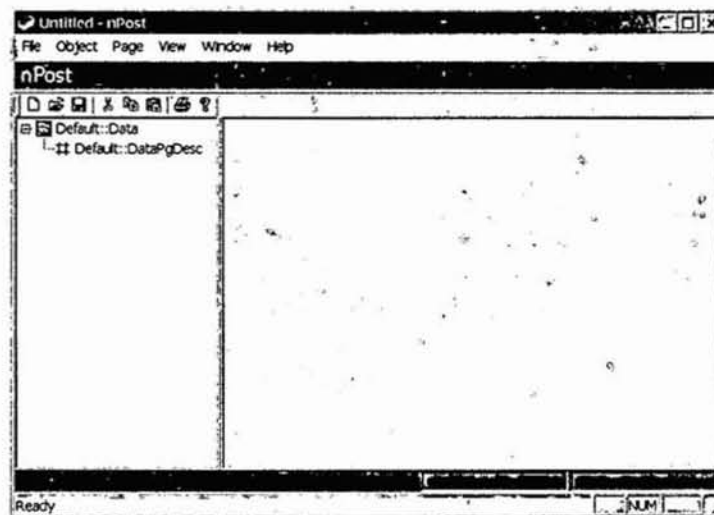


Figure 2. nPost Main Window Screen

The user-interface that occupies the bulk of the main window differs between nPre and nPost. In nPre, the main window consists of two main components: an *nPre control bar* (navigational pane) and an *nPre input window*. In nPost, the main window consists of two main components: an *object tree*, and the object *property window*.

Additional user-interface components for both nPre and nPost include a menu bar, a tool bar, an object description area (directly below the menu bar), a message line, a status bar and a window list menu window.

### 2.3.1 nPre Control Bar

The nPre control bar, shown in figure 3., displays all the nPre input windows. It is equivalent to the nPre menu.

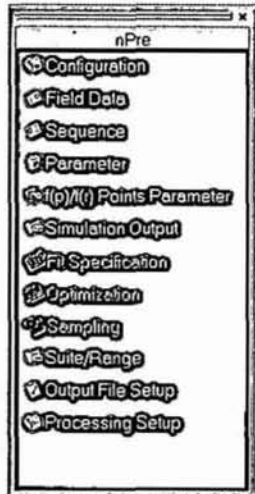





Figure 3. nPre Control Bar

An nPre input window is simply a means of organizing the different steps of an nSIGHTS simulation. Selection of an input window from the nPre control bar or menu will display the corresponding nPre input window.

The commands are shown as either small icons or large icons, controlled by selecting the small icon button  or the large icon button  in the tool bar, or by right-clicking in the control bar and selecting the corresponding command from the pop-up menu. If the control bar is too small to show all the commands, scroll buttons will appear on the right hand side of the control bar.

The nPre control bar is closed by selecting the  button on the top right hand corner of the nPre control bar, or by toggling the Control Bar command in the View menu.

### 2.3.2 nPre Input Window

The nPre input window contains dialog prompts, object trees and corresponding object property windows or tables to define the input data for a simulation. The input window may be organized into tabs, as shown for the Configuration main tab window (figure 4.):

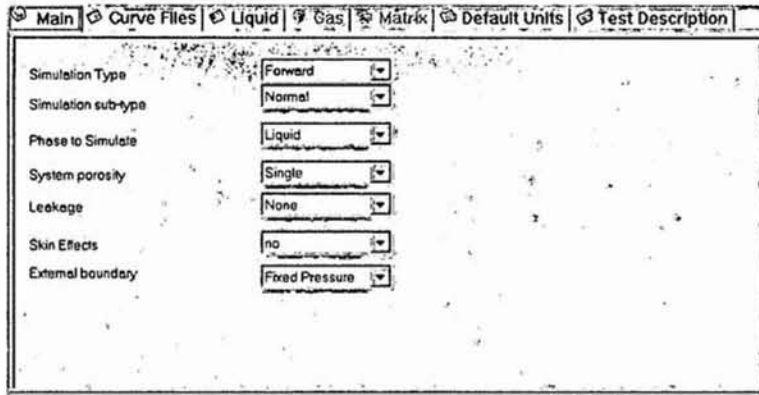


Figure 4. Configuration Main Tab Window

If there are too many tabs to fit within the main window, scroll buttons will appear adjacent to the tabs in the top right hand corner of the input window.

The nPre input windows for each nPre command are described in detail in Section 3.

### 2.3.3 Object Tree

The object tree is a means of visually organizing pages and objects.



Figure 5. Object Tree

The pages in an nSIGHTS visualization are represented as first-level icons in the tree. The different types of pages are indicated by the following icons:

- 📄 data pages, list pages and output pages
- 2D plot pages
- 📐 3D plot pages

## icons in the second level of the tree represent the objects associated with each page. Objects can be hidden/unhidden if the tree node for the page is toggled.

Both page and object icons are followed by a text identifier. The text identifier contains an *object ID* followed by the name of the page or object. The object ID is specified in the top left hand corner of the object property window. For pages, the object ID for the first object in the page will also be the ID for the page.

New objects are created using the **New** command in the **Object** menu. The command results in a list of available objects being presented, from which the user may pick one. An icon and ID representing the object then appears in the object tree and its properties appear in the property window.

Selecting an object causes its properties to appear in the object property window. The selected object (also known as the current object) is indicated by a black square around the icon, as shown below for the *XY Data: X4 Data* object.

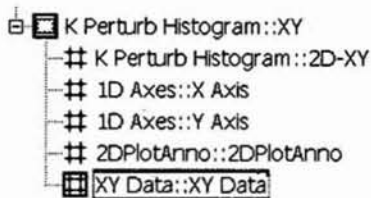


Figure 6.

The object of type **Read XY Data** is selected in the figure above. Usually only one object is selected, but multiple objects may be selected by holding down the shift key when selecting objects. Selecting multiple objects is useful only for copy, delete, and duplicate operations (see Section 2.3.5.2). When multiple objects are selected, only the object property window for the last object selected is shown.

An object's icon reflects its status. Available status indicators are as follows:

- ⊞ Normal Status
- ⊞ Incorrect Object Properties
- ⊞ Error in Object Calculation
- ⊞ Exposed Properties

If the object status is OK (all object properties are set correctly and all object input is satisfied) the icon will be displayed normally. Otherwise a green question mark may appear over the icon if the object properties are not set correctly, or a red X if the object calculation resulted in an error. Other status indicators are a black XP if the object contains exposed properties (see Section 6.3.2). Some objects may appear with a pink Q overlaying the icon, indicating that the object's quality assurance status is to be verified.

### 2.3.4 Object Property Window

The data associated with the current object (i.e. the *object's properties*) are displayed in the property window, along with a user interface (UI) for editing the properties, and the *object buttons*. In the example below, the **Read XY Data** object properties consist of the *Object ID*, the name of the file, file reading options, plus status information describing the attributes of the loaded file.

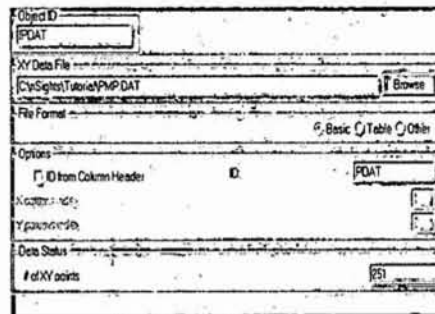


Figure 7. Property Window

Selecting a different object in the object tree, or creating a new object, clears the object property window display and places the properties of the new object in the property pane, where they can be modified.

The object buttons in the property window have the following effect:

- Apply** Processes all user input in the object property window and checks it for validity. If the data are OK, they are copied into the object and the object is re-calculated. All connected objects downstream are also re-calculated

and any affected plots updated.

- Cancel** Replaces the data displayed in the property window with the object properties first displayed or saved with the last selection of the Apply button.
- Clear** Clears object properties (may not be available for all objects).
- Default** Sets object properties to a default value (may not be available for all objects).

## 2.3.5 Menu Bar

The menu bar for both nPre and nPost contains the following menu items: **File**, **Object**, **Page**, **View**, **Window**, and **Help**. nPre contains several additional menus items: **nPre**, **List**, **Auto Setup**, and **Run**.

### 2.3.5.1 File Menu

The File menu bar item contains the usual file operations:

- New** Removes the current nPre or nPost file, and creates a new blank nPre or nPost file.
- Open** Presents a file selection dialog to open an existing nPre or nPost configuration file (default extension .nPre or .nPost). Upon selection of a file, the existing configuration is cleared and the selected configuration file is loaded. A configuration file contains the nPre input data (nPre only) and all the pages, objects, and object properties and data. The main window title is then changed to the file name.
- Save** Replaces the contents of the current configuration file with the current input data and page/object set-up. This method will use Save As if a configuration file has not been loaded.
- Save As** Presents a file selection dialog (default extension .nPre or .nPost). After a file name is specified, the Save operation is performed.
- Print Setup** Presents the standard Windows printer selection dialog. The default printer for plots and the basic page set-up is specified.

Exit                      Closes nPre or nPost.

### 2.3.5.2 Object Menu

The Object menu bar item is shown in figure 8.

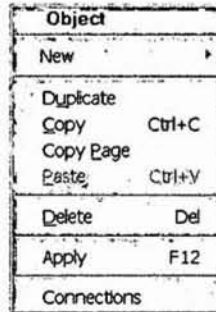


Figure 8. Object Menu Bar

Note that the same Object menu is also available as a pop-up menu, by right-clicking the mouse in the object tree window while an object is selected.

The menu provides the following operations for manipulating objects in an object tree:

- |                  |  |
|------------------|--|
| <b>New</b>       | Creates a new object and places it on the current page. The New menu item cascades to a second menu providing a list of objects available for the current page type. For data pages, the second menu contains categories of objects, which cascade into a third menu containing the available objects. |
| <b>Duplicate</b> | Creates a copy of the currently selected object(s) on the current page. Equivalent to Copy followed by Paste.  |
| <b>Copy</b>      | Clears the copy buffer and places a copy of the currently selected object(s) in the copy buffer. Note that multiple objects are selected by holding down the shift key when selecting objects.   |
| <b>Copy Page</b> | Clears the copy buffer and places a copy of all objects on the currently selected page in the copy buffer.   |
| <b>Paste</b>     | Creates copies of all objects in the copy buffer on the currently selected page. The page does not have to be the same page as the   |



page from which the objects were copied, however, it does have to be a page of the same type.

- Delete** Removes the currently selected object from the page. Places a copy of the object in the copy buffer.
- Apply** Same effect as pressing the **Apply** button in the current object property window.
- Connections** Displays a text top-level window that provides information on the connections of the currently selected object, the objects used as input, and the objects which use the currently selected object's output as input. See Section 6.2.3 for details.

### 2.3.5.3 Page Menu

The **Page** menu bar item is used to perform operations on data, plot, list and output pages. Note that the same menu is also available as a pop-up menu, by right-clicking the mouse in the object tree window while a page is selected. Not all the commands are available in both nPre and nPost.

- New 2D XY Plot** Creates a new 2D plot page and window.
- New 3D XYZ Plot** Creates a new 3D plot page and window.
- New Data** Creates a new data page.
- New List** Creates a new list page (nPost only).
- New Output** Creates a new output page (nPost only).
- Duplicate** Creates a copy of the currently selected page.
- Copy current** Places a copy of the current page and all its objects in the copy buffer.
- Copy all** Places a copy of all pages and all objects in the copy buffer.
- Paste** Creates copies of the pages in the copy buffer in the current object tree.

<b>Delete</b>	Deletes the currently selected page.
<b>Delete all Pages</b>	Deletes all pages in the current object tree (nPre only).
<b>Bring Page Window Top</b>	If the currently selected page in the object tree is a plot or list page, the plot or list window is brought to the top of the window order (i.e. made visible).
<b>All Connections</b>	Displays a text top-level window that provides information on the connections of all objects within the currently selected page. See Section 6.2.3 for details.

There are no set limits within nPre or nPost on the number of pages in a single application.

#### **2.3.5.4 View Menu**

The View menu bar item has four items in nPre and three items in nPost:

<b>Toolbar</b>	Controls the presence of the toolbar displayed below the object description area.
<b>Status Bar</b>	Controls the presence of the status bar at the bottom of the main window.
<b>Control Bar</b>	Controls the presence of the nPre control bar (nPre only). The nPre control bar is described in Section 2.3.1.
<b>Settings</b>	Displays the View Settings dialog which specifies default settings for nSIGHTS operation. This dialog is discussed in detail in Section 2.4.

#### **2.3.5.5 Window Menu**

There are at least two items on the Window menu bar item:

<b>Window List</b>	Displays the window list menu top-level window. Upon selection of any top-level nPre or nPost window (the main window, plots or control menus) in the window list menu, the selected window is brought to the top of the window
--------------------	---

order. The window list menu is further described in Section 2.3.10.

**Minimize all windows**    Minimizes all windows.

The **Window** menu will contain one entry for each top-level window open except for the main menu. The top-level windows are identified by the nPre input window (nPre only), the window ID and the window type. Selecting an item will bring the window with the same name to the top of the window order. In the example below, there are three top-level windows in nPre. All three are 2D plots: the plots are associated with plot pages in the **Field Data** input window, the **Sequence** input window (**Process/Plot** tab), and the **Processing Setup** input window.

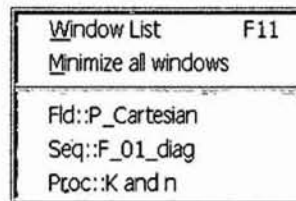


Figure 9. Window Menu

### 2.3.5.6 Help Menu

The **Help** menu bar item has two items:

- |                      |  |
|----------------------|--|
| <b>Help Topics</b>   | Displays the Help window containing the on-line help manual.   |
| <b>About nSIGHTS</b> | Displays the About dialog, containing information about the software version, and links to the developer and manufacturer. |

### 2.3.5.7 nPre Menu

The **nPre** menu lists all the nPre input windows. It is equivalent to the nPre control bar. Selection of an input window from the nPre control bar or menu will display the corresponding nPre input window.

### 2.3.5.8 List Menu

The commands in the **List** menu provide a summary, in a text window, of the nPre model input data. The different input data summaries available and their corresponding menu commands are as follows:

<b>Current</b>	Displays the model input data associated with the current nPre input window.
<b>Current Errors</b>	Displays errors in the model input data of the current nPre input window. If the command is inaccessible, there are no errors for the input window.
<b>Calculated Parameters</b>	Displays parameters used in the model which are calculated based on user input parameters.
<b>All</b>	Displays all model input data.
<b>All Errors</b>	Displays all errors in the model input data.
<b>Messages</b>	Displays the last 300 error messages that have occurred.

In addition to the summary of input data, all list windows provide information on the nPre version including the version date and the QA status, the date the listing window was created and the configuration file name.

For example, the following figure shows the list text window for the Current command, with the Configuration nPre input window active:

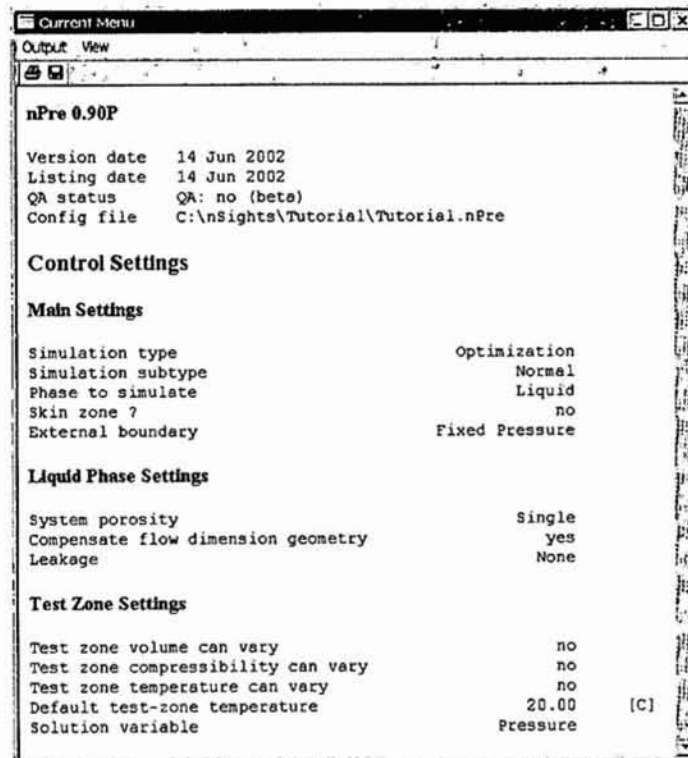


Figure 10. Current Command with active nPre Configuration Window

The text window has its own mini menu bar and toolbar, containing the following menus and commands:

#### Output

- |                      |   |
|----------------------|---|
| <b>Print</b>         | Presents the standard Windows print dialog.   |
| <b>Print Setup</b>   | Presents the standard Windows printer selection dialog. The default printer for plots is specified, as well as the basic page set-up. |
| <b>Print Preview</b> | Presents the standard Windows print preview screen. Select the Close button to return to the list window.                             |
| <b>Save As</b>       | Saves the data in the text window in a text file, with a default file extension of *.lst.   |

#### View

- |                 |  |
|-----------------|--|
| <b>Toolbar</b>  | Toggles the toolbar on and off.  |
| <b>Settings</b> | Currently unavailable.   |
| <b>Fonts</b>    | A second menu cascades containing commands to change the size of the text font, on a relative scale (smallest to largest). |

The toolbar contains two standard Windows buttons that shortcut to the **Output**→**Print** and the **Output**→**Save As** commands.

### 2.3.5.9 Auto Setup Menu

Since the setup of certain portions of the input data and plots are similar from test to test, the commands in the **Auto Setup** menu provide automatic generation of some input data and plots. There are three **Auto Setup** menu commands: **Field Data Plots**, **Sequence Plots**, **Basic Fits**. They are described in detail in Section 4.

### 2.3.5.10 Run Menu

The **Run** menu contains several commands to run the simulator:

- |                |  |
|----------------|--|
| <b>Minimal</b> | Executes a model run with minimal run time information. A small dialog displays the elapsed simulation run time and a progress bar for multiple case model runs. |
| <b>Verbose</b> | Executes a model run with maximum run time information. A dialog displays the information, including elapsed run time and  |

fitting parameter information.

**Covariance Only** For optimization mode, calculates the covariance matrix based on the current set of parameters, without conducting a simulation.

These three commands are described in detail in Section 5.

The **Minimize Main** command can be toggled on or off. Toggled on has the same effect as selecting the **Minimize** button in the run window. Upon selection of the **Minimize** button, the main menu, as well as the run window are minimized. Plot windows remain visible, in order to observe changes in the plots during the simulation.

### **2.3.6 Tool Bar**

The tool bar contains icons corresponding primarily to **File** and **Help** menu items. It is displayed below the object description area, and its presence is controlled in the **View** menu.

### **2.3.7 Object Description Area**

Displayed below the menu bar, the object description area provides information on the currently selected object or input window and tab (nPre only).

### **2.3.8 Message Line**

Below the nPre input window or the object property window is the message line. Error, warning, and information messages regarding nSIGHTS execution are displayed in this area.

### **2.3.9 Status Bar**

A standard Windows status bar at the bottom of the main window. nSIGHTS does not use the status bar except to display Shift and NumLock status and context sensitive help.

### **2.3.10 Window List Menu Window**





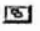

The window list menu window will appear if **F11** is pressed or if **Window list** is selected from the **Window** menu bar item:



Figure 11. Window List Menu Window

The **Window List** menu window contains a list of all currently defined nSIGHTS top-level windows. In addition to the main window, top-level windows include plots, list windows, and object controls. Selecting an item from the **Window list** menu will bring the associated window to the top of the window order.

The menu window also has a mini toolbar:

-  Selection (pressed-in) of the push-pin icon causes the **Window list** menu window to float above all other top-level menus.
-  Minimizes all plot windows.
-  Tiles horizontal all plot windows.
-  Tiles vertical all plot windows.
-  Cascades all plot windows.
-  Sets the **Window list** menu window as transparent.

## 2.4 Program Settings

Selecting **Settings** from the **View** menu bar item will cause the following **Settings** dialog to appear as shown in figure 12.

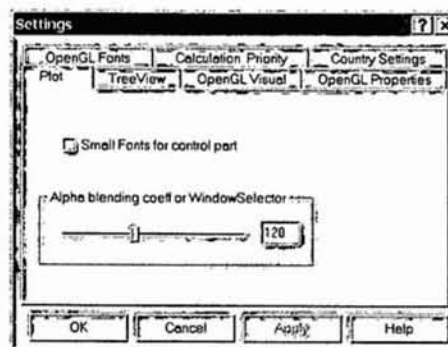




Figure 12. Program Settings Dialog Window

Settings available on the various tabs on this menu are saved in the system registry and will remain in effect until explicitly changed. They are not saved in nPre or nPost configuration files. Each tab on the menu is described in the following subsections.

### 2.4.1 Plot Tab

Controls the appearance of certain elements of plot windows.

Small fonts for control part

The size of font used in controls on the plot window.

**Alpha blending coeff for Window Selector** Controls the transparency of the Windows List menu window (see Section 2.3.10). Effect depends upon the operating system and graphics hardware.

### 2.4.2 TreeView

Controls how objects are represented in the object tree.

Single line for menu objects

If not checked, the text labels for objects in the tree are presented on two lines. Otherwise a single line is used.

**Show for single line**

Options for object identification used in text labels displayed in a single line.

ID

Only the object ID is displayed.

Type

The object type is shown.

Both

Object ID and type are both displayed.

### 2.4.3 OpenGL Visual

An *OpenGL Visual* describes the technical settings used for displaying 2D and 3D graphics in nSIGHTS. This menu has two formats. If a plot page has been created, the menu shows only the status of the visual as shown below in figure 13:

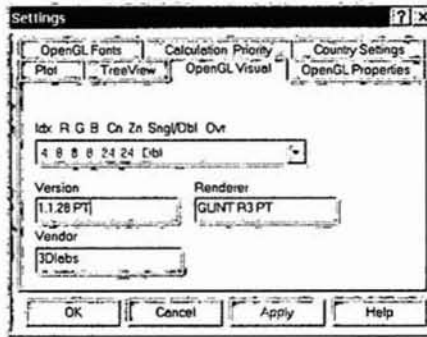


Figure 13. OpenGL Visual Menu

The first field gives the index, red, green, and blue color depth, the color planes and depth buffer depth and the buffering status. For effective use of nSIGHTS the following settings are recommended:

- |                  |  |
|------------------|--|
| <u>Idx</u>       | Index - n/a as it depends upon hardware.   |
| <u>R/G/B</u>     | Red/green/blue color depth - at least 5 is desirable, 8 is preferred.  |
| <u>Cn</u>        | Total color depth including alpha channel (not used in nSIGHTS currently) - will usually be 4 times color depth. |
| <u>Zn</u>        | Z or depth buffer depth - 32 bits is preferable, at least 16 is necessary.                                       |
| <u>Sngl/Db'l</u> | Single or double buffer - usually select double buffered visuals. Single buffered visuals may flicker.           |

The other fields in the dialog (Version, Renderer, and Vendor) displays additional information which may be useful for debugging display problems.

If a plot page has not been defined the menu appears with a selector box available (shown with drop-down-box):

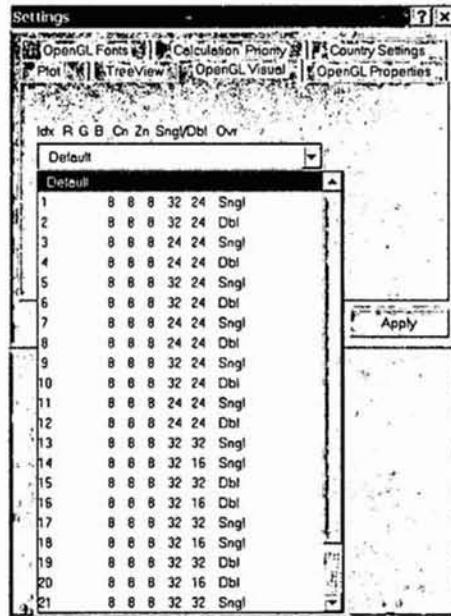


Figure 14. Settings Selector Box Menu

Note that the number of visuals available and their properties will depend upon your graphics card and drivers. The example shown above is for an Oxygen VX1 graphics card under Windows 2000. If *Default* is selected, nSIGHTS will attempt to pick an appropriate visual. Note that the selected visual may or may not use hardware acceleration and may or may not be appropriate for technical graphics. For example, many cards have some visuals optimized for games, which have different requirements (usually smaller Z buffer).

### 2.4.4 OpenGL Properties

Open GL Properties control the use of anti-aliased lines (which may or may not be supported on your graphics card and selected visual). Anti-aliased lines blend pixels so that lines appear smooth. Anti-aliased lines typically are slower to draw than normal lines.

Anti-alias 2D lines      If selected, lines on 2D plots are smoothed.

Anti-alias 3D lines      If selected, lines on 3D plots are smoothed.

### 2.4.5 OpenGL Fonts

Compensates for operating system bugs in vertical or rotated text drawn on 2D plots. Change this only if your displayed fonts have mirrored or distorted letters.

## **2.4.6 Calculation Priority**

Controls the priority of the simulation thread.

## **2.4.7 Country Settings**

International settings.

European real delimiters Replaces decimal place with comma in user-interface, real number display and I/O.

### 3 NPRe INPUT WINDOWS

The nPre input windows contain dialog prompts, object trees and corresponding object property window or tables to define the input for a model run. Different input windows are used as a means of organizing input data, and each window may be further organized into tabs. This section describes the different nPre input windows and their function, summarized in Table 4.1.

The nPre input windows are accessed by selecting a command from the nPre menu, or the nPre control bar. Not all input commands are accessible. Input commands, as well as tabs and dialog prompts, are hidden if they are not required for the current set of selected options. For example, the Optimization input window remains hidden unless *Optimization* is selected as the *Simulation Sub-Type* in the *Main* tab of the *Configuration* input window. A hidden command or tab is either faded and cannot be selected, or completely hidden from view.

<b>Table 4.1: Summary of nPre Input Windows and Functions</b>	
<b>Input Windows and Tabs</b>	<b>Function</b>
<b>Configuration</b>	Defines model function and general options for the model run.
Main	Sets basic model options, such as simulation mode.
Curve Files	Loads XY files containing time-variable boundary conditions, and pressure- or radius-variable parameters.
Liquid	Options specific to liquid phase simulations.
Gas	Options specific to gas phase simulations.
Matrix	Options specific to the matrix of dual porosity systems.
Default Units	Sets default units for the model run.
Test Description	Documentation of the model run.
<b>Field Data</b>	Object tree to create constraints and diagnostic plots from field data.
<b>Sequence</b>	Sequence definition. Sequences are discrete time intervals representing a set of well-bore boundary conditions.
Time-Base	Options for defining sequences.
Sequences	Defines the sequences.
Process/Plot	Object tree to create simulated data sets that correspond with the field data constraints defined in the <b>Field Data</b> tab and to create simulated data diagnostic plots.
TZ Curves	Associates curve files (time variable boundary conditions) with sequences.
Dynamic Time Step	Controls for automatic adjustment of the time step during simulations.
Partial Run	Controls to simulate only a subset of the defined sequences.
<b>Parameter</b>	Establishes fitting and non-fitting parameters, and defines these parameter values, ranges or distributions. Note that parameter functions that vary with pressure or radius are defined in the <b>f(p)/f(r) Points Parameter</b> input window.
Formation	Formation parameters.
Fracture	Fracture parameters, only for dual porosity systems.
Matrix	Matrix parameters, only for dual porosity systems.
Fluid	Fluid parameters, only for liquid phase simulations.
Gas	Gas parameters, only for gas phase simulations.
Leaky Layer	Leaky layer parameters, only for single leakage systems.
Upper Leaky Layer	Upper leaky layer parameters, only for upper/lower leakage systems.

Lower Leaky Layer	Lower leaky layer parameters, only for upper/lower leakage systems.
Skin Zone	Skin zone parameters, only for simulations with a skin zone.
Test-Zone	Test-zone parameters.
Numeric	Numeric parameters.
<b>f(p)/f(r) Points Parameter</b>	Defines parameter functions that vary with pressure or radius. Only accessible if parameters are defined as points functions in the <b>Parameter</b> input window.
Points Entry	Enter XY points to define the function.
Interpolation	Defines an interpolation function for the XY points.
Units/Transform	The units and transforms of the XY points.
Optimization	Controls for the optimization of points defining the parameter function. Optimization mode only.
<b>Simulation Output</b>	Defines the output to be calculated by the model.
Main	Defines the output to be calculated by the model.
Production Restart	Restarts production integration at specified times (for production output).
Superposition	Only for pressure superposition output type, the <b>Superposition</b> tab provides a table to input radii at which pressures will be summed, and related options.
<b>Fit Specification</b>	Field and simulated data are paired for regression analysis. The pairing of field and simulated data indicates the field data to which the regression model should fit simulation results. Only for optimization modes or forward-range mode.
Fit Specification/ Graphics	Pairs field and simulated data.
Fit Selection	Determines which data pairs are to be used by the model.
<b>Optimization</b>	Optimization solver options. Only for optimization modes.
Main	Selection of algorithm, and general options.
Tolerances	Options for optimizer tolerances.
L-M Algorithm	Options for the Levenburg-Marquardt algorithm.
Simplex Algorithm	Options for the downhill simplex algorithm.
Perturbation	Initiates perturbation mode. Only for optimization-normal mode.
<b>Sampling</b>	Sets up the sampling of a parameter. The parameters to be sampled are defined in the <b>Parameter</b> or <b>Sequence</b> input windows. Only accessible for sampling modes.
Main	Selection of sampling options, such as the sampling procedure and the number of times a parameter is to be sampled.
Correlations	The simulation program will force the correlation between two parameters to the correlation values specified in this tab.
Samples	Provides a table of the sampled values to be used by the model.
Graphics	An object tree for the visualization of sample data.
<b>Suite/Range</b>	Determines the priority of suite or range parameters. Not accessible for sampling modes.
Priority	Sets the priority of suite or range parameters.
<b>Output File Setup</b>	Defines model output files.
XY Data	Determines which XY.array data to output to a file. All modes except range modes.
Profile	Creates a profile output file, which outputs a grid of pressure as a function of time (X axis) and radius (Y axis). Only for forward-normal modes.
Range	Creates a range output file, which contains grid (2 range variables) or cube (3 range variables) data of residuals (between simulation and field data). Only for range modes.

Optimization	Creates a file containing fit results. May also include residuals, covariance matrices, and Jacobian data. Only for optimization-normal and optimization-sampling modes.
Processing Setup	Object tree to create plots to monitor the real-time progress of the model.

### 3.1 Configuration Input Window

The configuration input window defines the basic options of the model, which define the type of simulation to occur, the model's general physical configuration, and the types of parameters that will be used to describe the physical configuration.

#### 3.1.1 Main Tab

Defines the basic options of the model, and its basic physical configuration, as shown in figure 15:

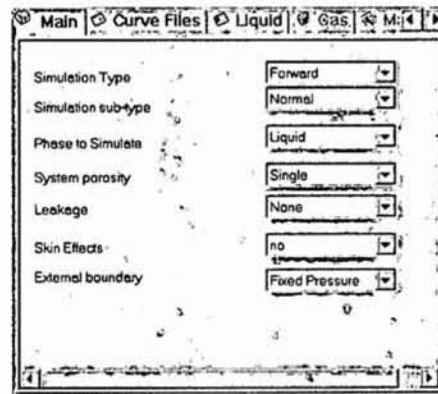


Figure 15. Configuration Main Tab Window

#### Simulation Type

- Forward* The model simulates a hydraulic test response based on user input.
- Optimization* The model adjusts the values of user-specified parameters to obtain an optimal fit to field data.

#### Simulation sub-type

Simulation sub-types *Normal*, *Range* or *Sampling* are accessible for both *Forward* and *Optimization* simulation types, resulting in six possible simulation modes.

- Forward–Normal* The simulation is based on user-input parameter values.
- Forward–Range* A range of values and the number of intervals per range is



assigned to two or three input parameters. (Note that input parameters may include sequence data, such as flow rate or pressure boundary conditions.) Forward simulations are performed for each combination of range variables. For each simulation, a fit metric is calculated based on a comparison of simulated results with a user-defined constraint. A map of all these fit metrics, also called parameter-space maps or fit surfaces, is used to determine the optimal fitting-parameter combination.

- Forward-Sampling*      Uncertainty ranges and distributions are assigned to input parameters of interest. (Note that input parameters may include sequence data, such as flow rate or pressure boundary conditions.) The input parameter distributions are sampled a specified number of times, and a forward simulation is produced for each sample set.
- Optimization-Normal*      A number of simulations are conducted, in which user-specified parameters (fitting parameters) are adjusted for each simulation to obtain an optimal fit between simulated results and field data.
- Optimization-Range*      Two or three input parameters are specified with a range of values, and additional parameters are specified as fitting parameters. For each combination of range variables, optimization simulations are conducted (i.e. the fitting parameters are adjusted for each simulation to obtain an optimal fit). For each simulation, a fit metric is calculated in addition to optimization results.
- Optimization-Sampling*      Used to investigate the correlation between fitting and non-fitting parameters. Uncertainty distributions are assigned to non-fitting parameters of interest, and fitting parameters are defined. The non-fitting parameter distributions are sampled a specified number of times, and for each sample set of non-fitting parameters, optimization simulations are conducted (i.e. the fitting parameters are adjusted for each simulation to obtain an optimal fit).

Phase to Simulate

*Liquid*      Indicates that a liquid phase simulation will be conducted.

*Gas*      Indicates that a gas phase simulation will be conducted.

System porosity


For liquid simulations only.



<i>Single</i>	The model only considers one component of the media: the formation.
<i>Dual</i>	The model considers two components of a fractured medium: the fracture and the matrix. Parameters need to be specified for each component.
<u>Leakage</u>	For liquid simulations only.
<i>None</i>	The aquifer is assumed to be confined; there are no leaky layers above or below the model system.
<i>Single</i>	A single leaky layer above the model system.
<i>Upper/Lower</i>	Layers above and below the model system are leaky.
<u>Skin Effects</u>	If <i>yes</i> , a zone surrounding the well-bore is differentiated from the formation, for which characteristic parameters need to be defined.
<u>External Boundary</u>	Specified external radius is either at <i>Fixed Pressure</i> or <i>Zero Flow</i> .

### 3.1.2 Curve Files Tab

The Curve Files tab allows the user to load *curve files* to be used as well-bore boundary conditions or parameter functions. Curve files are XY data sets which describe time-varying boundary conditions or parameters which vary as a function of pressure ( $f(P)$ ) or a function of radius ( $f(r)$ ). Each file may contain one or more data sets, each provided with its own *Curve ID*.

Three types of curve files can be loaded within this tab: Well-bore boundary conditions,  $f(P)$  parameters and  $f(r)$  parameters. To load each file, type the file name in the corresponding text box or use the browse button () and then select the Reload Curves button at the bottom of the dialog. The default file extension for curve files is \*.nCRV, but a file of any extension may be loaded, as long as the file is in the correct format.

The files loaded in this tab will be accessed in different input window and tabs as required, as described in Table 4.2.

Curve File Type	Location of Use
Well-bore boundary conditions	TZ Curves tab in the Sequence input window
$f(P)$ parameters	Parameter input window
$f(r)$ parameters	Parameter input window

### 3.1.3 Liquid Tab

The Liquid tab is only accessible if *Liquid* was selected as the Phase to Simulate in the Main tab.

#### Permeability/hydraulic conductivity

*Hydraulic Conductivity* can be entered directly, or calculated from *Permeability*. Values for conductivity or permeability are entered in the Parameter input window.

#### Storage Parameter

##### *Specific Storage*

Specific storage is entered directly as a parameter in the Parameter input window.

##### *Porosity\*Total Compressibility*

Specific storage is calculated from porosity and compressibility, which are entered in the Parameter input window.

#### Compensate flow dimension geometry

Compensation is used in two cases:

- (1) for flow geometries that vary with radius
- (2) for flow geometries which would incorrectly calculate the area at the borehole. For example, a spherical flow geometry ( $n=3$ ) would incorrectly calculate the area of a cylindrical borehole.

#### Test zone volume

For *varying* test zone volumes, curve files (volume of test zone vs. time) are required to describe the boundary conditions of pulse or flow sequences with isolated well-bore storage.

#### Test zone compressibility

For *varying* test zone compressibility, curve files (test zone compressibility vs. time) are required to describe the boundary conditions of pulse or flow sequences with isolated well-bore storage.

#### Test zone temperature

For *varying* test zone temperature, curve files (temperature vs. time) are required to describe the boundary conditions of pulse sequences with non-isothermal test zone thermal conditions.

Default temperature The default temperature is entered in the text input box, with the temperature units, either degrees Celsius (C) or degrees Fahrenheit (F), specified in the drop-down-box.

Solution variable *Pressure or Head*

Default liquid density Hidden unless *Head* is selected as the Solution Variable. The default liquid density is entered in the text input box, with the liquid density units (kg/m<sup>3</sup>, g/cm<sup>3</sup>, lb/ft<sup>3</sup> or lb/in<sup>3</sup>) specified in the drop-down-box.

### 3.1.4 Gas Tab

The Gas tab is only accessible if *Gas* was selected as the Phase to Simulate in the Main tab.

Klinkenburg effects If *yes*, the effect of gas slippage on permeability (Klinkenburg effects) is calculated, requiring the parameter ***Formation Klinkenburg factor***.

Viscosity as f(P) Allows the definition of a simple function of pressure, based on a ***Gas viscosity slope factor*** parameter, where viscosity = ***Gas viscosity*** parameter + ***Gas viscosity slope factor*** parameter \* Pressure. Complex functions of pressure are created using various parameter Types available in the Parameter input window (see Section 3.4).

Gas flow solution variable *Mass flow or Volume@STP*. STP stands for Standard Temperature and Pressure.

STP temperature Only required if *Volume@STP* is selected as the Gas flow solution variable. The STP temperature is entered in the text input box, either in degrees Celsius (C) or degrees Fahrenheit (F), specified in the drop-down-box.

STP pressure Only required if *Volume@STP* is selected as the Gas flow solution variable. The STP pressure is entered in the text input box, either in kPa, MPa, psi or bar, specified in the drop-down-box.

### 3.1.5 Matrix Tab

The Matrix tab is only accessible if *Dual* is selected as the System porosity in the Main tab.

<u>Matrix Geometry</u>	The geometric relationship of the matrix and fracture.
<i>Spherical</i>	The matrix is composed of spheres separated by fractures.
<i>Prismatic</i>	The matrix is composed of rectangular slabs separated by fractures.
<u>Alpha</u>	A shape factor used in the equation to relate the matrix and fracture permeabilities.
<i>Entered</i>	The shape factor is entered using the <i>Geometry Factor (Alpha)</i> parameter.
<i>Calculated</i>	The shape factor is calculated based on the <i>Matrix sphere diameter</i> parameter for spherical matrix geometries, and on the <i>Slab matrix block thickness</i> parameter for prismatic matrix geometries.

### 3.1.6 Default Units Tab

The units that appear within all other nPre input windows will correspond to the units specified in the Default Units tab, unless the units are specified directly in the input window. The units for each variable are selected from a drop-down list.

### 3.1.7 Test Description Tab

The Test Description tab contains a text input box to allow the user to document the test to be simulated. In practice, it is a good idea to document all tests, as details of a test are forgotten with time.

## 3.2 Field Data Input Window

Field data are used by nPre to create model constraints and diagnostic plots. The field data input window contains an object tree, and its corresponding object property window, where users can load, view and manipulate field data.

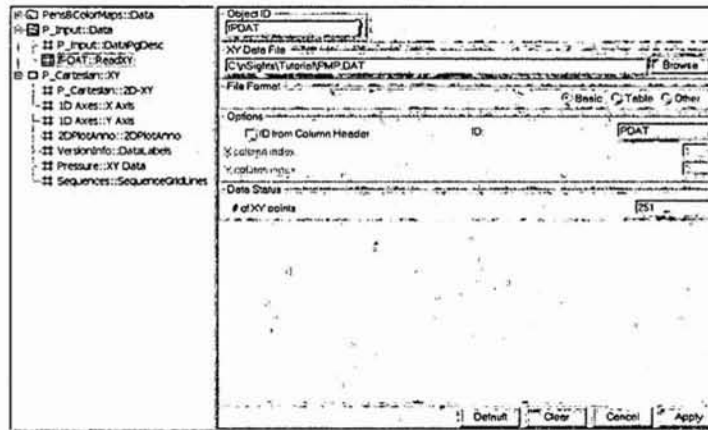


Figure 16. Field Data Input Window

The Auto Setup→Field Data Plots command (see Section 4.1) is used to automatically create objects to read/process field data and to create default cartesian plots.

### 3.3 Sequence Input Window

Sequences are discrete time intervals that divide a testing period, with one sequence representing a continuous period of consistent well-bore boundary conditions. A series of sequences allows nPre to consider the cumulative effect of changing well-bore boundary conditions as well as consecutive well tests. An unlimited number of sequences may be specified.

There are four types of sequences, each representing a different type of well-bore boundary condition:

**History sequence** – Time periods during which borehole pressures or heads are specified as constant or variable in time since the start of the sequence. History sequences are used to represent:

1. the time period between drilling and initial shut-in of the test zone
2. time periods where external factors, such as changes in packer pressures, affect test-zone pressures
3. constant-pressure flow tests

**Flow sequence** – Time periods during which water is injected or withdrawn from a well. Flow rates can be constant or variable in time since the start of the sequence. For highly variable flow rates, a curve file for a single flow sequence is used. For stepped flow rates, multiple flow sequences with constant flow rates are used. A zero-flow-rate flow sequence is used to represent:

1. the recovery period following a pumping test
2. time periods immediately after test zones are shut in for the first time
3. pressure recovery under shut-in conditions following constant pressure flow tests (allows test-zone compressibility to be specified as a fitting parameter).

**Pulse sequence** – Time periods during which a test zone is shut in and pressures in the test zone and the surrounding formation are equilibrating. The initial pressure is specified, and isolated zone well-bore storage is assumed. Pulse sequences are used to represent pressure recovery periods following individual pulse injections or pulse withdrawals.

**Slug sequence** – Time periods during which the injection or withdrawal of a slug of water from an open well causes changes in well (or tubing string) water levels. The initial pressure is specified, and open hole (open tubing string) well-bore storage is assumed. For liquid simulations only.

For history and flow sequences, well-bore storage may also be incorporated into the boundary conditions. Two types of well-bore storage are available:

**Open Hole** – A tubing string of constant diameter filled with liquid is assumed to be connected to the test-zone. For liquid phase simulations only.

**Isolated** – The test-zone is filled with a compressible liquid or gas.

### 3.3.1 Time-Base Tab

This tab determines the time-based options for defining sequences:

Sequence time entry

In *Duration* mode, the duration of each sequence will need to be entered as input in the Sequences tab table. In *Start Time* mode, only the start time of each test sequence will need to be entered. For a complex series of sequences, *Start Time* mode will generally be simpler, as duration times do not need to be calculated for every sequence.

Start time of first sequence

The start time of the first sequence needs to be specified for both *Duration* and *Start Time* mode. Note that if the time is input before the units are changed, the time will be converted to the new units.

End time of last sequence

The end time of the last sequence only needs to be specified for *Start Time* mode. Note that if the time is input before the units are changed, the time will be converted to the new units.

### 3.3.2 Sequences Tab

The Sequences tab contains a table to describe the sequence type, designation and time period. The format of the table will change depending on selection of duration or start time mode in the Time-Base tab.

Sequences should be entered in chronological order. Table rows are inserted, deleted or duplicated using the commands in the pop-up menus (right click of the mouse).

Type Double click on a Type cell to select one of the available sequence types from a drop-down list: *Flow, History, Pulse, Slug*. The different types of sequences are described in detail in Section 3.3.

Designation Name of the sequence. It is used by objects that load, manipulate and plot the sequence data. The default naming convention consists of the first letter of the sequence type, followed by the order number for sequences of that type. For example, the first flow sequence will have a default name of F\_01, and the second flow sequence will have a default name of F\_02.

Duration [time units]

OR

Start Time [time units]

For duration mode, the duration time is entered in the cell, and correspondingly, for start time mode, the start time is entered in the cell. Note that if the time is input before the units are changed, the time will be converted to the new units. [time units] in the table heading are specified in Configuration→Default Units.

Units

The time units are changed for one sequence by double-clicking on the corresponding cell and selecting the desired units from the drop-down list.

Sequence Data

Double click on the cell, and a Sequence Setup Dialog will appear, requiring time step and sequence type specific information. See Section 3.3.2.1 for a detailed description of this dialog.

Duration [time units]

OR

Start Time [time units]

For duration mode, Start Time is the table heading, and correspondingly, for start time mode, Duration is the table heading. It is automatically calculated, based on the row above, once the Duration cell (duration mode) or the Start Time cell (start time mode) is entered. If the time information of the row above is changed, this value will only be



recalculated if the Duration (duration mode) or the Start Time (start time mode) is re-entered.

Auto

A check marked box indicates that the sequence will be included in auto setup of diagnostic plots (i.e. Auto Setup→Sequence Plots).

### 3.3.2.1 Sequence Set-up Dialog

The Sequence Set-Up Dialog (Sequences tab) provides defining details to sequences. It is sequence type dependent – each sequence type has its own Sequence Set-Up Dialog. The following example, figure 17, is for a flow sequence.



Figure 17. Flow Sequence Set-Up Dialog Screen

The first six dialog prompts of the dialog are common to all sequence types. The availability of these prompts is dependent on the Time step type, either *Static*, *Log*, *Dynamic P* or *Dynamic Q*.

The remaining dialog prompts are specific for each sequence type, and specify the boundary conditions for each sequence type.

For flow and history sequences, the magnitude of the boundary condition is specified in one of three ways:

*Fixed* Fixed values are specified in the Fixed flow or Fixed pressure text boxes.

*Range* A range of values is specified in the Range Variable Dialog box that appears upon selecting the Sampling/vary data text box.

*Curve* Pressure or flow values are described in a curve file. Curve files associated with the sequence are identified in the TZ Curves tab.



The type of well-bore storage is also specified for flow and history sequences.

For pulse and slug sequences, the initial pressure is specified, or determined relative to pressures in previous sequences. The initial or offset pressures are entered in the Pulse pressure or Slug pressure text boxes.

<i>Absolute</i>	Absolute. The initial pressure is specified.
<i>Tubing String Rel.</i>	Relative to the pressure in the tubing string at the end of the last sequence that affected tubing string water levels. A pressure offset is specified, that will be added to the tubing string relative pressure.
<i>Sequence Relative</i>	Relative to the pressure at the end of the previous sequence. A pressure offset is specified that will be added to the sequence relative pressure.

Test zone thermal conditions are also specified for pulse sequences.

### 3.3.3 Process/Plot Tab

The **Process/Plot** tab window is used to create diagnostic plots of pressure and flow-rate data. The window contains an object tree, and corresponding object property window, where users can load, view and manipulate data.

Objects and plots of data can be created automatically by the **Auto Setup**→**Sequence Plots** (see Section 4.2) after all sequences are specified. Note that the objects and plots of simulated data can be created before the simulation has been conducted. Error messages will appear on the message line, for example “XY data set is empty”. As the simulation is being conducted, the data sets are automatically updated.

### 3.3.4 TZ Curves Tab

The **TZ Curves** tab contains a table to associate sequences with curves from curve files loaded in the **Curve Files** tab of the **Configuration** input window. The curve data describe the data-type (e.g. flow) as it changes with time, and consequently the data should have time as the X data, and the data-type for the Y data. The X and/or the Y data may be transformed by log 10.

Table rows are inserted, deleted or duplicated using the commands in the pop-up menus (right click of the mouse).

<u>Type</u>	The curves file type is dependent on the type of sequence it relates to:
-------------	--

<i>Flow</i>	for flow sequences
<i>Pressure</i>	for history sequences
<i>Volume Change</i>	for history, flow or pulse sequences with isolated well-bore storage
<i>Volume</i>	for history, flow or pulse sequences with isolated well-bore storage
<i>Compressibility</i>	for history, flow or pulse sequences with isolated well-bore storage
<i>Temperature</i>	for pulse sequences with non-isothermal test zone thermal conditions

Curve ID A drop-down list providing the available curve data from the curve file loaded as Well-bore boundary conditions in the Curve Files tab of the Configuration input window.

Start Sequence  
End Sequence The starting and ending sequences are selected from drop-down lists that contain the sequences defined in the Sequences tab. The curve file may span several sequences. The sequence type of the sequences selected must correspond with the curve file type.

Curve Data Double click on the cell, and a TZ Curve Setup Dialog will appear, as shown in figure 18.

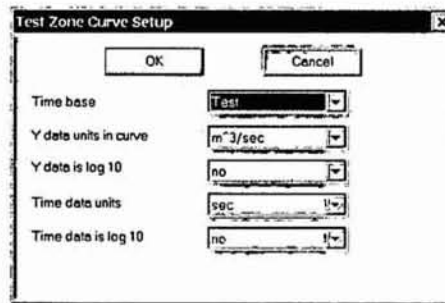


Figure 18. Test Zone Curve Setup Window

<u>Time Base</u>	Determines where time zero begins for the curve data.
<i>Test</i>	Curve time is consistent with test time.
<i>Sequence</i>	Time zero is at the beginning of the sequence.
<u>Y data units in curve</u>	Units of the Y data (e.g. flow).
<u>Y data are log 10</u>	yes if the Y data are log 10 transformed.
<u>Time data units</u>	For <i>Sequence</i> time bases, units of the Y data (e.g. flow). For <i>Test</i> time bases, the units are assumed to be the same as

those defined for the Start time of first sequence in the Time-Base tab.

Time data are log 10

For *Sequence* time bases, *yes* if the X data are log 10 transformed. For *Test* time bases, the time data cannot be log 10 transformed.

### 3.3.5 Dynamic Time Step Tab

The time step for each sequence is discretized in the Sequences tab, specifically within the Sequence Set-up Dialog. However, the time step may be automatically adjusted as a function of the pressure change in the well for history, pulse and slug sequences, or the flow rate change in the formation for flow sequences.

The Dynamic Time Step tab contains the controls for the automatic adjustment of the time step. Based on maximum and minimum values, the time step is decreased if the pressure or flow change is greater than the specified maximum change, and correspondingly, the time step is increased if the pressure or flow change is less than the specified minimum change.

The Max # of TS in dynamic sequence dialog prompt controls the maximum number of time steps that will occur in any one dynamic sequence. The maximum number of time steps is used for memory allocation only and should not be changed unless run-time errors occur.

### 3.3.6 Partial Run Tab

A subset of the defined sequences can be simulated, according to the controls on the Partial Run tab.

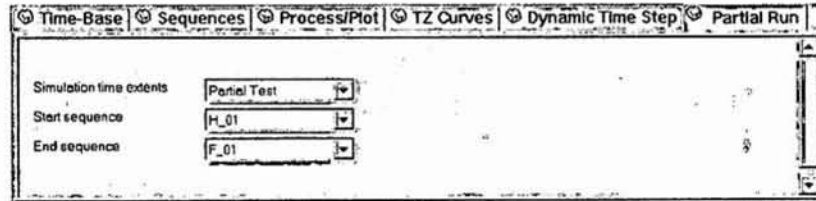


Figure 19. Partial Run Tab

For a partial run, select *Partial Test* for the Simulation time extents. The partial run is defined by starting and ending sequences, selected from drop-down lists that contain the sequences defined in the Sequences tab.

## 3.4 Parameter Input Window

Non-fitting and fitting parameters, including their value, range or uncertainty distribution,

are defined in the **Parameter** input window.

The parameter window is divided into tabs as a means of organizing the parameter list. The list of tabs and possible parameters in each tab varies depending on the model's configuration. Table 3.1 summarizes all the parameters, and the model configuration under which the parameter is available.

<b>Table 3.1: Model Parameter Summary</b>	
<b>Parameter</b>	<b>Notes</b>
<b>Formation Tab</b>	
Formation Thickness	Always required.
Flow dimension	Always required. Refers to the geometry of the flow system. For radial systems, the flow dimension value is 2.
Static formation pressure	Always required. Units vary depending on <u>Head Solution</u> variable ( <b>Configuration</b> → <b>Liquid</b> ): pressure units or length units.
External boundary radius	Always required.
Formation conductivity	Required for single porosity systems if hydraulic conductivity is to be entered directly.
Formation permeability	Required for single porosity systems if hydraulic conductivity is calculated from permeability.
Formation spec. storage	Specific storage. Required for single porosity systems if specific storage is to be specified directly.
Formation porosity	Required for single porosity systems if specific storage is calculated from porosity and compressibility.
Formation compressibility	Required for single porosity systems if specific storage is to be calculated from porosity and compressibility.
Formation klinkenberg factor	Required for gas phase simulations where Klinkenberg effects are considered.
<b>Fracture – For dual porosity systems only.</b>	
Fracture conductivity	Required if hydraulic conductivity is to be entered directly.
Fracture permeability	Required if hydraulic conductivity is calculated from permeability.
Fracture spec. storage	Specific storage. Required if specific storage to be specified directly.
Porosity within fracture	Required if specific storage is calculated from porosity and compressibility.
Fracture compressibility	Required if specific storage is calculated from porosity and compressibility.
<b>Matrix – For dual porosity systems only.</b>	
Matrix volume factor	Always required for dual porosity systems.
Geometry factor (Alpha)	Required if the geometry factor is to be entered directly.
Matrix sphere diameter	Required for spherical matrix geometry, if the geometry factor is to be calculated.
Slab matrix block thickness	Required for prismatic matrix geometry, if the geometry factor is to be calculated.
Matrix conductivity	Required if hydraulic conductivity is to be entered directly.
Matrix permeability	Required if hydraulic conductivity is calculated from permeability.
Matrix spec. storage	Specific storage. Required if specific storage to be specified directly.
Matrix porosity	Required if specific storage is calculated from porosity and compressibility.
Matrix compressibility	Required if specific storage is calculated from porosity and compressibility.
<b>Skin zone – Only if skin zone specified.</b>	
Radial thickness of skin	Always required if skin zone specified.

Skin zone conductivity	Required if hydraulic conductivity is to be entered directly.
Skin zone permeability	Required if hydraulic conductivity is calculated from permeability.
Skin zone spec. storage	Specific storage. Required if specific storage to be specified directly.
Skin zone porosity	Required if specific storage is calculated from porosity and compressibility.
Skin zone compressibility	Required if specific storage is calculated from porosity and compressibility.
<b>Fluid – For liquid phase simulations only.</b>	
Fluid Density	Always required for liquid phase simulations.
Fluid thermal exp. coeff.	Fluid thermal expansion coefficient. Only used by non-isothermal pulse tests.
<b>Gas – For gas phase simulations only.</b>	
Atmospheric pressure[abs]	Always required for gas phase simulations.
Gas viscosity	Always required for gas phase simulations.
Gas viscosity slope factor	Required if viscosity is considered as a simple function of pressure ( <b>Configuration</b> → <b>Gas</b> → <b>Viscosity as f(P)</b> ).
Molecular weight	Required if mass flow is the solution variable ( <b>Configuration</b> → <b>Gas</b> → <b>Gas flow solution variable</b> ).
Reference temperature	Always required for gas phase simulations.
<b>Test-zone</b>	
Well radius	Always required.
Test-zone compressibility	Required for liquid phase simulations if isolated well-bore storage or if a pulse sequence is defined.
Volume change from normal	Refers to the volume of equipment in the borehole, i.e. volume of test interval not occupied by fluid. Required for gas phase simulations, or liquid phase simulations if isolated well-bore storage or if a pulse sequence is defined.
Tubing string radius	Required if a slug sequence is defined.
<b>Leaky layer – For single leakage systems only.</b>	
Leaky layer thickness	Always required for single leakage systems.
Leaky conductivity	Required if hydraulic conductivity is to be entered directly.
Leaky permeability	Required if hydraulic conductivity is calculated from permeability.
Leaky spec. storage	Specific storage. Required if specific storage to be specified directly.
Leaky porosity	Required if specific storage is calculated from porosity and compressibility.
Leaky compressibility	Required if specific storage is calculated from porosity and compressibility.
<b>Upper leaky layer – For upper/lower leakage systems only.</b>	
Upper leaky layer thickness	Always required for upper/lower leakage systems.
Upper leaky conductivity	Required if hydraulic conductivity is to be entered directly.
Upper leaky permeability	Required if hydraulic conductivity is calculated from permeability.
Upper leaky spec. storage	Specific storage. Required if specific storage to be specified directly.
Upper leaky porosity	Required if specific storage is calculated from porosity and compressibility.
Upper leaky compressibility	Required if specific storage is calculated from porosity and compressibility.
<b>Lower leaky layer – For upper/lower leakage systems only.</b>	
Lower leaky layer thickness	Always required for upper/lower leakage systems.
Lower leaky conductivity	Required if hydraulic conductivity is to be entered directly.
Lower leaky permeability	Required if hydraulic conductivity is calculated from permeability.
Lower leaky spec. storage	Specific storage. Required if specific storage to be specified directly.
Lower leaky porosity	Required if specific storage is calculated from porosity and compressibility.



Lower leaky compressibility	Required if specific storage is calculated from porosity and compressibility.
<b>Numeric Tab</b>	
# of radial nodes	Always required.
Pressure solution tolerance	Required for non-linear solutions. Non-linear solutions are required for gas flow simulations or if parameters are defined as functions of pressure.
STP flow solution tolerance	Required for non-linear solutions. Non-linear solutions are required for gas flow simulations or if parameters are defined as functions of pressure.
# of matrix nodes	Required for dual porosity systems.
# of leaky nodes	Required for leakage systems.
# of skin nodes	Required if skin effects are considered.

All the tabs in the **Parameter** input window contain tables, listing the parameter Name, Type, Value and Units. Table column widths can be adjusted if necessary, by placing the cursor on the column title edge until the mouse changes to a double arrow, and then drag, or by double clicking on the column title, which automatically re-sizes the column.

<u>Name</u>	The parameter name, as listed in Table 3.1.
<u>Type</u>	Determines the treatment of the variable by the model. The available types are selected from a drop-down list accessed by double-clicking on the corresponding table cell.
<i>Constant</i>	Indicates a non-fitting parameter.
<i>Suite</i>	Only available for modes other than range mode. Several values for the parameter are specified, to a maximum of nine values. A simulation will be conducted for each value of the parameter. A maximum of three parameters can be defined as type <i>Suite</i> , the priority of each parameter defined in the <i>Suite/Range</i> input window.
<i>Range</i>	Only accessible in range mode, a range of values is defined for the parameter. A maximum of three parameters can be defined as type <i>Range</i> , the priority of each parameter defined in the <i>Suite/Range</i> input window. It is similar to <i>Suite</i> type, except for the simulation mode (i.e. normal mode vs. range mode), and the number of real values that can be defined in the range (up to 1000).
<i>Optimize</i>	Only accessible in optimization mode, it indicates a fitting parameter.
<i>Sample</i>	Only accessible in sampling mode, it is a parameter for which a sample is taken from a defined distribution.
<i>f(P) Points</i>	Parameter is defined as a function of pressure. The parameter function is described in the <i>f(p)/f(r) Points</i> Parameter input window.

Note that parameters cannot be defined as a function of pressure in dual porosity or leaky systems.

<i>f(P) File</i>	Parameter is defined as a function of pressure. The parameter function is described in a curve file, which is loaded as an <u>f(P) parameters</u> file within the Curve Files tab of the Configuration input window. Note that parameters cannot be defined as a function of pressure in dual porosity or leaky systems.
<i>f(r) Points</i>	Parameter is defined as a function of radius. The parameter function is described in the f(p)/f(r) Points Parameter input window.
<i>f(r) File</i>	Parameter is defined as a function of radius. The parameter function is described in a curve file, which is loaded as an <u>f(r) parameters</u> file within the Curve Files tab of the Configuration input window.
<u>Value</u>	For constant parameters, the value is simply input into the corresponding cell. For non-constant parameters (except f(P) or f(r) points), double click on the corresponding cell to open the Value Dialog specific to the parameter <u>Type</u> (see Section 3.4.1). For parameters of type f(P) or f(r) points, the values are entered in the f(p)/f(r) Points Parameter input window. If the value input is incomplete, the parameter <u>Value</u> cell will display <b>BAD</b> . Before inserting a value, change the <u>Units</u> to the units of the value to be input.
<u>Units</u>	Changed by double-clicking on the table cell, which activates a drop-down list. Units are as specified on the Configuration→Default Units tab until they are explicitly overridden by the user. Note that if the <u>Value</u> is set before the <u>Units</u> are changed, the <u>Value</u> will be converted to the new Units.

### 3.4.1 Value Dialog

The Value Dialog depends on the parameter Type. The dialog for each parameter type is described in Table 3.2.

Parameter Type	Required Inputs
Suite	The dialog contains a table, into which suite values are entered, to a maximum of nine values.
Range	The range of values is defined by specifying the minimum, maximum, and number of steps between the minimum and maximum values. Stepping is linear or logarithmic.

Optimize	The range of possible values is defined by the minimum and maximum, and the optimization begins with a parameter value set at the best estimate value. The value stepping to find the next estimate may be linear or logarithmic. The estimate of the standard deviation is required to calculate Jacobian data, and is used to calculate the estimated covariance matrix.
Sample	The distribution of values is set as Normal, Log-Normal, Uniform, Log-Uniform, Triangular, or Log-Triangular. The distribution characteristics are also required, such as the mean and standard deviation for a normal distribution.
f(P)File/f(r) File	The curve to be used is specified by the curve ID. A drop-down list will specify the curve IDs available from the parameter curve files loaded in the <b>Curve Files</b> tab of the <b>Configuration</b> input window. The curve data should have pressure (f(P)) or distance from the borehole (f(r)) as the X data, and the corresponding dependent variable as the Y data. The X and/or the Y data in the curve file may be transformed into log 10. The X and Y variable units are also specified in this dialog.

Note that for the parameter type *f(P) Point* and *f(r) Points*, the values are entered in the *f(p)/f(r) Points Parameter* input window.

### 3.5 f(p)/f(r) Points Parameter Input Window

Defines a parameter function for parameters that vary with pressure or radius (distance). Only accessible if a parameter in the **Parameter** input window is specified as type *f(p) Points* or *f(r) Points*. It provides the same options available for parameter curve files.

The input window will contain a tab for each parameter defined as *f(p) Points* or *f(r) Points* type in the **Parameter** input window. Each tab contains at least three tabs: **Point Entry**, **Interpolation** and **Units/Transform**. In optimization mode, there is an additional **Optimization** tab.

#### 3.5.1 Point Entry Tab

The X and Y parameters are entered into a table that varies depending on whether the simulation mode is forward or optimization. In either simulation mode, X data will be radius or pressure, depending whether the parameter was defined as a function of radius or pressure, and Y data will be the dependent variable values.

In the following example of the **Point Entry** tab, formation conductivity was set as a function of radius (forward mode):



	XType	Radius [m]	YType	K_fm [m/sec]
1	Fixed	1.0	Suite	3 vals
2	Fixed	2.0	Fixed	1.00000E-09
3	---	---	---	---
4	---	---	---	---
5	---	---	---	---
6	---	---	---	---
7	---	---	---	---
8	---	---	---	---
9	---	---	---	---
10	---	---	---	---
11	---	---	---	---
12	---	---	---	---
13	---	---	---	---
14	---	---	---	---
15	---	---	---	---

Figure 20. Point Entry Tab

In optimization mode, there are two additional columns in the Point Entry tab, OptMin and OptMax, as shown in the following example:

	XType	Radius [m]	OptMin	OptMax	YType	K_fm [m/sec]
1	Fixed	1.0	n/a	n/a	Suite	3 vals
2	Fixed	2.0	n/a	n/a	Fixed	1.00000E-09
3	---	---	---	---	---	---
4	---	---	---	---	---	---
5	---	---	---	---	---	---
6	---	---	---	---	---	---
7	---	---	---	---	---	---
8	---	---	---	---	---	---
9	---	---	---	---	---	---
10	---	---	---	---	---	---
11	---	---	---	---	---	---
12	---	---	---	---	---	---
13	---	---	---	---	---	---
14	---	---	---	---	---	---
15	---	---	---	---	---	---

Figure 21. OptMin and OptMax Columns in Point Entry Tab

There are three types of X and Y data, *Fixed*, *Suite*, or *Optimize*, specified by drop-down lists in the XType and YType columns. *Optimize* type is only available in optimization mode. For *Fixed* type data, data are simply entered one value per line in the data columns. For *Suite* type data, the model run will conduct a separate simulation for each suite value entered in the Suite Value dialog, which appears upon double clicking the corresponding cell in the data column:

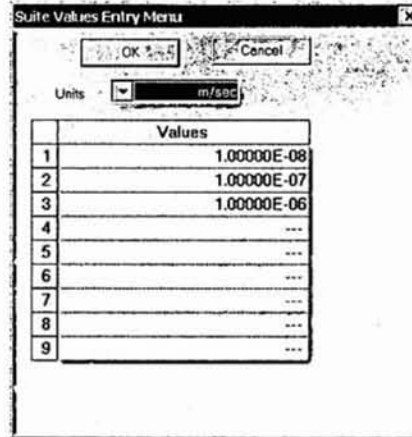


Figure 22. Suite Values Entry Menu

A maximum of three parameters, including those defined in the **Parameter** input window, can be of type *Suite*.

In optimization mode, the OptMin and OptMax columns provide the minimum and maximum optimization values for each defined point in the  $X(r)$  or  $X(p)$  function. They are specified here to ensure that the minimum values of one defined point in the  $X(r)$  or  $X(p)$  function does not overlap the maximum value of the preceding defined point in the  $X(r)$  or  $X(p)$  function.

Either or both the  $X$  and the  $Y$  data can be transformed by log 10. If data are transformed by log 10, it should be specified in the **Units/Transform** tab.

The units for the  $X$  and  $Y$  data are also specified in the **Units/Transform** tab.

Table rows are inserted or deleted using the right click pop-up menu.

### 3.5.2 Interpolation Tab

The interpolation tab has the same options as the **Create Curve from XY Data** object. This is not surprising, since the  $f(p)/f(r)$  **Points Parameter** window has a purpose similar to a curve file.

Details of the interpolation options are described in full in Section 7.1.5.

### 3.5.3 Units/Transform Tab

The **Units/Transform** tab determines the units of the data input into the **Point Entry** tab. An option is available to specify if data are to be transformed by log 10.

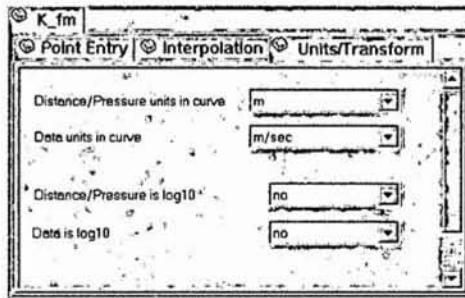


Figure 23. Units/Transform Tab

### 3.5.4 Optimization Tab

Only available in optimization mode, the dialog in the Optimization tab is similar to the Optimized Value Dialog of the Parameter tab.

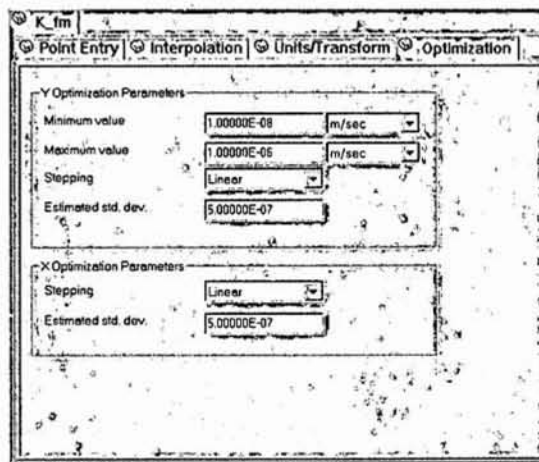


Figure 24. Optimization Tab dialog, only available in Optimization Mode

For a description of the dialog options, refer to Section 3.4.1.

Dialog inputs are available for both the X and Y optimization parameters. Note that X maximum and minimum values are entered in the Point Entry tab.

## 3.6 Simulation Output Input Window

### 3.6.1 Main Tab

The Main tab of the Simulation Output input window defines the output to be calculated by the model. It consists of a table where the type of output is defined:

Main   Production Restart   Superposition						
	ID	Type	Sub-Type	Radius	RadiusUnits	Output Units
1	sPDAT	Pressure	Test Zone	n/a	n/a	kPa
2	sQQAT	Flow	Well	n/a	n/a	USgpn
3	---	---	---	---	---	---
4	---	---	---	---	---	---
5	---	---	---	---	---	---

Figure 25. Main Tab of Simulation Output Window

ID

The output ID identifies the data type. A default ID is automatically given upon selection of the output type.

Type, Sub-type

Determines the type of output to be calculated:

*Pressure*

*Test Zone*

Pressure in the well-bore.

*Observation Well*

Pressure at a specified distance from the well-bore. The specified distance is input in the Radius column.

*Superposition*

Sums pressures at specified radii. Superposition radii and options are input in the Superposition tab.

*Flow*

*Well*

Flow into or out of the well, including *Formation*, *Test-zone* and *Well-bore storage* flows. For flow sequences, the well flow is specified.

*Formation*

Flow into the well-bore from the formation, or out of the well-bore to the formation. Test zone and well-bore storage flows are not included.

*Test Zone*

Flow in the well-bore due to volume changes in the test-zone.

*Well-bore Storage*

Flow due to well-bore storage. For example, a pressure change will generate flow from the well-bore storage due to the change in the compressibility of the liquid or gas.

*Production*

Integrated flow rate (i.e. total volume). Same sub-types as *Flow*.

*Other*

*TZ Temp.*

Temperature in the test zone. Simply echoes variable test zone temperature curve data.

*TZ Comp.*

Compressibility in the test zone.

*TZ Volume*

Volume in the test zone.

Radius

Determines the radius from the well-bore at which pressure will be output. For *Pressure* type, *Observation Well* sub-type only.

Radius Units

Units of the radius are selected from a drop-down list.

Output Units

Units for the output are selected from a drop-down list.

Table rows are inserted, deleted or duplicated using the right click pop-up menu.

### 3.6.2 Production Restart Tab

For production output, the production integration can be restarted at specified times. The specified times are input into the provided table.

### 3.6.3 Superposition Tab

Only for pressure superposition output type, the Superposition tab provides a table to input radii at which pressures will be summed, and related options, shown in figure 26.

	Type	Radius	Operation
1	Constant	1.0	+ Pressure
2	Constant	2.0	+ Pressure
3	---	---	---

Figure 26. Superposition Tab

Depending on the Type, data are entered into the Radius column. For a *Constant* type, a single value is input into the Radius column. For *Optimize*, *Suite/Range*, and *Sampled*, a **Value Dialog** will appear upon double-clicking the corresponding Radius cell. The inputs to each **Value Dialog** are described in Section 3.4.1. Note that *Optimize*, *Range* and *Sampled Value Dialogs* are only available for optimization, range and sampling modes, respectively.

The Operation column determines whether the pressure at the specified radius is added (+ *Pressure*) or subtracted (-*Pressure*), or whether the pressure change from static formation pressure at the specified radius is added (+ *dPressure*) or subtracted (-*dPressure*).

## 3.7 Fit Specification Input Window

In the Fit Specification input window, field and simulated data are paired for regression

analysis. The pairing of field and simulated data indicates the field data to which the model should fit simulation results. Generally, the constraints defined in the Field Data input window are compared to the corresponding simulated data constraints defined in the Process/Plot tab of the Sequence input window. The Fit Specification input window is only accessible for optimization mode or forward-range mode.

Auto Setup→Basic Fits is available to generate the fitting objects. It uses data processing objects previously generated with Auto Setup→Field Plots and Auto Setup→Sequence Plots as the pairs of data for fitting.

### 3.7.1 Fit Specification/Graphics Tab

The Fit Specification/Graphics tab contains an object tree for fit specification objects. These fit objects pair field and measured data, but do not indicate which data pairs should be used as constraints by the model. The selection of data pairs as constraints is controlled in the Fit Selection tab.

There are three fit specification objects: **Single Fit**, **Composite Fit** and **Sequence Fit**. These objects are described in Appendix A.

The following example shows the fit specification objects with incorrect object properties status (#), due to empty model data set. Once the model is run, the data set will no longer be empty, and the fit object status will be normal.

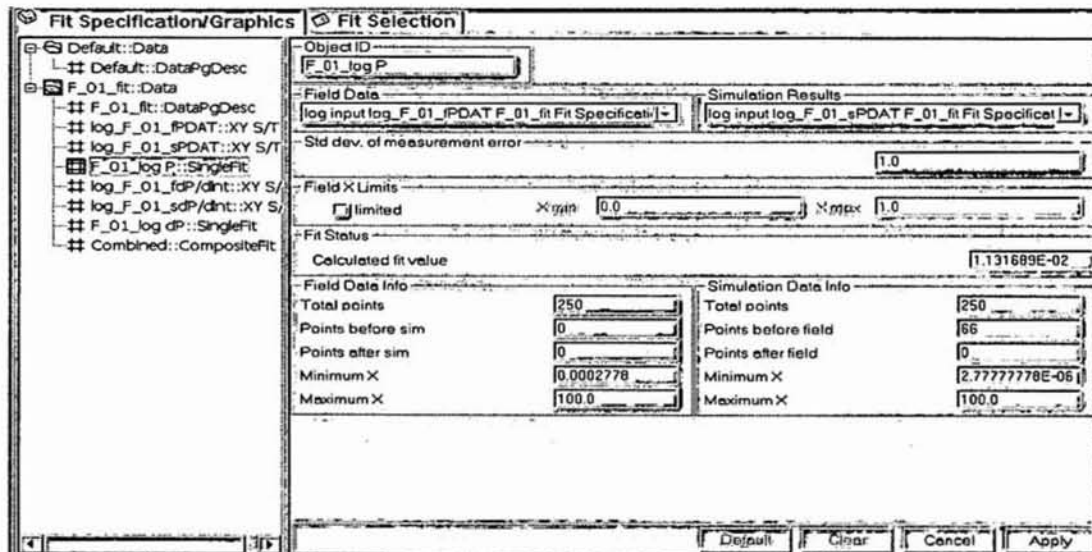


Figure 27. Fit Specifications / Graphics Tab

### 3.7.2 Fit Selection Tab

Once field and simulated data have been paired in fit objects within the Fit

Specification/Graphics tab, the fit specifications to be used as constraints are selected in the Fit Selection tab.

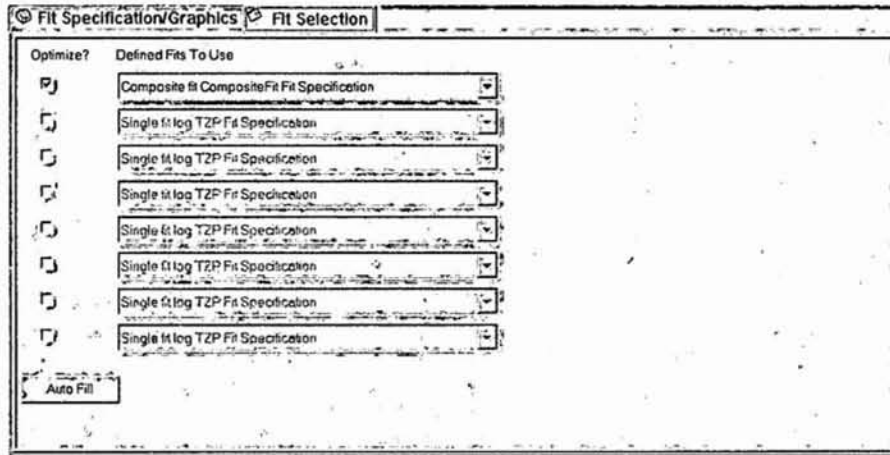


Figure 28. Fit Selection Tab

Fits are selected by checking the Optimize checkbox, and selecting the appropriate fit specification object in the drop-down list. The AutoFill button will automatically select all the created fit objects.

Each line of the Fit Selection tab indicates an independent optimization. Consequently, if more than one line is selected, the simulation will conduct a *multiple fit*. To optimize several parameters in one optimization (or *single fit*), use the **Composite Fit** object in the Fit Specification/Graphics tab to combine several **Single Fit**, **Sequence Fit** and/or **Composite Fit** objects.

### 3.8 Optimization Input Window

In the Optimization input window, a fitting algorithm for optimization mode simulations is selected, and algorithm options specified. The input window is only available for optimization mode simulations.

Two inverse-fitting algorithms are available: downhill simplex and Levenburg-Marquardt. For most problems, either algorithm may be used. The downhill simplex algorithm is slower to use than the Levenburg-Marquardt algorithm, however the downhill simplex algorithm will generally converge to a solution regardless of the initial estimates of the fitting parameters.

Parameters are normalized to a value range of 0 to 1 before optimization.

#### 3.8.1 Main Tab

Within this tab, basic algorithm options are selected, as shown in figure 29.



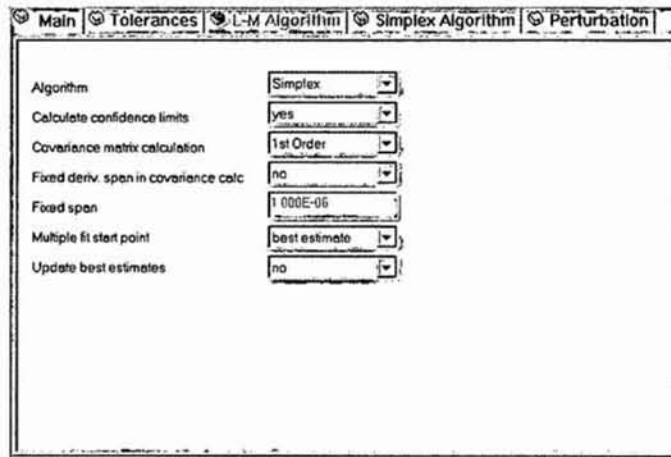


Figure 29. Main Tab of the Optimization Input Window

Algorithm

The *Simplex* or *Lev-Mar* (Levenburg-Marquardt) algorithms are discussed in Section 3.8.

Calculate confidence limits

Confidence limits are calculated from the covariance matrix. The covariance matrix will not be calculated unless this toggle is set to *yes*.

Covariance matrix calculation

*1st Order*

Ignores the second derivative terms of the Hessian matrix (used in the calculation of the covariance matrix). Requires less simulations and guarantees a positive definite Hessian matrix.

*2nd Order*

Strictly correct formulation of the Hessian matrix.

Fixed deriv. span in covariance calc

Derivative span in covariance matrix calculation may be fixed within the Fixed Span input box, or may be calculated using an iterative procedure.

Fixed span

Value is entered if derivative span in covariance calculation is fixed.

Multiple fit start point

For multiple optimizations, all optimizations after the first optimization can start with

parameter values based on the original *best estimate* specified for the parameter, or the *last result* values from the last optimization.

Update best estimates

If *yes*, the best estimates in the parameter tables of the Parameter input window will be updated with the final optimization values.

### 3.8.2 Tolerances Tab

Within this tab, tolerances are set, in addition to the maximum number of simulations.

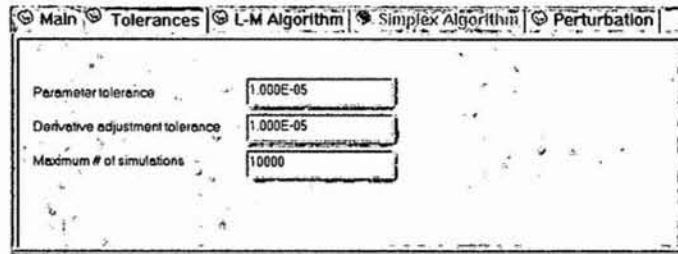


Figure 30. Tolerances Tab of the Optimization Input Window

Optimization is complete once tolerances have been met. Both optimization algorithms have a Parameter tolerance, and the Levenburg-Marquardt algorithm has an additional tolerance specified in the L-M Algorithm tab.

In calculating the covariance matrix, an iterative procedure is used to calculate the derivative span (if the derivative span is not fixed in the Main tab). The derivative span has been successfully calculated once the Derivative adjustment tolerance has been met.

### 3.8.3 L-M Algorithm Tab

This tab provides options for the Levenburg-Marquardt algorithm.

**Lambda** is a step parameter used to generate new estimates of parameters. The smaller the value of lambda, the greater the step change. During optimization, lambda is increased if the new parameter estimates did not improve the fit, and decreased if the new parameter estimates improve the fit. To control the lambda factor, the following options are available: Lambda factor multiplier, Initial lambda factor and Minimum lambda factor.

In addition to lambda, the derivative of the fit component function is used to generate new estimates of parameters. The Maximum derivative span limits the span of the derivative, as large spans increase the difficulty in converging towards a solution.

As previously described in Section 3.8.2, an additional tolerance is required for optimization to be complete in the Levenburg-Marquardt algorithm: the Relative change tolerance.

### 3.8.4 Simplex Algorithm Tab

This tab provides options for the downhill simplex inverse-fitting algorithm.

<u>Initial vertex span</u>	The vertex span is used to generate the initial simplex.
<u>Initial derivative calc span</u>	Provides the initial derivative span used in the calculation of the covariance matrix.

### 3.8.5 Perturbation Tab

Running optimization perturbations is one method of investigating parameter uncertainty. In perturbation mode, nPre randomly perturbs the initial estimates of fitting parameters (i.e. slightly increases or decreases the initial estimate) and re-optimizes the fitting parameters. nPre repeats this process for a specified number of perturbations. If each perturbation results in a fitting parameter value close to the initial estimate, the problem solution is unique and well-constrained. Note that perturbation mode is not currently compatible with optimization-range or optimization-sampling modes.

<u>Do optimization perturbations</u>	Check the checkbox to activate perturbation mode.
<u># of perturbations</u>	The number of random perturbations within the perturbation span.
<u>Perturbation span</u>	The maximum span over which perturbations will be created. Note that all parameters are normalized to a range of 0 to 1, and consequently the perturbation span will be between 0 and 1.
<u>Perturb from</u>	The first perturbation can use the original best estimate value ( <i>Start</i> ) or the last optimization value ( <i>Last Fit</i> ) for its initial estimate of parameters.
<u>Random # seed</u>	A user-selected random seed number allows perturbation simulations to be reproducible.

## 3.9 Sampling Input Window

The Sampling input window contains options related to the setup of the sampling of a parameter. Note that sampled parameters may include sequence data, such as flow rate or pressure boundary conditions, and superposition distances. The ranges and distributions are defined at the point of parameter or sequence definition, in the Parameter and Sequence input windows, respectively.

### 3.9.1 Main Tab

The Main tab defines the sampling procedure:

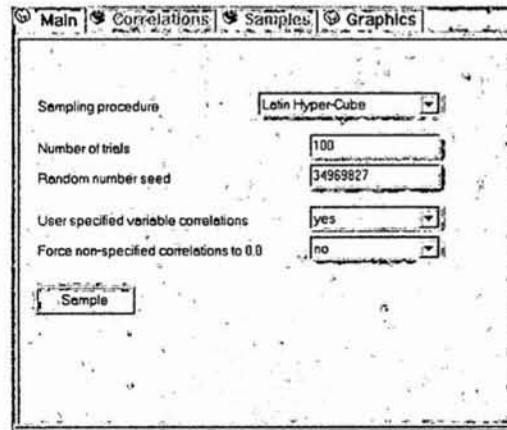


Figure 31. Main Tab of the Sampling Input Window

Sampling procedure nSIGHTS supports two sampling routines: *Latin Hyper-Cube* and *Monte-Carlo*

Number of trials

Number of times input parameter distributions are sampled.

Random number seed

A user-selected random seed number allows sampling simulations to be reproducible. A random seed number is automatically provided.

User specified variable correlations

*yes*

The correlation between two variables will be forced to the values specified in the **Correlations** tab.

*No*

Correlations, if not forced to zero, will be calculated during simulation.

Force non-specified correlations to 0.0

*yes*

Non-specified correlations will be forced to zero. If correlations are not user specified, all correlations will be forced to zero.

*No*

Non-specified correlations will not be forced to any value, and will be calculated during simulation.

Sample

This button re-samples the parameters, based on the current setting in this tab. Any objects or plots

containing sample data will be updated with the new sampled data.

### 3.9.2 Correlations Tab

If more than one parameter is defined as a sampled type, a correlation between the parameters is forced to the value specified in the tables provided in this tab. This tab is only available if variable correlations are user specified (User specified variable correlations in the Main tab).

	P_fm	r_o
P_fm	1.000	---
r_o	---	1.000

Figure 32. Correlations Tab of the Sampling Input Window

Parameter correlations can only occur between variables of the same basic type. Consequently, the Correlations tab is divided into four tabs (Parameter, Sequence Q, Sequence P and Superposition R), each tab providing a table for the input of correlations. Tabs are hidden if there are less than two parameters for any parameter category.

### 3.9.3 Samples Tab

This tab contains a table of the sampled parameter values, with a column per parameter, sequence or superposition distance. The parameters are re-sampled upon activation of this tab. In the following example, 10 trials are defined for the formation conductivity:

	K_fm
1	2.9440891E-09
2	1.6941906E-09
3	5.4436779E-10
4	4.4533507E-09
5	6.5267687E-09
6	5.5488796E-09
7	3.3937244E-09
8	7.3009359E-09
9	8.7039046E-09
10	9.7837555E-09

Figure 33. Samples Tab of the Sampling Input Window

### 3.9.4 Graphics Tab

The Graphics tab contains an object tree, and corresponding object property window, where users can load, view and manipulate data to create visualizations of sample correlations. Sample data are available as table data, with the object ID of *Sample*.

## 3.10 Suite/Range Input Window

### 3.10.1 Priority Tab

The priority of each suite and range parameter is determined in this tab and input window. For both suite and range parameters, the simulation program loops through the first parameter (Grid/Cube X (slowest grid/cube)), and for each value in its suite or range, it then loops through the second parameter (Grid/Cube Y (fastest grid/middle cube). If three suite/range parameters are defined, for each value of the second parameter, the simulation program loops through the third parameter (Cube Z (fastest cube)). For each combination of suite/range values, a simulation is performed.

## 3.11 Output File Setup Input Window

Output files from nPre can be read into nPost for visualization and post-processing. The output files are all binary.

Four output files can be created, each with its own tab:

<b>XY Output</b>	Any XY array (a collection of XY data) created within nPre is output into a file with the default file extension *.nXYsim. The default <i>XYDataArray f(t) Table Global</i> consists of all the simulation output defined in the Main tab of the Simulation Output input window. Not available in range mode.
<b>Profile</b>	A grid containing pressure as a function of time (X axis) and radius (Y axis) is output to a file with the default file extension *.nPro. The grid can contain a subset of time, by limiting the number of sequences. As grid data can be quite large, the data may be reduced according to a <u>Time step modulus</u> , reducing the number of X (time) points, or a <u>Node modulus</u> , reducing the number of Y (radius) points. Available in forward-normal mode only.
<b>Range</b>	Outputs grid or cube data of residuals (error between simulated and field data) into a file with the default file extension *.nRng. In optimization mode, grid or cube data of optimized values and the

main diagonal of the covariance matrix (if calculated) are also written to the file. If two range variables are defined, grid data are output, if three range variables are defined, cube data are output. Available in range mode only.

**Optimization** Fit results, residuals, covariance matrix and Jacobian data are output to a file with the default file extension \*.nOpt. Available in optimization-forward or optimization-sampling mode only.

To write the file during simulation, check the checkbox at the top of each tab. For all output files, data are created in a new file, or appended to an existing file. Data can only be appended to an existing file if:

- The current run is the same mode as the runs existing within the file (e.g. all runs within the file are forward-normal).
- The data to be output for the current run is the same as the data output for the existing runs (e.g. all runs within an appended file write the XYdataArray f(t) Table Global, with the same simulation output defined).

For files containing appended data, each run is identified by the Run identifier. Within nPost, the data for any one run can be selected, with each run identified by its run identifier. For runs with multiple cases (e.g. sampling mode runs, multiple fit optimizations), each case will have an identifier in addition to the run identifier.

### 3.12 Processing Setup Input Window

To create plots to monitor the real-time progress of the model and write simulation output, the **Processing Setup** input window contains an object tree, and its corresponding object property window. Objects can load, view and manipulate model data.

Simulated data sets can be created before the simulation has been conducted. Error messages will appear on the message line, for example “XY data set is empty”. As the simulation is being conducted, the data sets are automatically updated.

A plot window is not automatically updated during the simulation. Addition of an object that forces the plot to update regularly must be used, such as a **Data Label** object with the last fit value as input.




## 4 NPRES AUTO SETUP

As the setup of certain portions of the input data and plots are similar from test to test, auto setup provides a quick way of generating certain input data and plots. There are three Auto Setup commands: **Field Data Plots**, **Sequence Plots**, and **Basic Fits**.

All auto setup commands create objects within object trees, and there are common aspects between the auto setup procedures:

- Auto setup is created in a tree structure, however input is still required from the user. The user must specify the input data, and input any required options in processing objects (e.g. **Scale/Transform** objects).
- Data and plot pages are created with a default naming convention for the page or object IDs:
  - The type of data are specified with a letter: **Q** for flow data, **P** for pressure data, **f** for field data, **s** for simulated data. The name of a sequence will also be used in the default name, if applicable.
  - The type of operation occurring within the page or object is also specified: **Input** for pages that read data, **DAT** for objects that read or extract data, **Process** for pages and objects that process data, **Diag** for diagnostic plot pages. For some process objects, the process occurring (e.g. **dP/dt**) is specified.
  - Examples:

<b>P_input</b>	Object ID of a data page containing a read object for pressure data.
<b>fQDAT000</b>	Object ID of a read data object reading field flow data.
<b>F_01_fdP/dt</b>	Object ID for an object that calculates the derivative of field data pressure for a flow sequence named F_01.
<b>log_F_01_sPDAT</b>	Object ID of a <b>Scale/Transform</b> object that conducts a log transform on the simulated pressure data within flow sequence F_01.
- All plot pages will contain:
  - A **Data Labels** object that plots a label containing the current date and the nPre version info in the top right hand corner of the plot.
  - A **Data Labels** object that plots a label containing the progress of the optimizer. This object forces the plot to be updated during a simulation.
  - A **User Labels** object that plots a default title label.
- Only 2D plots are created in auto setup procedures. The user will be required to reset the axes limits in order to view the data in a 2D plot window. This is done by selecting **Axes**→**Extents** in the 2D plot window pop-up menu, by selecting the **Reset View** button () in the 2D Plot window toolbar, or by selecting **Standard**→**Reset View**

in the 2D Plot window menu bar.

Auto setup results should always be checked to ensure that the created pages and objects use the correct input data and the correct data transformations.

## 4.1 Field Data Plots Auto Setup

Selection of the Auto Setup command Field Data Plots will create data and plot objects within the Field Data input window's object tree that are typically required to create constraints and/or diagnostic plots from field data.

Only two sets of data and plot pages can be created, one for pressure data, and one for flow data. Selection of the Auto Setup→Field Data Plots command can create one or both of these data sets at a time. If a data set is created again by auto setup, and the data sets already exist, they will be deleted, and new empty pages and objects will be created.

A dialog to facilitate the auto setup of field data plots provides the following options:

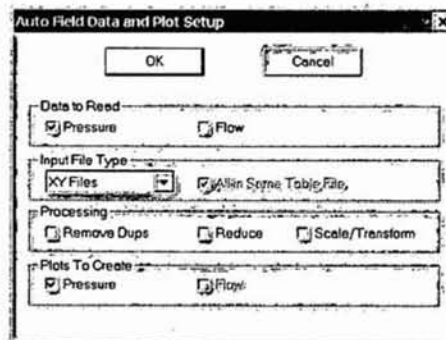


Figure 34. Auto Field Data and Plot Setup Window

### Data to Read

Pressure and/or Flow data sets are created. For each data set, a data page is created with one read object. The user will need to specify the field data to be imported with the read object(s). For table input data, an additional **Select XY from XY Array** object is created, to select XY data from the table.

### Input File Type

The input file type, XY data or table data, is selected in the dropdown box. This option determines the type of read object created in the input data page.

### All in Same Table File

For table input, if both pressure and flow data sets are being created, this checkbox creates one read table object to read a table which contains both pressure and flow data, and two select XY objects. The read table object will be in one data

input page, named PQ\_Input.

### Processing

If one of the processing options is selected, a new data page is created, containing the object(s) required to complete the data processing. The user is required to complete the processing options for each processing object (refer to Appendix A for details on each processing object).

#### Remove Dups

To remove duplicates in the data, a **Remove Duplicates** object is created.

#### Reduce

To reduce the data, a **Reduction** object is created.

#### Scale/Transform

To scale or transform the data, a **Dual XY S/T** object is created.

### Plots to Create

Selection of either the Pressure or Flow checkbox will create a 2D-XY plot page, containing two objects:

- An **XY Data Series** object to plot transformed data, as well as simulated data.
- A **Sequence Grid Lines** object, which will plot gridlines to define sequences.

The example below, figure 35, shows the Auto Field Data and Plot Setup dialog and the resulting object tree after auto setup:

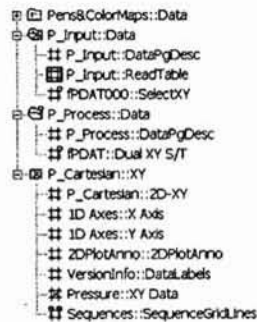
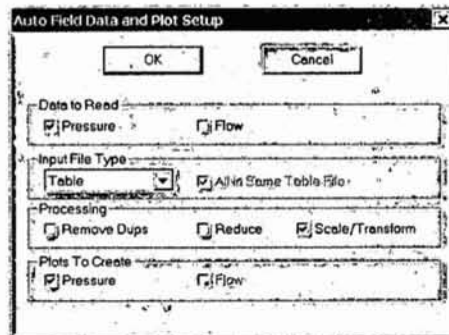


Figure 35. Auto Field Data and Plot Setup & Corresponding Object Tree

## 4.2 Sequence Plots Auto Setup

Selection of the Auto Setup command Sequence Plots will create data objects and plot objects within the Process/Plot tab of the Sequence input window that are typically required to create diagnostic plots of simulated data sets. As well, a **Create XY Array** object, containing the simulated output defined in the Process/Plot tab of the Sequence input window, will be created in the Processing Setup input window.

Auto setup cannot be selected until sequences have been defined in the Sequences tab of the Sequence input window.

The Sequence Data and Plot Setup dialog, which appears upon selection of the Auto Setup→Sequence Plots command, contains frames for each type of sequence containing checkboxes for common diagnostic plots. The frame and checkboxes for sequence types not defined will be hidden.

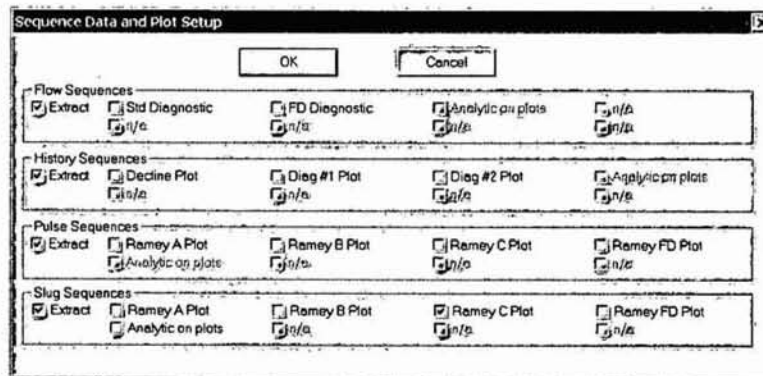


Figure 36. Automated Sequence Data and Plot Setup Window

No diagnostic plots for a sequence type will be created unless the **Extract** checkbox is selected. Each plot to be created is then selected with a checkbox. Plots are only created for a sequence if the **Auto** checkbox is selected for the sequence in the Sequences tab of the Sequence input window.

Each diagnostic plot option will create a data page and a plot page for all applicable sequences with the **Auto** checkbox selected. The data page will include two **Extract Sequence(s)** objects, one for field data and one for simulated data. The user is required to specify the applicable field and simulated data, but the correct sequence has been automatically chosen.

All sequence types have an **Analytic on plots** checkbox, which is only active if at least one diagnostic plot has been selected from that sequence type. This option adds an **Analytics: Line Data** object to all 2D plots for that sequence type, allowing the user to create a straight line on a plot interactively. A corresponding legend box on the 2D plot, showing

the analytic line results, is also created using a **Data Labels** object.

Table 5.1 provides the available diagnostic plots, and a brief description.

<b>Table 5.1: Auto Setup Sequence Diagnostics Plots</b>	
<b>Flow Sequences</b>	
Standard Diagnostic	Plots field and simulated pressure data, as well as the derivative of the data (dP/dlnt) in a 2D XY plot.
FD Diagnostic	For both field and simulated data, plots $2*d^2\log P/d\log t^2 + 2$ .
<b>History Sequences</b>	
Decline Plot	Plots the field and simulated flow data on a 2D XY plot.
Diag #1 Plot	For both field and simulated data, plots $2*d^2\log Q/d\log t^2 + 2$ .
Diag #2 Plot	For both field and simulated data, plots $2*d^2\log(1/Q)/d\log t^2 + 2$ .
<b>Pulse and Slug Sequences</b>	
Ramey A Plot	Plots normalized pressure and the derivative of normalized pressure (dP/dlogt) for both field and simulated data.
Ramey B Plot	Plots normalized pressure and the derivative of normalized pressure (dlogP/dlogt) for both field and simulated data.
Ramey C Plot	Plots (1-normalized pressure) and the derivative of (1-normalized pressure) (dlogP/dlogt) for both field and simulated data.
Ramey FD Plot	Plots two times the derivative of normalized pressure ( $2*d\log P/d\log t$ ) for both field and simulated data.

### 4.3 Basic Fits Auto Setup

In optimization mode, the **Auto Setup**→**Basic Fits** command will create fit data objects in the **Fit Specification/Graphics** tab of the **Fit Specification** input window, as well as to define fits to use in the **Fit Selection** tab of the **Fit Specification** input window. The **Auto Setup**→**Basic Fits** command is not available until sequences have been defined.

The **Fit Specification Setup** dialog, which appears upon selection of the **Auto Setup**→**Basic Fits** command, contains frames for each type of sequence containing checkboxes for possible fits for that sequence type. The frame and checkboxes for sequence types which have not been defined will be hidden. In addition, there is a **Cartesian Fits** frame, with associated checkboxes, which will produce fits for all defined sequences (the entire test).

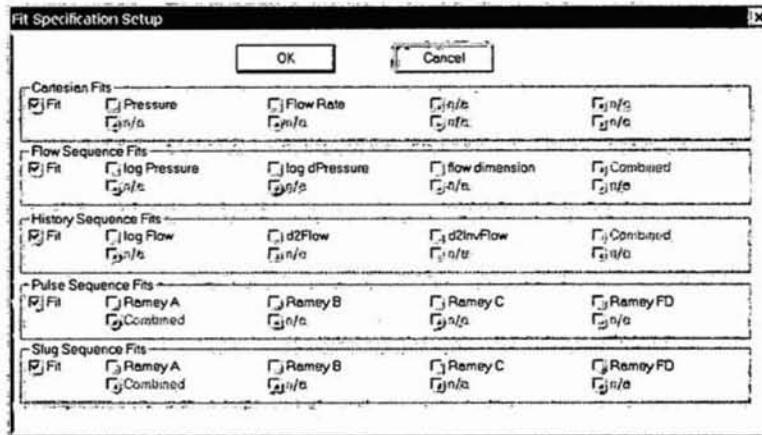


Figure 37. Fit Specification Setup

No fit objects will be created for a sequence type or Cartesian Fits unless the Fit checkbox is selected. Each fit to be created is then selected with a checkbox. Fit objects are only created for a sequence if the Auto checkbox is selected for the sequence in the Sequences tab of the Sequence input window.

For each sequence type selected (i.e. Fit is checkmarked), a data page is created. The data page will contain a **Single Fit** object for each type of fit specified in the checkboxes. The checkbox Combined will combine all the single fits defined for each sequence type into a **Composite Fit** object.

For Cartesian Fits, two **Extract Sequence(s)** objects will be created for both field and simulated data, in order to extract all the sequences for the **Single Fit** object. The user is required to specify the applicable field and simulated data, but the correct sequences have been automatically selected. **Extract Sequence(s)** objects are not created for any other sequence type, as it is assumed that **Auto Setup** → **Sequence Plots** has been previously conducted, and the output from the **Extract Sequence(s)** objects created in the **Process/Plot** tab of the Sequence input window will be used as required.

The type of fit (e.g. log Pressure in Flow Sequence Fits) refers to the data transformation of both field and simulated data before input into a **Single Fit** object. If the data transformation was not already conducted in the **Process/Plot** tab of the Sequence input window, **Scale/Transform** objects will be created for both field and simulated data to perform the data transformation required.

In addition to the creation of fit objects, auto setup will fill the **Fit Selection** tab, in a manner similar to pressing the Auto Fill button. All fits created will be included, one per line in the **Fit Selection** tab. If composite fits were created, the single fits of those composites will not be included.



## 5 RUNNING SIMULATIONS

Once all required input has been entered, a model run can be executed by selecting one of the following commands from the **Run** menu:

- Minimal** Conducts a full model run, with a small window providing minimal information.
- Verbose** Conducts a full model run, with a small window providing detailed information. The information provided is dependent on the simulation mode. For example, in optimization mode, the best fit value and the current fit value are shown for each parameter to be optimized. Due to the detailed information, a verbose model run will have a slightly increased execution time compared to a minimal model run.
- Covariance Only** Calculates the covariance matrix using the current set of defined parameters, without conducting any simulations. Only available for simulation modes that calculate the covariance matrix.

The following three figures are examples of the run window for an optimization model run with multiple fits. The title of the run window indicates the current case and/or fit of the simulation.

### Run→Minimal



Figure 38. Minimal Run Simulation

### Run→Verbose

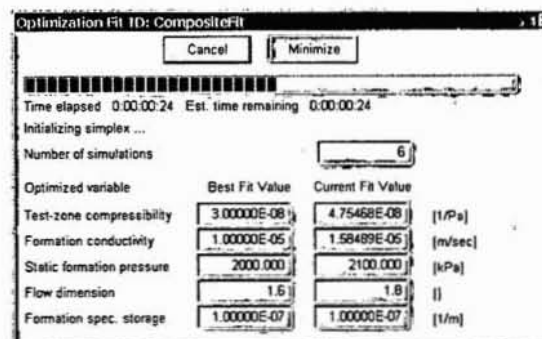


Figure 39. Verbose Run Simulation

### Run→Covariance Only



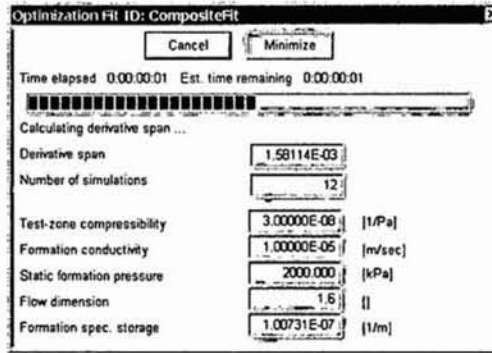


Figure 40. Covariance Only Run Simulation

Dialog buttons and information displayed on all the run windows include:

<u>C</u> ancel	Cancels the run.
<u>M</u> inimize	Minimizes the main menu, as well as the run window. Plot windows remain visible, in order to observe changes in the plots during the run.
<u>T</u> ime elapsed	Time elapsed since beginning of the run.
<u>E</u> st. time remaining	Estimation of the time remaining for the run is only displayed once the first case is complete. For runs with single cases, it will not be displayed.
<u>P</u> rogress Bar	For runs with multiple cases (e.g. multiple fit optimizations, perturbations, etc.), a progress bar is provided that indicates the number of cases completed.

## 6 OBJECTS

An object has a defined function related to data input/output, data manipulation, or plot construction. A fundamental premise in nSIGHTS is that objects can be combined in many flexible ways to produce a near-infinite variety of data processing procedures and visualizations.

Each page type has associated objects, specifically data objects, plot objects, list objects and output objects. In addition, there is a global object, described in Section 6.4. However, all objects have similar characteristics and controls, which are described in this section.

### 6.1 Object Data Types

Most objects use the output of other objects as their input. Objects may also use the output of the nPre simulator as input. Only object output of a compatible data-type can be used as input. For example, a **Table Column Scale/Transform** object can only use table data-types as input. With the nSIGHTS user interface, input objects are selected from drop-down menus that contain the names and descriptions of all available object output of the correct type. The following table provides a brief explanation of data types used by nSIGHTS:

Data Type	Description
Color Map	An array of colors, usually smoothly varying.
Covariance Data	Calculated covariance matrices.
Cube Data	A data structure with values at regular array XYZ locations.
Cube Indices	Indexes representing the location of each value within cube data.
Curve Data	X and Y values that define a function. Input XY data and function characteristics are included in the data structure.
Fit Specification	Pairs of field and simulated data.
Grid Data	A data structure with values at regular array XY locations.
Jacobian Data	Calculated Jacobian results from optimizer.
Pen Set	24 specific colors
Real Value	A single numeric value.
Sequence Time Data	Sequence start/end times and IDs.
Table	Rows and columns of numeric data. Each row and column also has an associated ID.
Time Value	A numeric value associated with a time setting. All time values are also real values.
XY Array	A collection of XY data.
XY Data	X and Y values.
XYZ Label	XYZ co-ordinates and associated text labels.

### 6.2 Object Concepts

## 6.2.1 Object ID

Every object that is created has an associated identifier or ID that is used to refer to the object within the nSIGHTS user interface. The ID is always located in the upper left hand corner of the object property window. All objects have a default ID, usually the name of the object, although some objects automatically change the default based on object properties.

You should usually modify the object name so that a) it is unique, and b) it reflects your usage of the object. A unique object name is important to distinguish object output, while a relevant object name makes it easier to understand complex visualizations containing many objects.

## 6.2.2 Object Selection

Nearly all nSIGHTS objects require input from another object. Within the object property window, these input data are selected using a drop-down menu. When not active, the drop-down menu shows the current object selection.

The drop-down menu box is activated by pressing the down arrow. After activation, a list of objects producing output of the correct data type is displayed, figure 41.

sPOAT	sPOAT	Output	Global
sODAT	sODAT	f()Output	Global
POAT	IPDAT	P_Input	Field Data
F_01	F_01_IPDAT	F_01_process	Sequence
F_01	F_01_sPOAT	F_01_process	Sequence
F_01_idP/dInt	F_01_idP/dInt	F_01_process	Sequence
F_01_sdP/dInt	F_01_sdP/dInt	F_01_process	Sequence
log input	log_F_01_IPDAT	F_01_fit	Fit Specification
log input	log_F_01_sPOAT	F_01_fit	Fit Specification
Resid	F_01_log P	F_01_fit	Fit Specification
	F_01_log P	F_01_fit	Fit Specification
log input	log_F_01_idP/dInt	F_01_fit	Fit Specification
log input	log_F_01_sdP/dInt	F_01_fit	Fit Specification
Resid	F_01_log dP	F_01_fit	Fit Specification
	F_01_log dP	F_01_fit	Fit Specification

Figure 41. Object Selection List

The listing in the drop-down menu contains:

- the object type (or output ID if there is more than one output of the same type from a single object)
- the object ID of the associated object
- the name of the page where the object is located, only if the objects available are from more than one page
- in nPre only, the nPre object tree where the page is located

## 6.2.3 Object Connections

The input/output connections between objects are viewed by selecting the **Connections** command in the **Object** menu. This command will display a text top-level window that provides information on the connections of the currently selected object: the objects used as input, and the objects which use the currently selected object's output as input.

Similar to object selection, each object is defined by:

- the object ID
- the object type (or output ID if there is more than one output of the same type from a single object)
- the name of the page where the object is located
- in nPre only, the nPre input window where the page is located
- a number indicating the order the object was created, relative to other objects (i.e. the first object created in the current application will be #1, the second object created will be #2, etc.)

An example of a connection window for a **P(t) Derivative Calculation** object, named *F\_01\_fdP/dInt* created in the *F\_01\_process* page of the Sequence input window, is provided below in Figure 42:

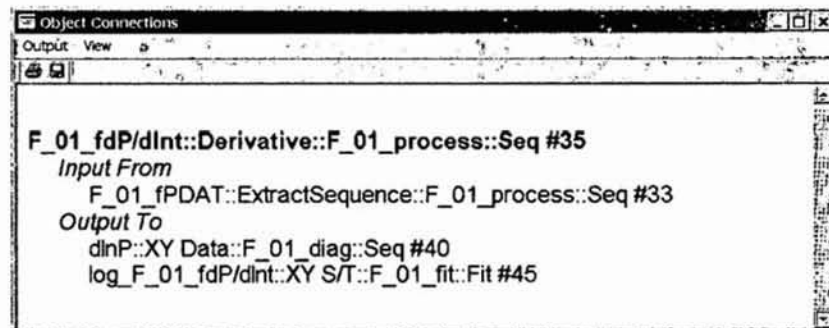


Figure 42. Connection Window for a P(t) Derivative Calculation Object

Based on the example object connections window, *F\_01\_fdP/dInt* was the 35<sup>th</sup> object created in this nPre application. It uses as input an **Extract Sequence(s)** object, named *F\_01\_fPDAT*, from the same page. *F\_01\_fPDAT* was the 33<sup>rd</sup> object created in this nPre application. Two objects use the *F\_01\_fdP/dInt* object output as input: an **XY Data Series** object, named *dlnP*, from the *F\_01\_diag* page in the Sequence input window, and a **Single Scale/Transform** object, named *log\_F\_01\_fdP/dInt*, from the *Constraints* page in the nPre Fit Specification input window.

Note that the object name used in the connections page relates to the object identifier within the object tree, which may differ from the object name in the **Object** menu (see Appendix E for tables of alternative object names). All object names used within this manual refer to the object name used in the **Object** menu.

The connections for all objects within the currently selected page are similarly viewed by selecting **Page→All Connections**.

## 6.2.4 Object Execution




The nSIGHTS architecture includes an object execution algorithm that ensures objects are re-calculated as required. For example, changing the scale in a **Scale/Transform** object will cause all objects using the resulting data to be re-calculated and all plots dependent on those objects to be re-drawn.

The algorithm used to determine execution is fairly straightforward. A tree is built based on inter-object references. Tree connections are viewed using **Object→Connections** or **Page→All Connections** as described in Section 6.2.3. The tree is traversed in such a manner that all input data to an object is re-calculated before an object is re-calculated.

An error occurs when a circular reference is detected: i.e. object A depends on object B for input, but the object B also depends upon object A. In this case, nSIGHTS will issue a non-fatal error message of the form **ObjCalc - Non-blank object not found - circular reference**.

## 6.2.5 Object Errors

Object errors are errors due to input or object property settings. Before an object is executed, its input objects and internal properties are checked. If a problem is detected, an error message is displayed in the message line portion of the screen. The error message will contain the name of the object causing the error and the error. The error must be corrected before execution can continue.

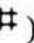The object icon of an object with an error will be modified to reflect the object's status (i.e. the icon will appear as  or ). Once the error has been fixed, the object icon will return to normal status (.

Another type of error message causes a dialog to appear with the title **nSIGHTSInternalError** and a (usually cryptic) error message. Subsequently, nSIGHTS will abort. This is indicative of a bug. Occurrences of these errors should be reported to the author.

## 6.3 General Object Controls

### 6.3.1 Masters and Slaves

Master and slave capabilities allow the internal settings of one object (the *master*) to control those

of another object (the *slave*). In many cases, data processing objects and visualizations are created that may contain several instances of a set of object properties. In many cases, we want to compare these objects, and consequently they need to have the same object properties. For example, to compare the derivative of pressure for field data and model results, two **P(t) Derivative Calculation** objects are required, one for each set of data. Both derivative objects should have the same derivative options. To facilitate the comparison, the master and slave facility allows the user to modify the object properties of only one object (the master), and the slave object properties will be automatically adjusted accordingly.

For example, the two **P(t) Derivative Calculation** objects described above could be linked as follow:

- 1) A **P(t) Derivative Calculation** object for the field data derivative calculation is created: the Object ID is set to **dPField**, the pressure field data source is selected, and the appropriate derivative options selected. By default, the object will be a master (i.e. the Master toggle is turned on).

Figure 43. P(t) Derivative Calculation Object with Master toggle turned on.

- 2) Another **P(t) Derivative Calculation** object for the model results is created: the Object ID set to **dPModel**, and the model data source is selected. The Master toggle is turned off, and the *dPfield* object is selected from the drop-down menu.



Object ID F_01_sdP/dint		Input P(t) Data F_01 F_01_sPDAT F_01_process Sequence	
Derivative Specification <input type="checkbox"/> Master		Slave to: Derivative F_01_IdP/dint Sequ	
Derivative Type dy/dln(φ)	Derivative Calculation Log % Span	Window/oid Calculation Clert	
# points in Window 1	Log Epsilon 1.000E-15	Y.Offset 1.000E-08	
Lin/Log % Span Value Source <input checked="" type="checkbox"/> Mst <input type="checkbox"/> Exp	Last fit Perturb./Sample Optimiz	Lin/Log % Span Value 100	
Lin/Log Value Span Value Source <input checked="" type="checkbox"/> Mst <input type="checkbox"/> Exp	Last fit Perturb./Sample Optimiz	Lin/Log Value Span Value 0	
Time Multiplier		<input type="checkbox"/> None <input type="checkbox"/> Temp <input type="checkbox"/> delta T	
Time Processing <input type="checkbox"/> Use superposition		None available	
Options <input type="checkbox"/> ABS(derivative Y)			
		Default Clear Cancel Apply	

Figure 44. P(t) Derivative Calculation Object with Master turned off.

Master/Slave capability is available for most object properties where property variation is likely to be required. There are two variations of the master/slave dialog frame depending upon the window layout. Both variations are shown in the object property of the **P(t) Derivative Calculation** object shown in the above example, and are shown in detail here, in figure 45:

Derivative Specification	
<input checked="" type="checkbox"/> Master	Slave to: Derivative F_01_sdP/dint Sequ

Lin/Log % Span Value Source	
<input checked="" type="checkbox"/> Mst <input type="checkbox"/> Exp	Last fit Perturb./Sample Optimiz

Figure 45. P(t) Derivative Calculation Object Variations

Note that many master/slave controls also contain an Expose toggle. Selecting the Expose toggle will create an exposed version of the control as described in Section 6.3.2. Only master controls can be exposed.



### 6.3.2 Exposed Controls

One drawback to the object property window of the nSIGHTS user-interface (UI) is that it is difficult to rapidly change properties of a plotted object or two objects. For example, to repeatedly change the selected run and/or simulation of an extract object (e.g. **Extract XY from XY Results** object) and view the change in a plot requires the following procedure:

- 1) select the run and/or simulation.
- 2) press **Apply**
- 3) select the plot window to view results
- 4) select the Main Menu
- 5) select the extract object in the object tree
- 6) change the run and/or simulation selection
- 7) press **Apply**
- 8) re-select the plot window to view results.
- 9) repeat steps 4 to 8

nSIGHTS offers a capability called *exposed controls* to resolve this problem. An exposed control is a UI element which has been disabled on the object property window and has been re-created in its own small top-level window. Within this top-level window are the control and additional UI elements to support other capabilities. Exposed controls are actuated by selecting the Expose toggle on selected UI components. Exposed controls are bundled with Master/Slave capabilities. Note that only master controls can be exposed.

The element remains exposed after the property pane has been changed to a different object. The exposed control will be available until it is disabled (Expose toggle switched off), or the object is deleted.

There are currently two types of exposed controls: list selections and real values.

#### 6.3.2.1 Exposed List Selections

An example exposed list selection is shown below in figure 46.

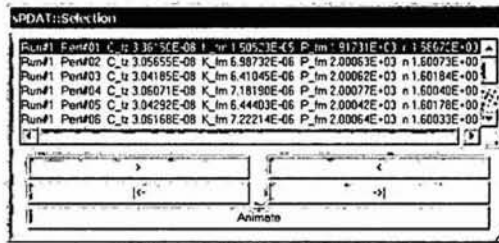


Figure 46. Exposed List Selections

This control was created by exposing the **Index Selection Value Source** selection property of an **Extract XY from XY Results** object. The title of the control is constructed from the object ID and the name of the exposed property.

Changing the selection with the mouse has the same effect as making the change on the unexposed control on the property window AND pressing Apply.

The four direction push buttons at the bottom assist in navigating the list: **>** increments the selection, **<** decrements the selection, **|<** goes to the first selection in the list, and **>|** goes to the end of the list.

The **Animate** button, when pressed, resets the selection to the start of the list, and then goes through each selection in order. While animating, the text in the button changes to **Stop**.

### 6.3.2.2 Exposed Reals

An example of an exposed real value control shown below in figure 47.

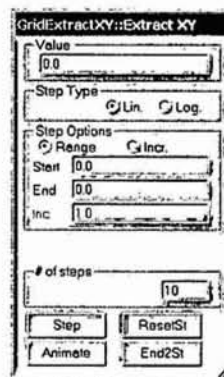


Figure 47. Exposed Real Value Control

This control example exposes the value of the **Extraction Constant Value Source** of an **Extract XY**

object (for extracting a slice from a grid). The exposed value is entered in the top field of the control. Typing in a new value and pressing the Enter key has the same effect as making the change on the unexposed control on the property page and pressing the Apply button.

The additional controls are designed to support animation (see Section 8.3.3) by smoothly varying the exposed value for a specified number of steps or frames. If the Step Options is set to Range the increment is calculated based on the Start and End value and the # of steps. If it is set to Incr. the increment is entered directly.

Step Type controls the type of increment. If set to Lin, range increments are calculated as:  $\text{increment} = (\text{end} - \text{start}) / \text{steps}$ , and successive values calculated as:  $\text{next} = \text{current} + \text{increment}$ . Log range increments are calculated as:  $\text{increment} = (\log_{10}(\text{end}) - \log_{10}(\text{start})) / \text{steps}$ , and successive values are calculated as  $\text{next} = 10^{**}(\log_{10}(\text{current}) + \text{increment})$ .

The control buttons perform the following actions:

- |                |   |
|----------------|---|
| <b>Step</b>    | Increment the current value.  |
| <b>Animate</b> | Set the current value to the start value, then increment the current value # of steps times. While animating, the button text changes to Stop. Pressing the button will stop the current animation. |
| <b>ResetSt</b> | Set the current value to the start value.   |
| <b>End2St</b>  | Set the start value to the current end value.   |

### 6.3.3 Formatting Real Numbers

There are many cases where it is desirable to control the format used to convert numeric values to strings. Examples include axes increment labels, posted data points on plots, etc. nSIGHTS uses a common control for this task:

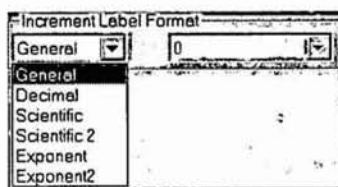


Figure 48. Increment Label Format for Real Numbers

The first field is a drop-down list that specifies the general formatting type, while the second field is used to specify the number of decimal places:

- |                |  |
|----------------|--|
| <i>General</i> | Conversion depends upon the value of the number being converted. Generally, decimal conversion is used for numbers of absolute value less than $1.0E+11$ and |
|----------------|--|

greater than 1.0E-05 (or 0), while scientific notation is used for all others. Trailing zeroes are generally eliminated, except that integer values less than 100 have a single decimal place (e.g. 99.0). The second field is not used for general.

- Decimal*      A fixed number of places after the decimal are specified.
- Scientific*    A fixed number of digits precision is specified.
- Scientific 2*   Same as *Scientific* except uses mantissa x 10\*\*X format in subscript/superscript notation.
- Exponent*     Expressed as 10 to a power using subscript/superscript notation. Note that the mantissa will be dropped. This is intended primarily for log axes and log data labels. Note that 10\*\*0 will be converted to 1.
- Exponent 2*   Same as *Exponent* only values with exponents between -1 and 2 will appear as 0.1, 1, 10, and 100.

Note that the *Scientific 2*, *Exponent*, and *Exponent 2* notations are not available for conversions that are not used for plotting labels.

The second field appears as follows in figure 49:

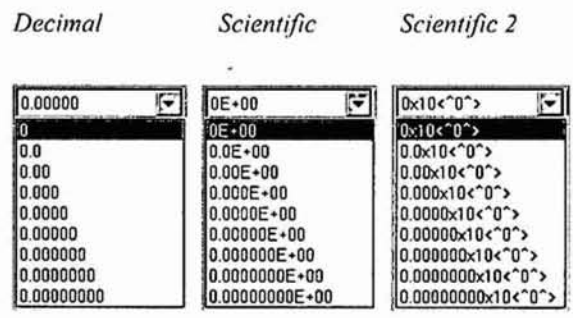


Figure 49. Field used to specify the number of decimal places.

### 6.3.4 Font Selection

nSIGHTS betrays its Unix origins by not using a standard Windows font selector. It restricts font usage to a limited number of alternatives in the interest of maintaining visual integrity. There are two main font dialogs available, differentiated by the fonts display dimension: 2D or 3D. The common font options for 2D and 3D display include:

- Fam:** Select font family.
- |                |                           |
|----------------|---------------------------|
| <u>Arial</u>   | A Helvetica Type font.    |
| <u>Times</u>   | Conventional Times Roman. |
| <u>Courier</u> | A Courier font.           |
- Wt:** Font weight: either Medium or Bold.
- Slnt:** Font slant: either Reg. or Italic.
- Size:** Size in points.

Fonts for display in 3D have the following additional fields:

- Thk** Thickness - governs the depth of the font in 3D. There are five alternatives:
- |                                   |  |
|-----------------------------------|--|
| <u>Flat</u>                       | Font is two-dimensional and will be invisible from the side. |
| <u>Thin, Med., Thick, V. Thk.</u> | Various qualitative degrees of depth.                        |

A third font dialog is available for some 2D labels that can be rotated to vertical:

- Rot** Rotation can be Horizontal, Left, or Right.

## 6.4 Global Objects

nPre and nPost contain common invisible or global objects. These objects cannot be created or deleted by the user. There are four types of global objects: system information objects, a standard pen set, default linear color maps and default nPre simulation objects.

### 6.4.1 System Information Objects

System information objects are intended for use with **Data Labels** plot objects. It provides a mechanism of identifying output graphics for QA and documentation purposes.

There are four system information object types:

- |              |   |
|--------------|---|
| Version      | The current nSIGHTS version identifier (e.g. VersionPre 0.90M). |
| Version date | The release date of the version.                                |
| Today        | The current date.   |
| Time         | The current time.   |

In drop-down lists within nPre, system information objects are identified as follows in figure 50:

Version	SysInfo	System	Global
Version date	SysInfo	System	Global
Today	SysInfo	System	Global
Time	SysInfo	System	Global

Figure 50. nPre System Information Object Drop-down List

The same object identification is used in nPost, without the *Global* object tree identifier.

## 6.4.2 Standard Pen Set and Linear Color Maps

**Pen Set** and **Linear Color Map** objects are required by most object tree setups, and are frequently the only pen set and linear color map objects required. Consequently, one pen set and two color map objects are available by default as global objects.

The default **Pen Set** object has an object ID of *Standard*. Likewise, the default **Linear Color Map** objects have an object ID of *Cold→Hot* and *Greyscale*. The *Cold→Hot* linear color map provides a rainbow color range from blue to red, where as the *Greyscale* linear color map provides a range of grey colors.

## 6.4.3 nPre Simulation Objects

nPre also contains a number of global objects which are created automatically by the simulator. These include tables of sample values and optimizer results, and XY data for each defined simulation output.

nPre simulation objects are identified in the same manner as all objects, with an object tree identifier of *Global*. For example, simulation pressure XY output would be identified as *sPDAT sPDAT f(i)Output Global*.

## 7 DATA PROCESSING: DATA OBJECTS

The data page contains data objects, which are objects that process data. For example, data can be input, scaled or transformed. Visualization of data objects is accomplished using plot pages and plot objects (see Section 8).

This section does not intend to detail every data object. It will discuss some data object concepts, and provide a summary of the available data objects and their function. Each data object is described in detail in Appendix A.

### 7.1 Data Object Concepts

This section is provided to describe the default data objects, data object controls, and the input for some of the more complex data objects.

#### 7.1.1 Default Data Objects

All data pages have one default object: a default data page description (*Default::DataPgDesc*). This data object contains an object ID that is used as the identifier for the page in the object tree. It also contains an empty text box that allows the user to document the collection of objects in the page.

#### 7.1.2 Tables in the Object Property Window

Two objects, **Enter Table** and **Enter XY**, contain spreadsheet-type tables within the object property window. An example **Enter Table** object property window is shown below in figure 51:

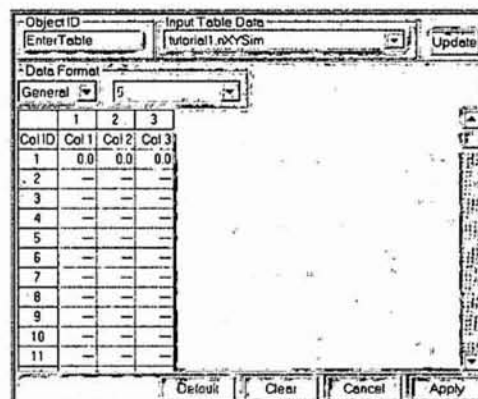


Figure 51. Enter Table in the Object Property Window



Values are entered into the cells. The Update button and the pop-up menu (accessed by right-clicking the mouse over the table) can be used to fill in the table with values.

Selecting an object in the input-data drop-down-box and clicking the Update button displays the values from the selected object in the table of the **Enter Table/XY Data** object. When the Apply button is clicked, the values are stored in the **Enter Table/XY Data** object. The values can then be modified. Reselecting the Update button will refresh the values in the table, and all modifications will be lost.

The pop-up menu contains the commands outlined below. Selected rows and columns are based on the cursor location upon activation of the pop-up menu.

<b>Insert Before</b>	Inserts a row above the selected row. For XY data only.
<b>Insert After</b>	Inserts a row below the selected row. For XY data only.
<b>Delete</b>	Deletes the selected row. For XY data only.
<b>Insert Row Before</b>	Inserts a row above the selected row. For table data only.
<b>Insert Row After</b>	Inserts a row below the selected row. For table data only.
<b>Delete Row</b>	Deletes the selected row. For table data only.
<b>Insert Column Before</b>	Inserts a column before the selected column. For table data only.
<b>Insert Column After</b>	Inserts a column after the selected column. For table data only.
<b>Delete Column</b>	Deletes the selected column. For table data only.
<b>Paste from Clipboard</b>	Pastes the contents of the clipboard into the table. For example, data in a spreadsheet can be copied and then pasted into the table.
<b>Copy to Clipboard</b>	Copies the entire contents of the table to the clipboard. The table can then be pasted into a spreadsheet or text editor.

### 7.1.3 Scale/Transform Objects

Scale/transform objects perform mathematical operations on input data. Common options include:

**Operation Order**

*Scale* → *Transform*

The object will perform the scale operation, then the transform, in this order.

*Transform* → *Scale*

The object will perform the transform, then the scale operation, in this order.

**Scale Operation**

Drop-down list containing four different equations that determine the scale operation, where  $D$  is the data,  $S_c$  is the Scale Value and  $Off$  is the Offset Value.

**Transform**

Drop-down list containing several transform functions (e.g.  $\ln(Data)$ ,  $1/Data$ ,  $Abs(Data)$ , etc.)

**Scale Value Source**

Master and expose controls for the scale value. See Section 6.3.1 for details.

**Scale Value**

Text box for input of a scale value.

**Offset Value Source**

Master and expose controls for the scale value.

**Offset Value**

Text box for input of an offset value.

**Null Processing**

set to constant

When active, will set all null values to the constant specified in the constant text box.

Constant

Text box to input a constant value that will replace all null values.

**Minimum Thresholding**

*None*

Does not apply a minimum threshold.

*Null*

Sets all values below the text box value as null.

*Clamp*

Sets all values below the text box value at the text box value.

**Maximum Thresholding**

*None*

Does not apply a maximum threshold.

*Null*

Sets all values above the text box value as null.

*Clamp*

Sets all values above the text box value at the text box value.

**Output Description**

Provides a description of the object, which will be used as the object type in drop-down lists, and the label of the

object in a **Series Legend**.

### 7.1.4 Interpolation Methods

**Interpolate XY data from Curve, Time Limits Extraction/Interpolation and Sequence Fit** use common interpolation methods, described below:

<i>Linear</i>	Conducts a linear interpolation of the Y data for a specified number of X points, within specified X limits.
<i>Log (Absolute)</i>	Conducts a linear interpolation of the Y data for a specified number of log X points, within specified X limits.
<i>Log (Relative)</i>	Conducts a linear interpolation of the Y data for a specified number of newly created log X points, within specified X limits. X points are created using log steps starting from a specified start value.
<i>Input X</i>	Conducts a linear interpolation of the Y data for given X values from XY input data. For <b>Time Limits Extraction/ Interpolation and Sequence Fit</b> , this method results in no interpolation.

The **Interpolate Table Column** object uses different interpolation methods (note that X data must be in ascending order):

<i>Linear</i>	Linearly interpolates a Y value corresponding to an X value equal to the specified interpolant value.
<i>Previous</i>	Obtains the Y value corresponding to the X value of the row above the specified interpolant value.
<i>Next</i>	Obtains the Y value corresponding to the X value of the next row below the specified interpolant value.
<i>Closest</i>	Obtains the Y value corresponding to the X value closest to the specified interpolant value.

The interpolation methods used by **Create Curve from XY Data**, are described in Section 7.1.5.

## 7.1.5 Curve Data Functions

When creating curve data (**Create Curve from XY Data**), several data functions or interpolation methods are available. Examples based on the same set of XY data, are shown for each data function.

### *Cubic Spline*

A piecewise polynomial approximation of XY data, continuous in the first and second derivatives, provides a smooth approximation. Parameters are available for this curve type to influence the function slopes at the extremes of the function and the spline tension.

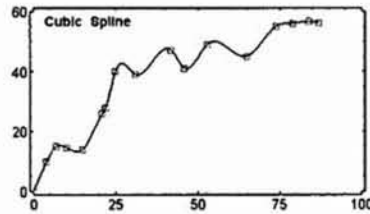


Figure 52. Cubic Spline of XY Data

### *Polynomial*

Linear regression of XY data at a specified polynomial order. A polynomial order, between 1 to 10, is specified.

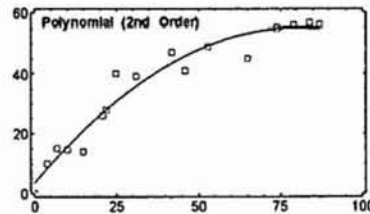


Figure 53. Polynomial (2<sup>nd</sup> Order) of XY Data

### *Linear*

A series of straight lines joining consecutive XY points.

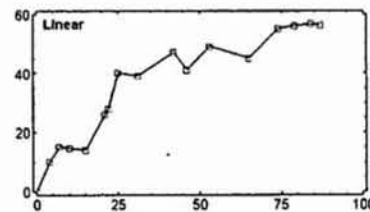


Figure 54. Linear of XY Data

*StepMid*

Step function with value change at the linear midpoint between adjacent points.

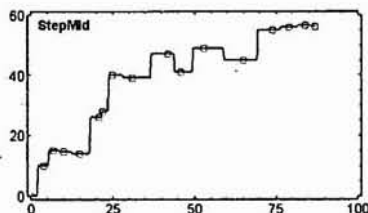


Figure 55. StepMid of XY Data

*StepFull*

Step function with value change at each XY point.

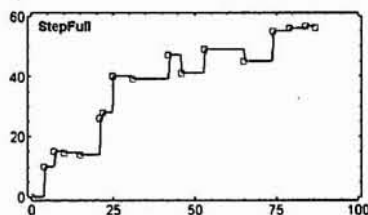


Figure 56. StepFull of XY Data

## 7.2 Data Object Summary

Due to the large number of data objects, it is not possible to list all data objects in a single selection menu. Consequently, nSIGHTS categorizes data page objects and requires an additional step (category selection) to get the actual object selection menu. The data object category menus in nPre and nPost are as follows in figure 57:

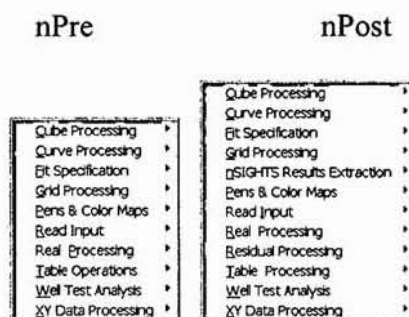


Figure 57. nPre and nPost Data Object Category Menus

Objects in each category are listed in the table below. Note that some objects appear in more than one category (for example, **Read Table File** appears in both Read Input and Table Operations categories).

<b>Table 7.1: Data Object Summary</b>			
<b>Category</b>	<b>Objects</b>	<b>nPre Objects</b>	<b>nPost Objects</b>
Cube Processing	Extract Cube Indexes Extract Grid Histogram Matrix Math Normalize Scale/Transform Statistics	Select Range Cube	
Curve Processing	Create Curve from XY Data Interpolate XY Data from Curve	Write Curve File	Select Curve from File
Fit Specification	(Basic) Single Fit Composite Fit	Sequence Fit	
Grid Processing	Extract XY Histogram Matrix Math Normalize Scale/Transform Statistics	Select Range Grid	
nSIGHTS Results Extraction			Extract Covariance Matrices Extract Jacobian Extract Optimizer Results Table Extract Profile Grid Extract Range Cube Extract Range Grid Extract Residuals Extract XY from XY Results
Pen and Color Maps	Linear Color Map Merge Color Maps Pen Set Read Color Map	Write Color Map	

Read Input	Read Table File Read XY Data Read XYZ Label Data		Read Cube Data Read Color Map Read Curve File Read Grid Data Read nSIGHTS Optimizer Results Read nSIGHTS Profile Results Read nSIGHTS Range Results Read nSIGHTS XY Results Read Sequence Time Interval Data
Real Processing	Create Real Value Scale/Transform		
Residual Processing			Calculate Basic Residual Calculate Residual Diagnostic Extract Residuals
Table Operations	Enter Table Data Extract Real from Table Extract Table Rows Full Table Correlations Interpolate Table Columns Real Value(s) To Table Read Table File Sum Tables Table Column Correlations Table Column Math Table Column Statistics Table Column To Histogram Table Columns To XY Table Row Statistics View Table Data	Write Table File	Jacobian to Table Table Column Scale/Transform Table Row Index Logic
Well Test Analysis	Extract Sequence(s) P(t) Derivative Calculation P(t) Time Processing Pulse Normalization Time Limits Extraction/Interpolation		



XY Data Processing	Add Noise Dual Scale/Transform Enter XY Data Extract Range Fourier Transform on Y Histogram Integrate Select XY from XY Array Single Scale/Transform Smooth/Filter Statistics Read XY Data Reduction Remove Duplicates Transpose Vector Math View XY Data	Create XY Array Write XY File	Add XY to Array Array Scale/Transform
--------------------	---	----------------------------------	--

### 7.3 Data Object Function Summary

Table 7.2 summarizes the function of all the data objects available. In addition, the required input object or data type and the created output data type is specified. If the input or output is not an object or external file (e.g. input from user), the input or output will be specified as none. Note that for read objects, the default file extension is not required when opening a file.

Object	Function/Input
Add Noise	Adds noise to Y data randomly based on a <i>Uniform</i> or <i>Normal</i> distribution. Used to create synthetic data. <b>Input:</b> XY data <b>Output:</b> XY data
Add XY to Array	Creates a collection of XY data from a single XY data object. Each time a change is made in the specified XY data object, the new XY data are added to the array. For example, if an <b>Extract XY</b> object (extracts XY data from a grid) is used as input, each time the <u>Extraction Constant Value</u> in the <b>Extract XY</b> object is changed (including pressing the Apply button), the new XY data will be added to the array. <b>Input:</b> XY data <b>Output:</b> XY array
Array Scale/Transform	Performs mathematical operations on XY array data types. <b>Input:</b> XY array <b>Output:</b> XY array
(Basic) Single Fit	Pairs field and simulated data to be selected as a constraint by the Fit Selection tab in the Fit Specification nPre input window. Typically used in the Fit Specification/Graphics tab of the Fit Specification nPre input window. <b>Input:</b> XY data

	<b>Output:</b> fit specification
Calculate Basic Residual	Processes residuals from selected residual data. Residuals can be sorted in ascending ( <u>Up</u> ) or descending ( <u>Down</u> ) order, plotted versus the <u>X Value</u> or the data <u>Index</u> , and/or standardized to make the data comparable to a standard normal probability distribution. <b>Input:</b> <b>Extract Residuals</b> <b>Output:</b> XY data
Calculate Residual Diagnostic	Creates data to plot a <u>Quantile Normal</u> or <u>Standard</u> normal residual plot. <b>Input:</b> <b>Extract Residuals</b> <b>Output:</b> Two XY data sets, one containing the manipulated data, the second a diagnostic line (Quantile Line or CumNormDist)
Composite Fit	Combines fit specification objects to be selected as one constraint by the <b>Fit Selection</b> tab in the <b>Fit Specification nPre</b> input window. A fit specification object contains a pair of field and simulated data to be selected as constraint. Typically used in the <b>Fit Specification/Graphics</b> tab of the <b>Fit Specification nPre</b> input window. <b>Input:</b> <b>Single Fit</b> or <b>Composite Fit</b> <b>Output:</b> fit specification
Create Curve from XY Data	Creates functional approximations of XY data sets. The functions available include: <i>Linear</i> , <i>Cubic Spline</i> , <i>Polynomial</i> , <i>Step Mid</i> and <i>Step Full</i> (see Section 7.1.5 for details). <b>Input:</b> XY data <b>Output:</b> curve data
Create Real Value	Outputs a single user-specified value, which can be used as input for many other objects. <b>Input:</b> none <b>Output:</b> real value
Create XY Array	Creates a collection of XY data. <b>Input:</b> XY data <b>Output:</b> XY array
Dual Scale/Transform	Performs mathematical operations on both the X and the Y of XY data. <b>Input:</b> XY data <b>Output:</b> XY data
Enter Table Data	Allows the user to input or modify table data. Table data can be input or modified by hand, pasted from the clipboard, or updated from another table data-type object (see Section 7.1.2 for details). <b>Input:</b> none or table data <b>Output:</b> table data
Enter XY Data	Allows the user to input or modify XY data. XY data can be input or modified by hand, pasted from the clipboard, or updated from another XY data-type object (see Section 7.1.2 for details). <b>Input:</b> none or XY data <b>Output:</b> XY data
Extract Covariance Matrices	Extracts covariance matrices from one or multiple simulations of an nSIGHTS Optimizer Results object. <u>Estimated</u> covariance matrices use the estimated standard deviation specified by the user for each parameter. The confidence limits of the covariance matrix can be

	<p>plotted using the <b>Confidence Limits</b> plot object.</p> <p><b>Input:</b> nSIGHTS Optimizer Results</p> <p><b>Output:</b> covariance data</p>
Extract Cube Indexes	<p>Extracts cube indices from cube data within set limits. Cube indices are used to define the cube data to be plotted in a 3D plot.</p> <p><b>Input:</b> cube data</p> <p><b>Output:</b> cube indices</p>
Extract Grid	<p>Extracts a grid from cube data such that every point of the grid represents a specified constant value.</p> <p><b>Input:</b> cube data</p> <p><b>Output:</b> grid data</p>
Extract Jacobian	<p>Extracts Jacobian data from one or multiple simulations of an nSIGHTS Optimizer Results object.</p> <p><b>Input:</b> nSIGHTS Optimizer Results</p> <p><b>Output:</b> Jacobian data</p>
Extract Optimizer Results Table	<p>Extracts a table containing optimized values, case parameters and/or optimization status from one or multiple simulations of an nSIGHTS Optimizer Results object.</p> <p><b>Input:</b> nSIGHTS Optimizer Results</p> <p><b>Output:</b> table data</p>
Extract Profile Grid	<p>Extracts a grid from one or multiple simulations of an nSIGHTS Profile Results object.</p> <p><b>Input:</b> nSIGHTS Profile Results</p> <p><b>Output:</b> grid data</p>
Extract Range	<p>Extracts XY data within a specified range.</p> <p><b>Input:</b> XY data</p> <p><b>Output:</b> XY data</p>
Extract Range Cube	<p>Extracts cube data from one or multiple simulations of an nSIGHTS Range Results object.</p> <p><b>Input:</b> nSIGHTS Range Results</p> <p><b>Output:</b> cube data</p>
Extract Range Grid	<p>Extracts a grid from one or multiple simulations of an nSIGHTS Range Results object.</p> <p><b>Input:</b> nSIGHTS Range Results</p> <p><b>Output:</b> grid data</p>
Extract Real from Table	<p>Extracts a table column property (number of rows, minimum value, maximum value, last row value, or specified row value) and converts it to a real data-type. The real value is displayed in the object property window, in the <b>Current Value</b> frame.</p> <p><b>Input:</b> table data</p> <p><b>Output:</b> real value</p>
Extract Residuals	<p>Extracts residuals (XY data) from one or multiple simulations of an nSIGHTS Optimizer Results object.</p> <p><b>Input:</b> nSIGHTS Optimizer Results</p> <p><b>Output:</b> XY data</p>
Extract Sequence(s)	<p>Extracts XY data for one or multiple sequences, based on the sequences</p>

	<p>defined by sequence time data.</p> <p><b>Input:</b> XY data and <b>Sequence Time Interval Data</b></p> <p><b>Output:</b> XY data</p>
Extract Table Rows	<p>Extracts a range of rows from a table column based on specified limits.</p> <p><b>Input:</b> table data</p> <p><b>Output:</b> table data</p>
Extract XY	<p>Extracts all X data from a grid corresponding to a specified constant Y value, or all Y data for a specified constant X value.</p> <p><b>Input:</b> grid data</p> <p><b>Output:</b> XY data</p>
Extract XY from XY Results	<p>Extracts one set of XY data from one or multiple simulations of an nSIGHTS XY Results object.</p> <p><b>Input:</b> nSIGHTS XY Results</p> <p><b>Output:</b> XY data</p>
Fourier Transform on Y	<p>Conducts a forward or inverse Fourier transform on Y data.</p> <p><b>Input:</b> XY data</p> <p><b>Output:</b> XY data</p>
Full Table Correlations	<p>Calculates the Pearson R or Spearman R correlation coefficients between all column pairs within a table.</p> <p><b>Input:</b> table data</p> <p><b>Output:</b> table data</p>
Histogram	<p>Creates the input data for a histogram plot based on cube, grid or XY data. The actual histogram is plotted using an <b>XY Series</b> plot object on a plot page, with this object as the input. Note there are separate objects for each data type.</p> <p><b>Input:</b> cube, grid or XY data</p> <p><b>Output:</b> cube, grid or XY data</p>
Integrate	<p>Takes the integral of XY data.</p> <p><b>Input:</b> XY data</p> <p><b>Output:</b> XY data</p>
Interpolate Table Columns	<p>Interpolates Y values based on a given value for X (the interpolant value value). Values in the X table column must be in order of increasing values.</p> <p><b>Input:</b> table data</p> <p><b>Output:</b> real value</p>
Interpolate XY Data from Curve	<p>Interpolates XY values based on curve data, for a specified number of points and specified limits. This allows curve data to be plotted.</p> <p><b>Input:</b> curve data and if <i>input X</i> interpolation method, XY data</p> <p><b>Output:</b> XY data</p>
Jacobian to Table	<p>Converts Jacobian data to table data.</p> <p><b>Input:</b> Jacobian data</p> <p><b>Output:</b> table data</p>
Linear Color Map	<p>Creates a color map with a linear variation between starting and ending RGB or HSV values.</p> <p><b>Input:</b> none</p> <p><b>Output:</b> color map</p>
Matrix Math	<p>Basic array mathematics (+, -, *, /) can be applied to two sets of cube data</p>

	<p>or grid data. Note there are separate objects for each data type.</p> <p><b>Input:</b> cube or grid data</p> <p><b>Output:</b> cube or grid data</p>
Merge Color Maps	<p>Combines two color maps.</p> <p><b>Input:</b> color map</p> <p><b>Output:</b> color map</p>
Normalize	<p>Normalizes cube and grid data within specified data limits, based on a power value or both. Note there are separate objects for each data type.</p> <p><b>Input:</b> cube or grid data</p> <p><b>Output:</b> cube or grid data</p>
P(t) Derivative Calculation	<p>Calculates the derivative of a pressure function (P(t)).</p> <p><b>Input:</b> XY data</p> <p><b>Output:</b> XY data</p>
P(t) Time Processing	<p>Applies one of four time functions to X data (<u>Horner</u>, <u>Agarwal</u>, <u>Horner Super</u> or <u>Bourdet Super</u>). Used to create plots that require a time function for the X axis, such as a Horner plot.</p> <p><b>Input:</b> XY data</p> <p><b>Output:</b> XY data</p>
Pen Set	<p>Creates a set of pens that can be used in plotting. Normally, the default Standard Pen Set is all that is required.</p> <p><b>Input:</b> none</p> <p><b>Output:</b> pen set</p>
Pulse Normalization	<p>Normalizes pressure XY data based on one of two equations: <math>(P_i - P(t)) / (P_i - P_0)</math> and <math>1 - (P_i - P(t)) / (P_i - P_0)</math>, where <math>P_i</math> is the static pressure and <math>P_0</math> is the initial pulse pressure. Both <math>P_i</math> and <math>P_0</math> are to be specified in the object property window.</p> <p><b>Input:</b> XY data</p> <p><b>Output:</b> XY data</p>
Read Color Map	<p>Reads a color map from a specially formatted text file (default file extension: *.cmap). This allows creation of color maps outside nSIGHTS (for example, in an Excel spreadsheet) to meet special requirements.</p> <p><b>Input:</b> external file</p> <p><b>Output:</b> color map</p>
Read Cube Data	<p>Reads cube data from an input file (default file extension: *.cube).</p> <p><b>Input:</b> external file</p> <p><b>Output:</b> cube data</p>
Read Curve File	<p>Reads a curve data file (default file extension: *.nCRV). A curve file may contain several curve data sets.</p> <p><b>Input:</b> external file</p> <p><b>Output:</b> curve data file for <b>Select Curve File</b></p>
Read Grid Data	<p>Reads grid data from an input file (default file extension: *.grd).</p> <p><b>Input:</b> external file</p> <p><b>Output:</b> grid data</p>
Read nSIGHTS Optimizer Results	<p>Reads an nSIGHTS optimizer simulation results file (default file extension: *.nOpt), specified in the <b>Output File Setup</b> nPre input window.</p> <p><b>Input:</b> external file</p> <p><b>Output:</b> optimizer results file to be used by <b>Extract Covariance</b></p>

	<b>Matrices, Extract Jacobian, Extract Optimizer Results Table and Extract Residuals</b>
Read nSIGHTS Profile Results	Reads an nSIGHTS profile simulation results file (default file extension: *.nPro), specified in the <b>Output File Setup nPre</b> input window. <b>Input:</b> external file <b>Output:</b> profile results file used by <b>Extract Profile Grid</b>
Read nSIGHTS Range Results	Reads an nSIGHTS range simulation results file (default file extension: *.nRng), specified in the <b>Output File Setup nPre</b> input window. <b>Input:</b> external file <b>Output:</b> range results file used by <b>Extract Range Cube</b> and <b>Extract Range Grid</b>
Read nSIGHTS XY Results	Reads an nSIGHTS XY simulation results file (default file extension: *.nXYSim), specified in the <b>Output File Setup nPre</b> input window. <b>Input:</b> external file <b>Output:</b> XY results file used by <b>Extract XY from XY Results</b>
Read Table File	Reads tabular data from a file. <b>Input:</b> external file <b>Output:</b> table data
Read XY Data	Reads a list of XY points from a file (default file extension: *.dat). <b>Input:</b> external file <b>Output:</b> XY data
Read XYZ Label Data	Reads a list of XYZ co-ordinates and associated text labels from a file. <b>Input:</b> external file <b>Output:</b> XYZ label
Real Value(s) To Table	Converts real values into table data. <b>Input:</b> real value <b>Output:</b> table data
Reduction	Reduces the number of XY points by skipping points or by only keeping points with a change in value greater than a specified maximum. <b>Input:</b> XY data <b>Output:</b> XY data
Remove Duplicates	Removes duplicate values from X data, Y data or both. Duplicates can be considered values that have differences less than a specified value. <b>Input:</b> XY data <b>Output:</b> XY data
Scale/Transform	Performs mathematical operations on a single real input value, cube data or grid data. Note there are separate objects for each data type. <b>Input:</b> real value, cube data or grid data <b>Output:</b> real value, cube data or grid data
Select Curve from File	Selects a curve from a curve file. A curve file may contain several sets of curve data. <b>Input:</b> <b>Curve File</b> <b>Output:</b> curve data
Select Range Cube	Used in real-time processing, allows the selection of a range cube data set available during a run. Only for range mode simulations with three variables specified as range variables. <b>Input:</b> cube data



	<b>Output:</b> cube data
Select Range Grid	Used in real-time processing, allows the selection of a range grid data set available during a run. Only for range mode simulations with two variables specified as range variables. <b>Input:</b> grid data <b>Output:</b> grid data
Select XY from XY Array	Select an XY data set from an XY array. An XY array is a collection of XY data sets. <b>Input:</b> XY array <b>Output:</b> XY data
Sequence Fit	Similar to (Basic) Single Fit, except the fit can be limited to a range of time or sequences. The Y data may also be interpolated based on synthetic X data (See Section 7.1.4 for details). No interpolation occurs if <i>Input X</i> is selected as the <u>Interpolation Method</u> . <b>Input:</b> XY data <b>Output:</b> fit specification
Sequence Time Interval Data	Reads a sequence time data file (default file extension: *.seqt). <b>Input:</b> external file <b>Output:</b> sequence time data file for <b>Extract Sequence(s)</b>
Single Fit	See (Basic) Single Fit
Single Scale/Transform	Performs mathematical operations on either the X or the Y of XY data. <b>Input:</b> XY data <b>Output:</b> XY data
Smooth/Filter	Filters and smoothes XY data using one of the following methods: <i>FFT smooth, Median smooth, low pass and high pass</i> . <b>Input:</b> XY data <b>Output:</b> XY data
Statistics	Calculates basic statistics (e.g. sum, mean, minimum, maximum, etc.) for X, Y cube or grid data. Four basic statistics are selected for output as real values, typically used as data labels on a plot. <b>Input:</b> XY, cube or grid data <b>Output:</b> 4 real values
Sum Tables	Sums the values between multiple tables. For example, the value in column 2, row 1 of Table A will be added to column 2, row 1 of Table B. A specified X column will not be summed. <b>Input:</b> table data <b>Output:</b> table data
Table Column Correlations	Calculates the Pearson R and Spearman R correlation coefficients between two specified columns of a table. <b>Input:</b> table data <b>Output:</b> real values
Table Column Math	Basic mathematics (+, -, *, /) are applied to two table columns. <b>Input:</b> table data <b>Output:</b> table data
Table Column Scale/Transform	Performs mathematical operations on a specified column of a table. <b>Input:</b> table data <b>Output:</b> table data
Table Column Statistics	Displays basic statistics (e.g. sum, mean, minimum, maximum, etc.) for a specified column of a table. Four basic statistics are selected for output



	as real values, typically used as data labels on a plot. <b>Input:</b> table data <b>Output:</b> 4 real values
Table Column To Histogram	Creates the input data for a histogram plot based on a specified column of a table. The actual histogram is plotted using an <b>XY Series</b> plot object on a plot page, with this object as the input. <b>Input:</b> table data <b>Output:</b> XY data
Table Columns To XY	Extracts two specified columns from a table to create XY data. <b>Input:</b> table data <b>Output:</b> XY data
Table Row Index Logic	Conducts Boolean Logic (AND, OR, XOR) between two sets of table rows. <b>Input:</b> <b>Extract Table Rows</b> <b>Output:</b> table data
Table Row Statistics	Displays basic statistics (e.g. sum, mean, minimum, maximum, etc.) for a specified row of a table. Four basic statistics are selected for output as real values, typically used as data labels on a plot. <b>Input:</b> table data <b>Output:</b> 4 real values
Time Limits Extraction/Interpolation	Extracts XY data for a range of sequences or time and within specified data limits, and interpolates the extracted data. <b>Input:</b> XY data and <b>Sequence Time Interval Data</b> if <u>Sequence Range Time Data</u> selected. <b>Output:</b> XY data
Transpose	Switches the X and Y data (i.e. output X = input Y and output Y = input X). <b>Input:</b> XY data <b>Output:</b> XY data
Vector Math	Basic array mathematics (+, -, *, /) can be applied to two sets of XY data. <b>Input:</b> XY data <b>Output:</b> XY data
View Table Data	Allows the user to view table data created in another object. <b>Input:</b> table data <b>Output:</b> table data
View XY Data	Allows the user to view XY data created in another object. <b>Input:</b> XY data <b>Output:</b> XY data
Write Color Map	Writes a color map to a file. <b>Input:</b> color map <b>Output:</b> external file
Write Curve File	Writes single or multiple curve data to a file. <b>Input:</b> curve data <b>Output:</b> external file
Write Table File	Writes a table to a file. <b>Input:</b> table data <b>Output:</b> external file

Write XY File	Writes XY data to a file. <b>Input:</b> XY data <b>Output:</b> external file
---------------	--

## 8 PLOTTING

nSIGHTS supports two basic types of plots: a 2D XY Plot and a 3D XYZ Plot.

When a plot page is created through the page menu, several things happen:

- 1) A new page is created in the object tree.
- 2) Default objects are added to the new page tree.
- 3) A new top level window is created containing the basic plot. At creation the plot will contain only axes and axes increment labels.

This section will provide a basic overview of nSIGHTS's plotting capabilities. Plot objects and their function will be discussed, as well as user interaction with plots and plot output.

### 8.1 Plot Objects

Plot objects are objects that are placed on a plot page and create a visual representation on the plot window. It is necessary to add plot objects before any meaningful visualization (other than bare axes and axes/increment labels) is produced.

This section does not intend to detail every plot object. It will discuss plot object types, general plot object concepts and summarize the available plot objects and their associated function. Each plot object is described in detail in Appendix B.

#### 8.1.1 Plot Object Types

Plot objects are categorized into the following object types:

***Default***

Plot objects that are automatically created upon the creation of a plot page. They control the general layout of the plot and provide a user-interface for setting axes and formatting options.

***Data display***

Plot objects that provide a visual representation of input objects using the co-ordinate system defined by the plot axes. Visual output is clipped within this co-ordinate system. Data display objects cannot be selected with the cursor, although some data display objects report values based on the cursor location.

**Annotation**

Plot objects that help explain the data display, such as a title or a legend. Using a non-spatial 0 to 100 co-ordinate system for placement, annotation objects can be located anywhere within the plot window. When the cursor is over an annotation object, it will be outlined with a red rectangle. After selecting the rectangle with the left mouse button, the rectangle can be dragged to a new position on the plot. nSIGHTS will not allow the rectangle to be dragged out of the plot window.

**Selection or Active**

Plot objects used to select, enter and/or modify data on the plot with the mouse.

The different object types are differentiated by the available options in the Plot Settings box in the upper-right corner of the object property window. All non-default plot object types have a Plot toggle in the Plot Settings box, that determines whether the object is to be visible on the plot or not.

For **2D Data Display** objects, a Layer drop-down box is used to set visibility (see Section 8.1.2.1 below). For data display objects with reporting capabilities, a Report toggle enables the objects reporting function (see Section 8.1.2.2).




Figure 58. 2D Data Display Object Plot Settings Box

For **3D Data Display** objects, the Poly Off value is used to fine-tune 3D object visibility (see Section 8.1.2.1 below).




Figure 59. 3D Data Display Object Plot Settings Box

For **Annotation** objects, there are no options in the Plot Setting box except for the Plot toggle box.




Figure 60. Annotation Plot Settings Data Display Object

For *Selection/Active* objects, a Layer drop-down-box is used to set visibility, as with 2D data display objects. If the Active toggle box is selected, the plot object will respond to mouse-clicks when a plot is in selection mode. For example, for a **Modify: Enter/Edit XY** object, an XY point will be created at the location of the mouse-click on the 2D window.




Figure 61. Selection/Active Plot Settings Data Display Object

## 8.1.2 Plot Object Concepts

### 8.1.2.1 Plot Object Visibility

Objects are drawn on the plot in the order that they are created (the order that appears in the object tree). On a 2D plot, any object plotted before and in the same location as an object that produces a solid color fill, such as **Color Block** or **Grid Color Fill**, will be visually obliterated by the solid color fill. For example, if a contour object (**Grid Contour** object) is created before a fit surface object (**Grid Color Block** object), the contours will be hidden by the solid color fill on the plot. If the fit surface object is created before the contours, both objects will be visible on the plot.

To address this issue for 2D plots, plot object visibility is controlled with *Plot Layers*. Every data display and selection/active object in a 2D plot is assigned to a layer from 0 to 7. Objects are plotted by ascending layer index (i.e. all layer 0 objects are plotted, followed by layer 1, followed by layer 2, etc). Within a layer, objects are plotted in order of definition, except if 2D anti-aliasing is effective (see Section 2.4.4). In this case, solid objects are plotted first, followed by lines.

Annotation plot objects do not have a layer assignment. Conceptually, all annotation objects are viewed as existing on layer 8. They are the last objects plotted, and they are plotted in order of definition on each page.

For a 3D plot, object visibility is governed by geometry. An exception occurs when two objects are plotted in the same place. In this case, the last object plotted will be visible. Another exception occurs when lines are plotted at the edges of, or over, polygons. Because of imprecisions in the OpenGL renderer, the lines may appear stitched, with intermittent visibility. These stitched lines can be rectified through the use of a polygon offset (PolyOff in the **Plot Settings**

box).




Figure 62.

This field is only available for 3D plot objects that plot polygons. It slightly modifies the position of the polygon, allowing the user to ensure that lines are visible. The effect of specific values depends upon the version of OpenGL (1.0 or 1.1) and the depth in bits of the Z buffer. Generally, if a polygon offset is required, a PolyOff value of 1.0 is acceptable.

There are special concerns for plot object visibility when producing Postscript output. These are described in Section 8.3.1.

### 8.1.2.2 2D Plot Object Reporting

Many data display plot objects on 2D plots have a *report* capability. With the report capability active (Report toggle checked in the **Plot Settings** frame), the object will display values associated with the cursor position in the *report area* of the 2D plot window. For example, the **Table Series** object will report the XY values of the data point closest to the cursor.

The *report area* is located in the control bar at the bottom of the 2D plot window, adjacent to the XY cursor location display. The report area for an object will be framed and includes the object's ID at the top. The control bar, including the XY cursor location display and the report area, can be turned off by selecting **View**→**Control Bar** in the 2D plot window menu bar, or turning off the Show Report Area toggle box in the **Format** frame of the **2D XY Main Menu** object's property window.

### 8.1.3 Plot Object Summary

Available plot objects are summarized by type and availability in the following table.

Type	Objects	2D Objects	3D Objects
Default	X Axis Y Axis	2D-XY 2D Plot Anno	3D-XYZ Z Axis 3D Axes Label 3D Axes Format 3D Lighting

Annotation	Color Legend Data Labels Series Legend User Labels	Extra Grid Lines Sequence Grid Lines XY Labels	XYZ Labels
Data Display	Confidence Limits (nPost only) Grid Color Block Grid Color Fill Grid Color Point Grid Contour Grid Fishnet XY Series	Multiple Table Series Single Table Series Table Histogram XY Array Horsetail (nPost only) XY Histogram	Cube Color Block Cube Color Point Table Series
Selection/ Active		Modify: Enter/Edit XY Analytics: Line Data	

### 8.1.4 Default Plot Objects

Default plot objects control the general layout of the plot and provide a user-interface for setting axes and formatting options. Default object property windows vary slightly according to plot type, and are described in detail in Appendix B. Table 8.2 summarizes the default plot objects.

<b>Table 8.2: Default Plot Objects Function Summary</b>	
<b>Object</b>	<b>Function</b>
<b>2D Plots</b>	
2D XY Main Menu	Controls the general layout and characteristics of 2D XY plots.
2D XY Axes	Defines the plot axes. There is one object for the X axis and one for the Y axis, each with identical object property windows.
2D Plot Annotation	Provides control over axes labelling and the general appearance of all 2D XY plots.
<b>3D Plots</b>	
3D XYZ Main Menu	Controls the general layout and characteristics of 3D XYZ plots.
3D XYZ Axes	Defines the plot axes. There is one object for the X axis, one for the Y axis and one for the Z axis, each with identical object property windows.
3D Axes Labels	Provides control over axes labelling for 3D plots.
3D Axes Format	Provides control over general formatting of 3D plot axes.
3D Lighting	Provides control over Open GL lighting used on all 3D plots.

### 8.1.5 Data Display Plot Objects

Table 8.3 summarizes the function of all the data display plot objects available. In addition, the object input required for each object is specified.

<b>Table 8.3: Data Display Plot Objects Function Summary</b>	
<b>Object</b>	<b>Function/Input</b>
Confidence Limits	Plots single or dual confidence limits of a covariance matrix. <b>Input: Extract Covariance Matrices</b>



Cube Color Block	Plots color blocks around each cube data value for specified cube indices within specified cube value limits. <b>Input:</b> cube data, cube indexes and color map
Cube Color Point	Plots color points at each cube data value for specified cube indices within specified cube value limits. <b>Input:</b> cube data, cube indexes and color map
Grid Color Block	Plots color blocks around each node of the grid within specified grid value limits. <b>Input:</b> grid data and color map
Grid Color Fill	Plots color filled contours of the nodes of a grid within specified grid value limits. <b>Input:</b> grid data and color map
Grid Color Point	Plots color points representing each node of the grid within specified grid value limits. <b>Input:</b> grid data and color map
Grid Contour	Plots single color contours of the nodes of a grid at specified grid values. <b>Input:</b> grid data
Grid Fishnet	Plots grid lines of the grid, connecting all nodes of the grid. The number of grid lines can be reduced, based on an X and Y modulus.
Multiple Table Series	Plots one X and one Y column from multiple selected tables using symbols and/or lines. <b>Input:</b> table data
Single Table Series	Plots selected columns from single table using symbols and/or lines. Only one column is selected as the X data column. Multiple columns can be selected for the Y data. <b>Input:</b> table data
Table Histogram	Plots two columns of table data as bars in a standard histogram format. <b>Input:</b> table data
Table Series	Plots selected columns from single table using symbols and/or lines in a 3D plot. Only one column is selected for each the X, Y and Z data columns. <b>Input:</b> table data
XY Array Horsetail	Plots all XY data sets contained within an XY array. Within the <b>Horsetail Color</b> frame, selection of <u>Pen</u> will draw all data set lines in the same color, whereas selection of <u>Color Map</u> will draw each data set line in a different color. <b>Input:</b> XY array
XY Histogram	Plots XY data as bars in a standard histogram format. <b>Input:</b> XY data
XY Series	Plots multiple XY data sets using symbols and/or lines. <b>Input:</b> XY data

### 8.1.6 Annotation Plot Objects

Table 8.4 summarizes the function of the annotation plot objects available. In addition, the object input required for each object is specified. If the input is none, the input required for the object is to be typed by the user.

Object	Function/Input
Color Legend	Plots a color bar to indicate the color associated with each value. <b>Input:</b> Color Cube Block, Color Cube Point, Color Grid Block, Color Grid Fill, Color Cube Point, XY Array Horsetail.

Data Labels	Creates a label block showing the status/value of selected object parameters. For real valued labels, the label format can be specified. <b>Input:</b> many objects produce one or more label outputs
Extra Grid Lines	Plots a grid line at a specified X or Y value. The grid line may also be labelled. <b>Input:</b> none
Sequence Grid Lines	Plots grid lines to define sequence intervals. <b>Input:</b> Sequence Time Interval Data
Series Legend	Creates a legend block containing line/symbol information from one or more input objects. <b>Input:</b> Confidence Limits, Grid Contour, Grid Fishnet, Multiple Table Series, Single Table Series, Table Series, XY Array Horsetail, XY Series.
User Labels	Creates a text block containing user entered text. <b>Input:</b> none
XY Labels	Plots 3D labels in a 2D data space. <b>Input:</b> Read XYZ Labels, Create XYZ Label for Real
XYZ Labels	Plots 3D labels in a 3D data space. <b>Input:</b> Read XYZ Labels, Create XYZ Label for Real

### 8.1.6.1 Plot Labels

Plot labels are generally created using annotation plot objects, although certain default and data display objects contain plot label options. Within these plot objects, text boxes are available for the user to type specific labels (e.g. a legend title).

nSIGHTS supports special formatting of labels by embedding non-printing codes in the text used to create the labels. This allows for subscripts, superscripts, and special characters and formatting control. The codes are outlined in Table 8.5.

Special Formatting	Code	Description
Superscripts	<^text^>	Text will appear as superscript. Superscripts cannot be nested.
Subscripts	<_text_>	Text will appear as subscript. Subscripts cannot be nested.
Superscript and Subscript Control	\SSNNN	Subscript/superscript size ratio where NNN is ratio to base font size (100 = 1.00). NNN must be between 030 and 100. Default is 060.
	\SPONNN	Superscript offset. Position above baseline that superscript starts where NNN is ratio to base font size (100 = 1.00). NNN must be between 050 and 100. Default is 060.
	\SBONNN	Subscript offset. Position below baseline that subscript starts where NNN is ratio to base font size (100 = 1.00). NNN must be between 010 and 050. Default is 030.
Line Spacing Control for multi-line labels	\LSNNN	Position between baselines of adjacent lines where NNN is ratio to base font size (100 = 1.00). NNN must be between 020 and 900. Default is 130. This control remains in effect until another LS control is encountered.
Special Characters	\C=NNN	NNN is character code between 000 and 255.

New Lines	\n	Single line text fields can produce multiple line labels by embedding new-line codes. This is useful for axes labels.
-----------	----	---


For example, the following shows the text entered in a **User Label** object, and the resulting display on the plot, shown in figure 63:

\LS200Analysis Results:\nK=6.1 x 10<sup>-12</sup> m/s

Analysis Results:  
K=6.1 x 10<sup>-12</sup> m/s

### 8.1.7 Selection/Active Plot Objects

Selection/active plot objects use the mouse to select, enter and/or modify data. They are only available for 2D plots.

In order to select, enter or modify data on a 2D plot using a selection/active plot object, the cursor must be in *selection mode* and the selection/active object must be in active mode. Selection mode is enabled if the selection button,  in the 2D plot window toolbar, is selected. Active mode for a selection/active object is enabled by a check marked Active toggle in the object's **Plot Settings** frame.

Once in selection mode, the pop-up menu for the 2D plot window is modified to an object specific pop-up menu.

Table 8.6 summarizes the function of the selection/active plot objects available. In addition, a description of the object pop-up window and the required object input is provided. If the object input is none, the input required for the object is based on mouse actions in the 2D plot window.

Object	Function/Input
Analytics: Line Data	Allows the user to create a straight line on a 2D plot interactively. A line with 5 points is automatically created upon creation of the object. Each point in the line can be dragged to move, rotate, extend or shrink the line. The location of the line, in addition to its length, slope and Y intercept, are provided in the object property window. Apply and Reset commands are available on the pop-up menu (right-click on the 2D window to access this menu). <b>Input:</b> none
Modify: Enter/Edit XY	Allows the user to create a new XY data set or add and delete points from an existing data set interactively. Use the update button to refresh the points to the specified XY data. To switch from enter to delete mode, use the commands in the pop-up menu (right-click on the 2D plot window to access this menu). The pop-up menu also includes Apply, Cancel and Delete All commands. <b>Input:</b> none or XY data

## 8.2 Plot Interaction

### 8.2.1 Plot Cursor


2D plots display a small cross-hair cursor:  $\oplus$ . If the control bar is enabled, the current cursor location is given in the lower left corner of the window. If reporting is enabled for a plot object, the report values for the current cursor position are also shown in the control bar.


The cursor on 3D plots is used only to adjust the position of plot annotation data.

### 8.2.2 Zoom and Selection mode

The cursor can be in one of two modes, zoom or selection. *Zoom mode* allows the user to change the plot view (see Section 8.2.3), whereas *selection mode* allows the user to enter, modify or delete data from selection/active objects interactively. Currently, selection mode has no significance within a 3D view, as there are no selection/active objects available within a 3D view.

Each cursor mode has a button on the 2D plot window toolbar:

Selecting the  button enables zoom mode.

Selecting the  button enables selection mode.

The last selected button will remain pressed in, indicating the current cursor mode.

### 8.2.3 Plot View

Both 2D and 3D plots use the concept of a *view*.

For a 2D plot, the view is defined by the axes limits of the plot. In zoom mode, the user can change the view by dragging the mouse to outline a rectangle within the axes area (the cursor will change to a magnifying glass), and releasing the mouse button. The view will zoom in on the rectangle, with the axes maximizing to fit the available window space. The 2D plot window pop-up menu also provides zoom and pan options, based on the location of the cursor upon activation of the menu (see Section 8.2.4).

In a 3D plot, the view includes the axes limits, plus the attitude and translation of the plot. Plot attitude describes the viewer's perspective in the plot co-ordinate system and is defined in terms of:

- elevation** The angle above the plot of the viewer co-ordinate. An elevation of 90 degrees means the viewer is looking directly down on the plot.
- azimuth** The rotation of the plot. Azimuth 0 means the plot is not rotated and (assuming +x is east and +y is north) the viewer is looking due north. For example, azimuth -45 means the viewer is looking NW and +22.5 is NNE.
- scale** The size of the plot data in the window. The absolute values of scale are plot projection and data limits dependent. Small values of scale mean the plot looks far away, larger values zoom-in on the plot.

Plot translation moves the position of the looked at point within the plot co-ordinate system. The effect of absolute values are plot dependent.

All 3D plots have a control bar at the bottom of the window that contains sliders and buttons used to change the view:

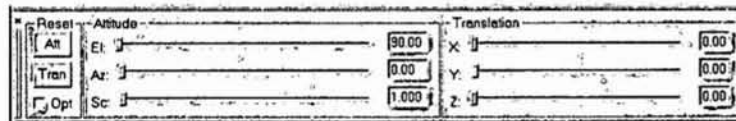


Figure 63. 3D Plot Control Bar

Attitude and Translation are controlled by the sliders shown in the figure above. The Reset buttons are used to set attitude (Att button) and translation (Tran button) to default values. Att sets Et/Az/Sc to 90/0.0/1.0, while Tran sets X/Y/Z to 0.0/0.0/0.0.

Normally the plotted view updates as the sliders are adjusted. This can be a slow process in complex plots. If the Opt toggle is selected, the view will not update until the slider stops moving.

## 8.2.4 Plot Pop-Up Menus

Right clicking the mouse on a 2D plot (assuming the mouse is in zoom mode), or anywhere on the screen in a 3D plot, will bring up the menu shown below in figure 64:

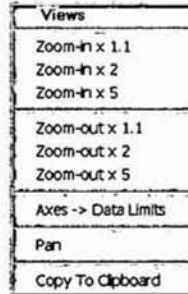


Figure 64. Plot Pop-Up Menu

For a 2D plot, the available zoom-in and zoom-out options will make the current cursor position the centre of the new axes and then perform the selected action. The axes aspect ratio will remain the same. On a 3D plot, the axes limits will be adjusted according to the zoom selection and offset according to the current translation.

Other options on the pop-up menu are:

**Axes → Data Limits**      The axis limits are set to display all data associated with plot objects.

**Pan**      Redraws the plot with the axes centred on the current cursor location.

**Copy to Clipboard**      Places a bitmap containing the plot in the clipboard, where it can be pasted into other applications such as Power Point or Word.

If a plot is in selection mode, the right click pop-up menu may be selection/active object specific. For example, the **Modify: Enter/Edit XY** object produces the following menu, in figure 65, when active:

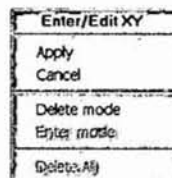



Figure 65. Modify: Enter/Edit XY Menu



See individual descriptions of selection/active objects for details on these pop-up windows in Appendix B.




## 8.2.5 Plot Tool Bar

Both 2D and 3D plot windows contain a tool-bar for performing common plotting functions.





The first three buttons help manage plot views. As the view is changed through zooming or panning for 2D or 3D plots, or attitude/translation for 3D, nSIGHTS remembers previous views, in a view stack.


These views are accessed through the tool bar buttons:

- |   |                      |  |
|---|----------------------|--|
|    | <b>Initial view</b>  | Returns to the first view in the view stack.   |
|    | <b>Previous view</b> | Restores the previous view.  |
|  | <b>Reset view</b>    | Re-checks the limits of each object on the plot and performs an autoscaling operation to reset the axes limits. Also clears the view stack. <b>This button needs to be used as you add new objects to a plot with axes auto-scaling that are outside the current axes range.</b> |



The next two buttons set and reset *preferred views*:

- |   |                   |  |
|---|-------------------|--|
|  | <b>Set axes</b>   | Sets the current plot axes to manual and sets the manual axes limits to the current plotted axes limits.                         |
|  | <b>Reset axes</b> | Resets the axes limits to the preferred limits. This button will not be available until Set axes has been pressed at least once. |




The next three buttons help manage plot animation and bitmap file output (see Section 8.3.2):

- |   |                             |  |
|---|-----------------------------|--|
|  | <b>Set Auto/Manual dump</b> | When pressed in, the bitmap output method is set to <u>Auto</u> and a new bitmap file will be created every time the plot is redrawn. When toggled out, the bitmap output method is <u>Semi-Auto</u> . |
|---|-----------------------------|--|





-  **Plot Dump** Outputs the current plot as a bitmap file, and increments the bitmap file counter. Note that multiple files will be created if the mode is Semi-Auto and Dump frame count on the Bitmap Output File Setup dialog is greater than 1.
-  **Reset increment** Resets the next output increment to 0. Useful for restarting an animation sequence after a mistake.



The next group of three buttons have special purposes:

-  **Propagate view** Updates other plot windows of the same type with the current view.
-  **Propagate size** Changes the horizontal and vertical size (in pixels) of all other plot windows to match that of the current window.
-  **Full screen** Toggles the plot window between full-screen mode and normal mode.

The next two buttons toggle the plot between zoom and selection mode. At any time, only one of the two buttons will be pressed in:

-  **Zoom** Mouse actions are zoom/unzoom.
-  **Select** Mouse actions depend on active selection objects.

The final two buttons are:

-  **Print** Sends the plot bitmap to the default printer. Use **File** → **Print Setup** on the main nSIGHTS window to select the printer and corresponding settings.
-  **Refresh** Redraws the plot.

### 8.2.6 Plot Object Control

Selecting the Plot Control item in the Control menu of the plot window will cause a new dialog window to appear, as shown in figure 66.

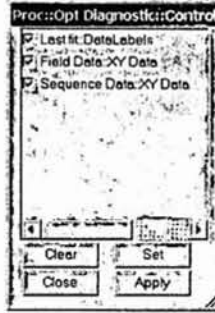


Figure 66. Plot Object Control Menu

This dialog allows the user to change the Plot toggle setting of all plot objects on a single plot without using each object's property window. The plot control dialog lists all objects defined for a plot and specifies their current Plot setting with a toggle box control. This provides an easy method for turning multiple objects off or on simultaneously. Other button usage is as follows:

- |              |  |
|--------------|--|
| <b>Clear</b> | Turns off all defined plot objects.        |
| <b>Set</b>   | Turns on all defined plot objects.         |
| <b>Close</b> | Closes the dialog menu.                    |
| <b>Apply</b> | Applies changes within the control dialog. |

## 8.3 Plot Output

nSIGHTS provides two basic types of graphics output: resolution independent postscript, and bitmap files. Still output images are produced using either PostScript or bitmap files, and animations are recorded using bitmap graphics output.

For all types of plot output, the plot window below the button bar and above the reporting area (2D plot) or attitude control area (3D plot) is extracted.

### 8.3.1 Postscript Output

Postscript output consists of Postscript (PS), Encapsulated Postscript (EPS), computer graphics metafile (CGM) or Hewlett Packard Graphics Language (HPGL) commands written to an output

file which can then be printed or imported into another application. For convenience sake, in this manual all resolution independent output will be described as Postscript.

Postscript output is created by selecting Postscript from the **Output** menu bar item on any plot window:

#### **File Format**

##### PS

The specific output file format.

Vanilla postscript. This format can be read by most postscript viewers and can be converted to pdf by Adobe Distiller. It also prints cleanly on tested PostScript printers. PS format input has been tested successfully with Corel Draw. Note that PS input files do not contain a preview image.

##### EPS

Encapsulated postscript. Imports cleanly into Adobe Distiller and Corel Draw. No preview image.

##### EPS/Win

Encapsulated postscript with Windows compatible preview image. Imports cleanly into MS Word and Corel Draw. Contains preview image. Note that the preview image may be distorted. This is a known bug.

##### CGM

Computer graphics metafile - experimental capability only. Not tested or supported.

##### HPGL

Hewlett Packard Graphics Language - experimental capability only. Not tested or supported.

#### **Orientation**

##### Portrait

Plot is not rotated. The horizontal dimension of the plot (in pixels) is mapped to the page width (minus left and right margins) and the vertical to the page height (minus top and bottom margins). Aspect ratio of the plot is preserved with the plot window origin at the bottom left of the page.

##### Landscape

Plot is rotated 90 degrees counter-clockwise. The horizontal dimension of the plot (in pixels) is mapped to the page height (minus top and bottom margins) and the vertical to the page width (minus left and right margins). Aspect ratio of the plot is preserved with the plot window origin at the bottom right corner of the page.

#### **Output Size and Margins**

The defined size (in inches) of the plot mapping area.

#### **Controls**

##### Line Width Multiplier

Maps OpenGL line widths specified in pixels to Postscript line widths specified in points (1 point = 1/72 inch). The default setting

is usually OK for 8.5 x 11 inch output. Larger output may require a larger value.

Gamma Correction

Corrects color for the differences between printed and displayed output. Values in the range of 1.0 to 4.0 seem to produce acceptable output.

Z Buffer Multiplier

The postscript routines reduce the size of Postscript files by removing hidden polygons. The algorithm used to do this relies upon a software Z buffer. In some cases, small polygons may be missed during the sorting process. They will appear as dropouts on the final image. If this happens, a message will be written to the terminal window of the form: **Possible occlusion culling dropouts - check output.** In this case, the value of the Z buffer multiplier should be increased by a factor of 2 to 4. Note that increasing this parameter uses a lot of extra memory. Using a value of -1.0 will disable hidden polygon removal.

Text Multiplier

Occasionally, there are minor differences between the metrics of the bitmapped fonts displayed with OpenGL and the Postscript fonts. nSIGHTS will ensure that font heights are correct (i.e. same ratio to window size). However, font widths may differ slightly. These differences will manifest typically as annotation text which may exceed the enclosing frame size of an annotation object or runs off the page. This parameter can be adjusted until text output in the Postscript file looks correct.

**Output File**

The file that the postscript is written to when the **Print** button is pressed.

**Notes on Object Visibility in Postscript Output:**

For 2D output, you cannot rely on the order of plotting within a layer to affect visibility. Use separate layers to ensure visibility is correct.

For 3D plotting the postscript routines do not support polygon offset. With the exception of outlines around symbols and polygons, plot objects must be specified to be unambiguously visible if Postscript output is to be created correctly. All 3D data display plot objects have a field called Offset where an offset value can be added to the X, Y, and/or Z components of a plot object. The user-entered value is added to the normal plotted values after all co-ordinate system

transformations have been completed. The smallest possible values to overcome render-induced stitching effects should be used.

### 8.3.2 Bitmap Output

Bitmap output can be written to a file, or copied to the clipboard. Copying the plot image to the clipboard, using the **Copy To Clipboard** command in the plot pop-up window, places a bitmap containing the plot in the clipboard, where it can be pasted into other applications such as Power Point or Word.

Bitmap file output is supported as TGA file or JPEG file format. The output set-up dialog is accessed by selecting Bitmap from the **Output** menu bar item on the plot window:

<b>Output File Format</b>	Specifies the output format for the bitmap file:
<u>TGA</u>	TGA output is primarily used to create Windows AVI animations (see below).
<u>JPEG</u>	JPEG (or JPG) output is useful for e-mailing example results as it generally results in smaller file size, and is more commonly used.
<b>Output Method</b>	For animation support. The method used to animate output is to create successive frames of an animation in nSIGHTS and then to convert the frames to an animation using a third party tool (see Section 8.3.3). For example, to create a five frame animation called test.avi, the third party tool requires a sequence of files as follows: test0000.tga, test0001.tga, test0002.tga, test0003.tga, test0004.tga.
<u>Auto</u>	Creates a new bitmap file after each plot redraw. The file name is created from the base file name in the box <b>Root File Name</b> and the increment number, right justified with leading zeroes in a 4 digit field. After the file is written, the increment number is incremented by 1.
<u>Semi-Auto</u>	File name and increment as for auto, however the file is created when the <b>Plot Dump</b> button on the plot window tool bar is pressed.
<u>Manual</u>	Pressing the <b>Plot Dump</b> button will bring up a file selection box where the output file name can be entered.
<b>Root File Name</b>	The first portion of the file name and (optionally) the file directory.
<b>Next increment</b>	The value used in constructing the numeric component of the next file name generated.

**Dump frame count**                      The number of identical bitmap files created when the **Plot Dump** button is pressed in Semi-Auto mode. This is useful for displaying a fixed image for a specified time period in an animation.

### **Special Note For Bitmap Output:**

Bitmap output is created by extracting data from the plot window below the button bar and above the reporting area (2D plot) or attitude control area (3D plot). The output routine will extract whatever appears within this area, including overlapping windows and screen-savers. Before creating animations, make sure that the window is clear of obstructions and that the screen saver is turned OFF.

### **8.3.3 Plot Animations**

The method used to animate output is to create successive bitmap frames of an animation in nSIGHTS (see Section 8.3.2) and then to convert the frames to an animation using a third party tool. For example, to create a five frame animation called test.avi, the third party tool requires a sequence of files as follows: test0000.tga, test0001.tga, test0002.tga, test0003.tga, test0004.tga.

Currently, the best available tool is a shareware product called VideoMach. VideoMach reads sequences of TGA files and produces AVI animations. The shareware product is available at: <http://www.gromada.com>.

In general, 2D nSIGHTS animations use a limited number of colors and should be constructed using the Microsoft RLE compressor. This is a lossless compressor which yields very small AVI files if the 256 color option is selected.

3D animations with OpenGL lighting frequently use more than 256 colors. Lossless AVI coder/decoders (codecs) such as Microsoft Video 1 (with 100% compression quality and temporal quality ratio of 1.0) give the best quality, albeit with larger output file sizes. Lossy compressors, such as MPEG, frequently leave unattractive visual artifacts. The most effective lossless animation format (in terms of smallest file sizes) is the proprietary HAV format created by VM. However, it is not supported for use in other third-party tools such as Director or Power Point and requires use of the freeware HAV file player (also available from [www.gromada.com](http://www.gromada.com)). The HAV file play is superior to the Windows Media player in many ways.

### **8.3.4 View Animation Control**

For 3D plot windows, selecting the View Animation item on the Control menu will cause a new top-level dialog window to appear, as shown. This menu is used to control the view-related aspects of



the 3D display independently of the slider bars, including smooth transitions from one view to another. This feature, shown in figure 67, is useful for animations.



Figure 67. View Animation on the Control Menu

Each row on the menu gives two values for one element of a view. These correspond to the start and end values for the view transition.

A toggle box item specifies whether log (on) or linear (off) increments are to be used for the scale component of the view.

The other data item on the menu, # of frames, controls the size of the increment used in each step of the transition.

The push buttons perform the following:

- Step**            Add one increment to each element of the current view. Increments are calculated as  $\text{increment} = (\text{end value} - \text{start value}) / \# \text{ of frames}$ . Step is most often used with a small # of frames (20 or less) to verify the view transition before performing an animation.
- Anim.**            Set the current view to the start view then perform # of frames steps as described above. This is most often used in conjunction with Automatic@ TGA output (see Section 8.3.2) to produce individual frames for creating an animation. While animating, the text on the button will change to AStop@. Pressing the button will stop the current animation.
- 2Start**           Changes the current view to the start view.
- 2End**            Changes the current view to the end view.



- Set Start**      Sets the start view in the dialog to the current plot view.
- Set End**        Sets the end view in the dialog to the current plot view.
- End2Start**      Copy all end values to start values. This feature is useful when performing multiple view change animations.
- Close**            Closes the dialog.

## 9 NPOST LISTS

nPost has a list page with functionality similar to the List menu in nPre (see Section 2.3.5.8). The list page has an associated top-level window, which displays text information regarding the list objects within the list page. Whereas the list window in nPre displayed input information, in nPost, the list window displays output information.

Table 9.1 provides a summary of the available list objects, and the type of information displayed in the List window. List objects are described in detail in Appendix C.

<b>Object</b>	<b>Description</b>
Covariance List	Provides the values of the covariance matrix. <b>Input: Extract Covariance Matrices</b>
Jacobian List	Displays Jacobian data, as well as each parameter's and each fit's percentage of the total sensitivity. <b>Input: Extract Jacobian Data</b>
Optimization Results	Details Optimizer Results output, including a summary of the simulation, fit value data, fitted parameter values, parameter correlation values and 95% confidence intervals. <b>Input: nSIGHTS Optimizer Results</b>

## 10 NPOST OUTPUT

nPost also has an output page, with its own set of objects. Some of these objects are available as data objects in nPre. The page and its objects are for the sole purpose of exporting nSIGHTS data into a text file, for use with nSIGHTS or other software packages.

Table 10.1 provides a summary of the available output objects, the type of data exported, and if applicable, the nSIGHTS default file extension. Output objects are described in detail in Appendix D.

<b>Object</b>	<b>Description</b>
Write Color Map File	Writes a color map to a file. <b>Input:</b> color map <b>File Extension:</b> *.cmap
Write Curve File	Writes single or multiple curve data to a file. <b>Input:</b> curve data <b>File Extension:</b> *.nCRV
Write Grid File	Writes grid data to a file in standard, surfer or xyz format. <b>Input:</b> table data <b>File Extension:</b> *.grd
Write Table to File	Writes a table to a file. <b>Input:</b> table data
Write XY Data to File	Writes XY data to a file. <b>Input:</b> XY data <b>File Extension:</b> *.dat

## 11 TUTORIAL

The tutorial in this section provides a guide to the process of developing an nSIGHTS application for well test analysis. There are many ways nSIGHTS may be used to conduct well test analysis, and this tutorial will focus on the optimization of a constant-rate pumping test.

It should be noted that the focus of this tutorial is accessing the many tools available in nSIGHTS, and not the interpretation of well-test results. The tutorial covers the following topics:

- The set up of a model run and the creation of diagnostic plots (**Entering Model Input**).
- The execution of the model (**Executing the Model**).
- Evaluating model results, through a variety of different types of plots and text output (**Evaluating Model Results**).

Field data for the tutorial is required, and is provided as a text file (PMP.DAT).

### 11.1 Test Description

The tutorial will use the draw-down period of a constant-rate pumping test for analysis. Details of the test are summarized below.

- Pressure units are kPa
- Time units are hours
- Duration of test is 100 hours
- Test zone is isolated by packers
- Test zone length (or formation thickness  $b$ ) is 10 m
- Pumping rate is  $-5$  gpm (i.e. withdrawal of water)
- Static formation pressure is 2000 kPa.

### 11.2 Entering Model Input

The first step in conducting well test analysis within nSIGHTS is to enter the well test characteristics. nPre is the nSIGHTS module where data are input, and the model executed.

Start nPre. The nPre main menu will appear, as shown in figure 68.

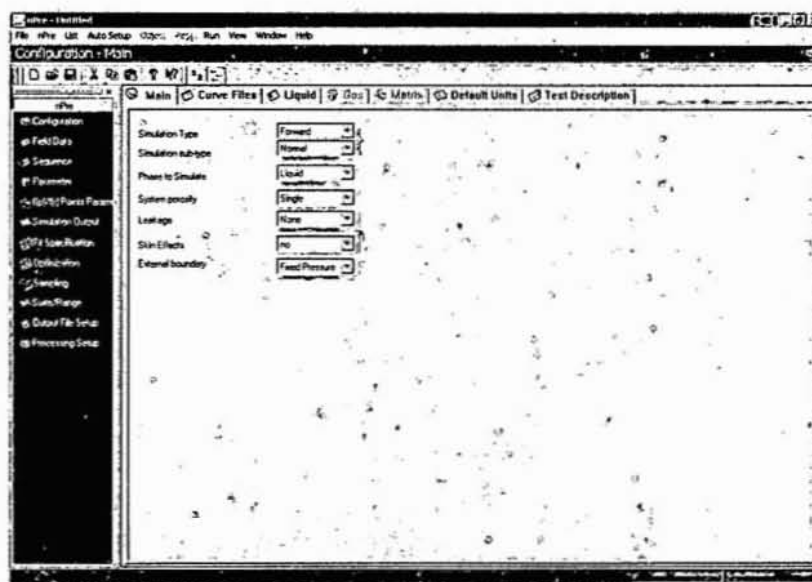


Figure 68. Entering Model Input on nPre Main Menu

The main menu contains a list of nPre input windows within the nPre control bar. Each input window contains dialogs for data input that describe the well test model. The default input window is the Configuration input window. Note that the object description area displays “Configuration – Main”.

The tutorial will now proceed through the different input windows requiring input for this example. Some windows have defaults that are sufficient for this example, and are therefore not described.

### 11.2.1 Configuration Input

As most of the defaults apply to the well test, changes only need to be made in the Main tab and the Default Units tab:

- (1) **Main Tab:** Select *Optimization* as the Simulation Type.
- (2) **Default Units:** Select *hour* for the Time units, and *USgpm* for the Volumetric flow rate.

It is also wise to enter a description of the model run in the Test Description tab.

Save the model configuration as Tutorial.nPre, using the standard Windows save button, or File→Save. Remember to save the configuration file from time to time.

### 11.2.2 Field Data Input

At this point, existing field data are imported and plotted using the Auto Setup→Field Data Plots command.

- (1) Select the Auto Setup→Field Data Plots.
- (2) A dialog will appear as shown in figure 69:

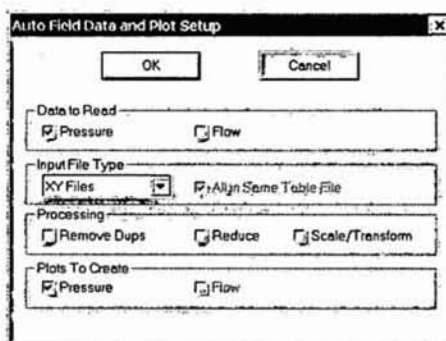


Figure 69. Automated Field Data and Plot Setup Window

Keep the defaults, and select OK.

- (3) Two pages will be created in the Field Data object tree window: one data page and one plot page. In the first data page,  $P\_input$ , select the **Read XY Data** object,  $fPDAT$ .
  - Use the browse button to find the file “PMP.DAT”.
  - Select the Apply button. Data Status will indicate that 251 points have been read.

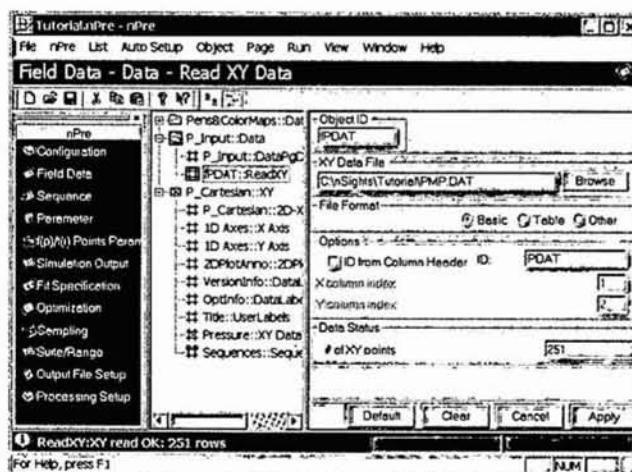


Figure 70. Read XY Data

- (4) Within the  $P\_Cartesian$  plot page, select the **Pressure XY Data Series** object. Auto setup has already selected the field data pressure and the simulated data pressure. Upon selection of the object, its status will be updated to normal.

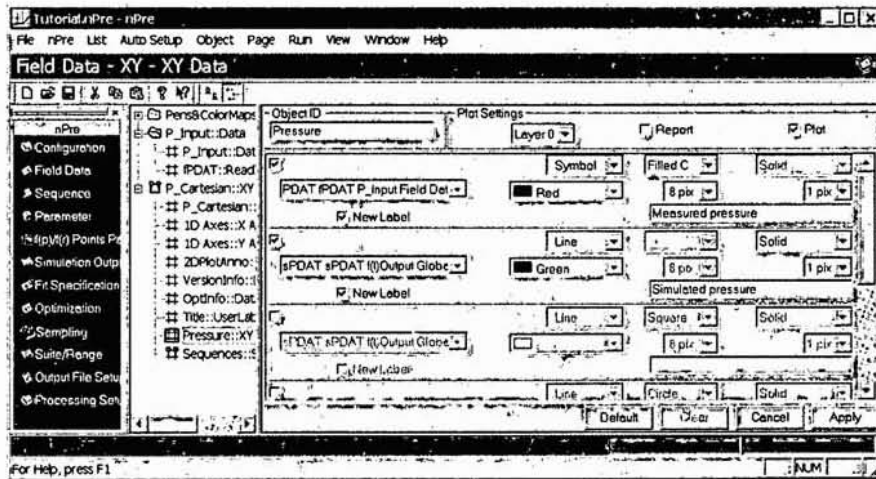


Figure 71. XY Data Series

- (5) The *Sequences Sequence Grid Lines* object will plot grid lines defining the beginning/ending of all sequences, once sequences are defined.
- (6) To view the field data plot, select the 2D plot window (**Window**→**Fld::P\_Cartesian**). The window should appear blank, with both axes set at a scale of 0 to 10. To re-scale the axes, select the **Reset View** button (🔄), or **Axes->Data Limits** from the 2D pop-up menu (right click within the 2D plot window).

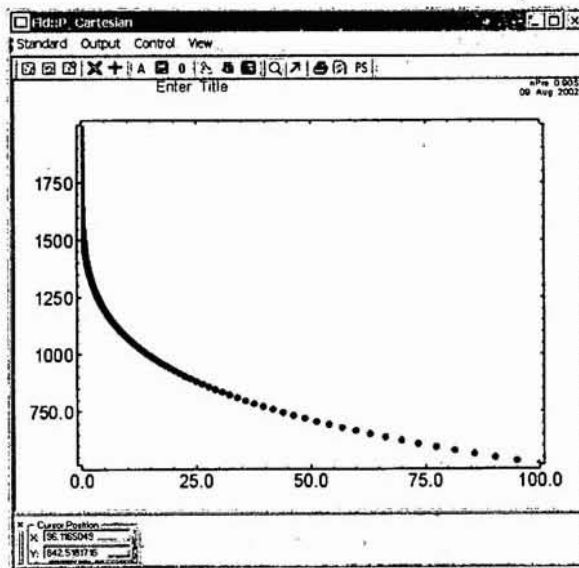


Figure 72. Cartesian 2D Plot Window

- (7) To add axes labels to the plot, select the **2DplotAnno** object in the *P\_Cartesian* 2D plot page. In the **Format** frame, toggle on the **Axis Labels** checkbox. In the **Labels** frame, type

# Information Only



**Time (hours)** for the X Axis label, and **Pressure (kPa)** for the Y Axis label. Select the **Apply** button. For the Y axis labels to fit within the plot window, the left margin may need to be increased in the **2D-XY** object.

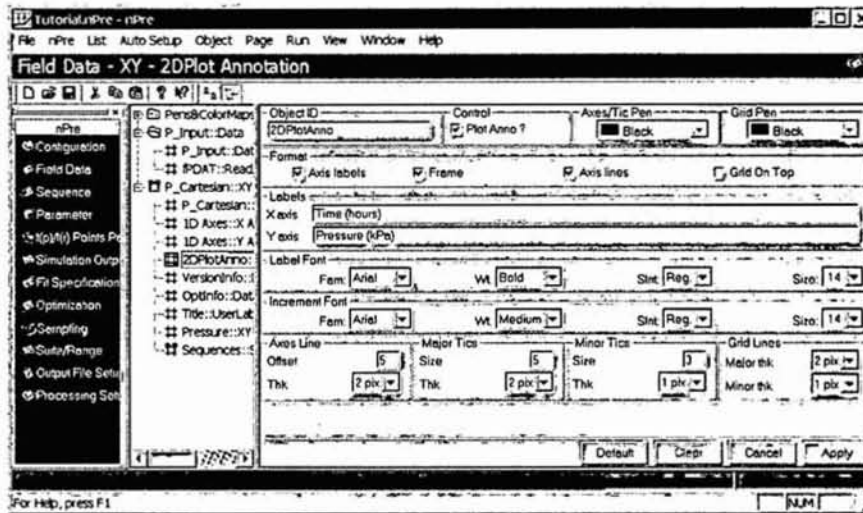


Figure 73. 2DPlot Annotation

- (8) To change the title of the plot, select the **Title User Labels** object in the **P\_Cartesian 2D** plot page. Change the **Enter Title** text to **Field Pressure Data Time Series**. Select the **Apply** button.

### 11.2.3 Sequence Input

Sequences define a time period that describes one set of well-bore conditions. For the example test, only one sequence occurred: the draw-down period (a flow sequence). Sequence input options are located under **Sequence** in the UI window.

Once sequences are defined, diagnostic plots of the simulated data can be generated (using **Auto Setup**→**Sequence Plots**). These plots can be defined even though the simulation output does not yet exist. The display of simulation output objects will remain empty and plot objects will show incorrect object properties status (#), until a simulation has been executed.

#### 11.2.3.1 Defining the sequence

- (1) In the **Sequences** tab, keep the default sequence type and designation. Click in the **Duration** cell, and type **100**. The sequence duration is therefore 100 hours.
- (2) Double click on the **Sequence Data** cell (currently says "BAD"). A dialog will appear in a separate window, as shown in figure 74:

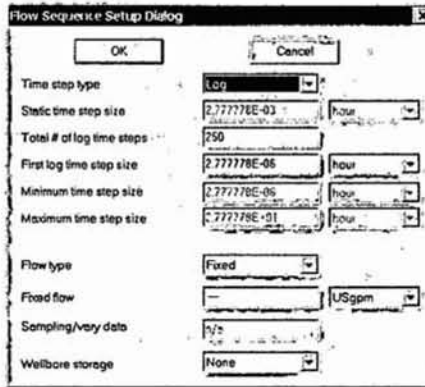


Figure 74. Flow Sequence Setup Dialog

This dialog describes the time stepping to occur within the sequence, as well as the sequence well-bore boundary conditions:

- Type **-5** in the **Fixed flow** text box.
- Change the **Wellbore storage** to **Isolated**.
- As the remaining defaults are fine, select the **OK** button.

(3) The Sequence Data cell should now read "OK". The sequence has now been defined.

### 11.2.3.2 Generating diagnostic plots

- (1) Select **Auto Setup** → **Sequence Plots**.
- (2) A dialog will appear as shown in figure 75:

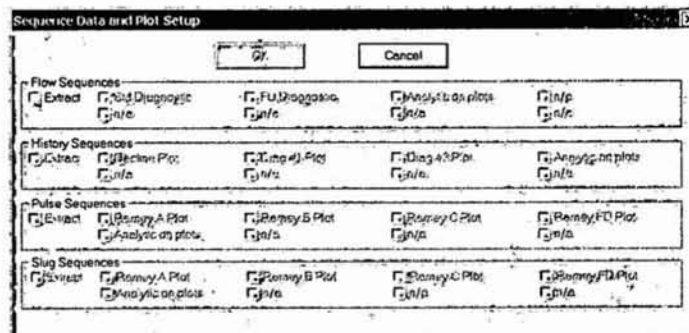


Figure 75. Sequence Data and Plot Setup

- In the **Flow Sequences** frame, select **Extract** and **Std Diagnostic** checkboxes.
  - Select **OK**.
- (3) One data page and one plot page will be created.

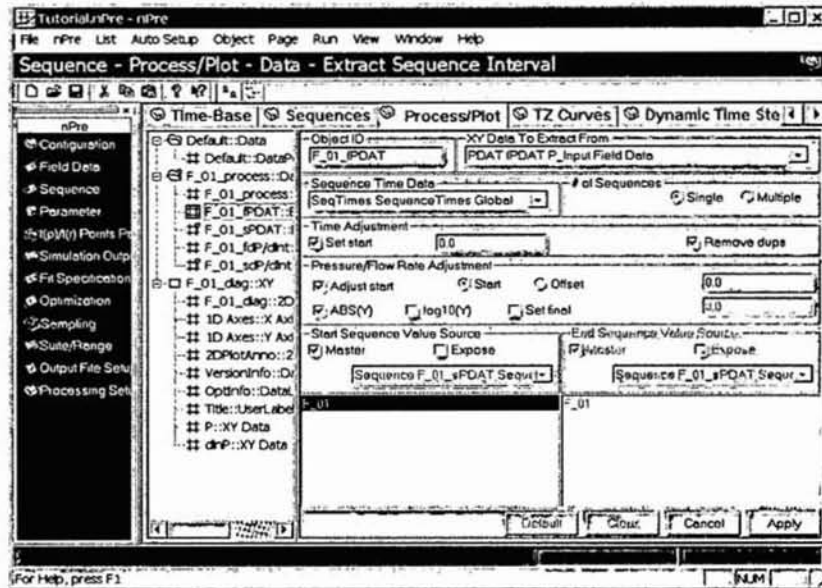


Figure 76. Extract Sequence Interval Window

(4) The data page, *F\_01\_process*, will contain two **Extract Sequence(s)** objects:

- *F\_01\_fPDAT* contains the field pressure change data for the flow sequence *F\_01*. The pressure change is calculated from the pressure field data with the Adjust start and the ABS(Y) checkboxes. Adjust start, with the start at 0.0, will subtract the initial pressure from subsequent pressures, and ABS(Y) will take the absolute value of the offset pressure. This is the same transform applied to the field pressure data in the *dP Scale/Transform* object within the Field Data input window.
- *F\_01\_sPDAT* contains the simulated pressure change data for the flow sequence *F\_01*. Pressure change is calculated as above.

The data page *F\_01\_process* will also contain two **P(t) Derivative Calculation** objects, *F\_01\_fdP/dInt* and *F\_01\_sdP/dInt*, which calculate the derivative of the field and simulated pressure changes, respectively, for the *F\_01* flow sequence.

- (5) The plot page, *F\_01\_diag*, plots field and simulated pressure change, as well as their derivatives.
- (6) To increase the line width of the simulated pressure change:
- Select the *P* object.
  - Change the line width of the simulated data to 3 *pix*.
  - Select **Apply**.
- (7) As well, the colors for the derivative objects should be changed, in order to differentiate between pressure change and the derivative of pressure change. The line width of the simulated derivative will also be increased, to correspond with the line width of the

simulated pressure data.

- Select the *dlnP* object.
- In the first color drop-down list (currently selecting *Red*), select *Blue*.
- In the second color drop-down list (currently selecting *Green*), select *Magenta*.
- Change the line width of the simulated data to *3 pix*.
- Select *Apply*.

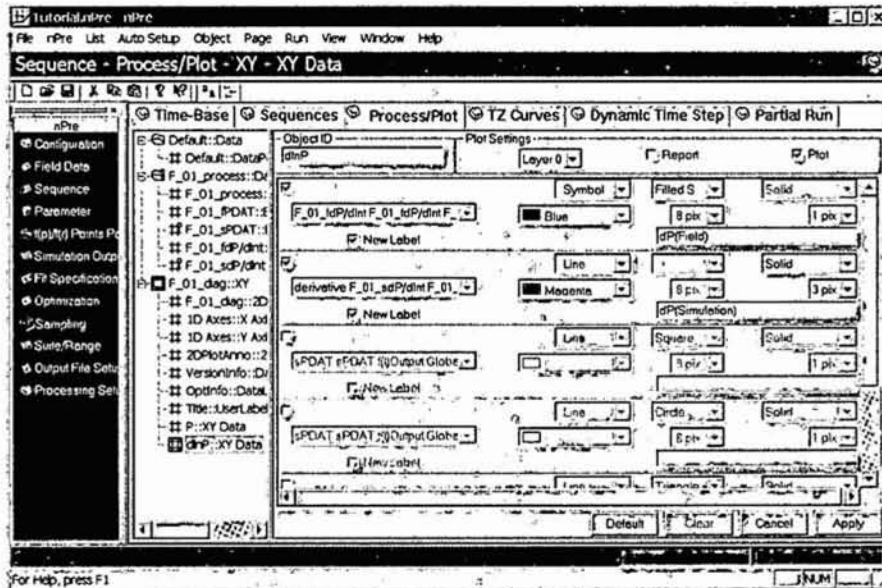


Figure 77. Sequence – Process/Plot XY Data

- (8) To add a legend to the plot, create a new object in the *F\_01\_diag plot* page. Select *Object*→*New*→*Anno: Series Legend*. The *Object* menu is accessed by selecting any of the objects in the *F\_01\_diag* plot page, and right-click to bring up the *Object* pop-up menu. Alternatively, use the *Object* menu in the menu bar.
- Check the top toggle box, and select *Series Legend P F\_01\_diag Sequence* from the drop-down list. Check the second toggle box, and select *Series Legend dlnP F\_01\_diag Sequence* from the drop-down list.
  - Select the *Apply* button.

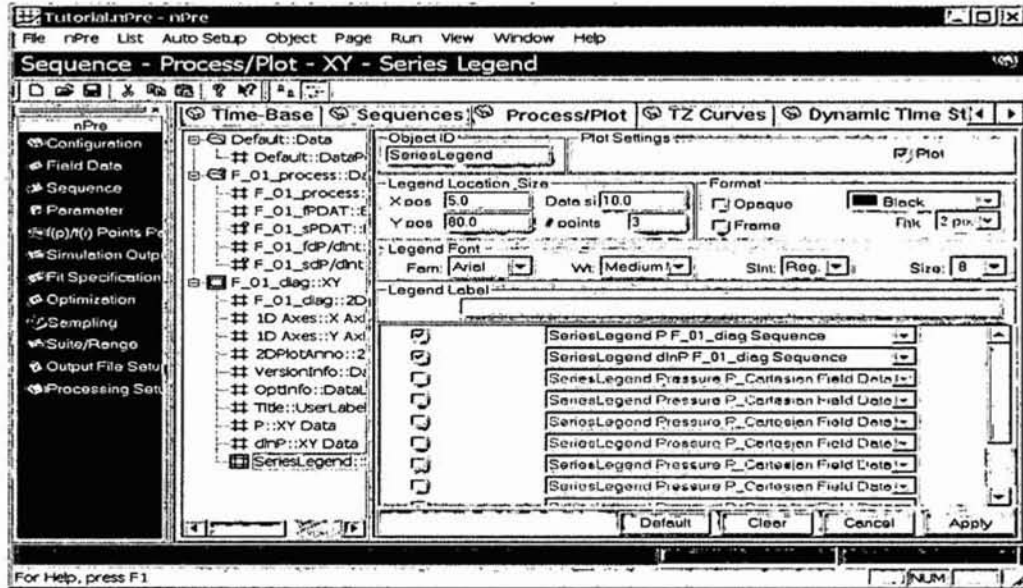


Figure 78. Series Legend Sequence Process/Plot Window

- (9) To add axes labels to the plot, select the **2DplotAnno** object in the *F\_01\_diag* plot page. In the **Format** frame, toggle on the **Axis Labels** checkbox. In the **Labels** frame, type **Log Elapsed Time (hours)** for the **X Axis** label, and **Log Pressure Change (kPa) and Derivative** for the **Y Axis** label. Select the **Apply** button. For the Y axis labels to fit within the plot window, the left margin may need to be increased in the **2D-XY** object.
- (10) To change the title of the plot, select the **Title User Labels** object in the *F\_01\_diag* 2D plot page. Change the **Enter Title** text to **Standard Diagnostic**. Select the **Apply** button.
- (11) The **OptInfo Data Labels** object in the *F\_01\_diag* plot page will force the plot to be updated with each step of the optimization. By default, this label is not plotted (i.e. the **Plot** toggle is off).
- (12) To view the plot, select the plot window using the **Window→Seq::F\_01\_diag** command. Alternatively, select **Window→Window List** (or F11), which brings up a window containing a menu of all available windows, shown in figure 79.

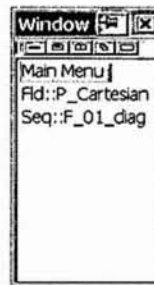


Figure 79. Windows Available List Window

Select Seq::F\_01\_diag in the menu, and the window will be brought to the top. The window list menu window is a convenient way to switch between the main and plot windows.

- (13) The plot window should appear blank, with both axes set at a scale of 0 to 10. To re-scale the axes, select the Reset View button (🗑️), or Axes->Data Limits from the 2D pop-up menu (right click within the 2D plot window). The legend and data labels may be moved by selecting the objects within the window, and dragging. Note that only field data is plotted, since simulation data has not yet been created.

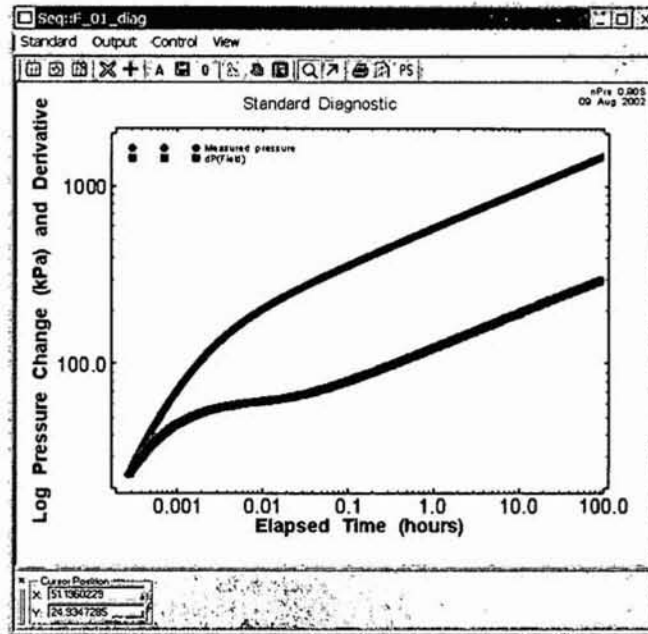


Figure 80. Plot Window

### 11.2.4 Parameter Input

Parameter values are entered into the tables provided in the tabs of this input window. Only parameters required (based on the current model configuration) will be shown.





Figure 81. Parameter Input Window

The parameter value is entered into the Value cell. Before entering the parameter value, the units should be defined in the Units cell. Changing the Units cell after the Value cell will cause the value to be converted to the new units.

Enter the parameter values, as specified in the following table (check the units!). For parameters not specified, keep the default values.

Parameter	Value	Units
<b>Formation tab</b>		
Formation thickness	10	m
Flow dimension	1.6	
Static formation pressure	2000	kPa
External boundary radius	1.0e+05	m
Formation conductivity	1.0e-05	m/s
Formation spec. storage	1.0e-07	1/m
<b>Test-zone tab</b>		
Well radius	4	in
Volume change from normal	0.0	m <sup>3</sup>
Test-zone compressibility	3.0E-08	1/Pa

While entering the parameters, the width of the Value column may need to be adjusted in order to view the value. Place the cursor on the table heading of the Value column, and double click. The column will be automatically adjusted to fit the values entered within the column.

Each parameter also has a type, specified in the Type column. The default type is *Constant*. For an optimization simulation, fitting parameters are specified by changing the parameter type to *Optimize*. Fitting parameters are the parameters the model adjusts in order to obtain an optimal fit to field data.



Once a parameter type has been changed to *Optimize*, the Value cell will read “BAD”. Double clicking on the Value cell will bring up an **Optimized Value Dialog**, with the inputs required for the parameter. Once the optimized parameter inputs are completed correctly, and the dialog OK button selected, the Value cell will read “OK”.

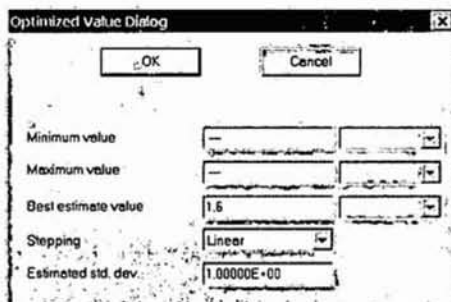


Figure 82. Optimized Value Dialog Window

For this tutorial, change the parameter Type to *Optimize* for the parameters specified in the table below. Then for each fitting parameter, double click on the corresponding Value cell, and complete the required inputs of the **Optimized Value Dialog**, also specified in the table below. Note that the Best Estimate Value is automatically the parameter value that was previously entered.

Parameter	Minimum Value	Maximum Value	Best Estimate Value	Stepping	Estimated std. dev.
<b>Formation Tab</b>					
Flow dimension	1.0	3.0	1.6	Linear	1.0
Static formation pressure	1500 kPa	2500 kPa	2000 kPa	Linear	1.0
Formation conductivity	1.0E-6 m/s	1.0E-4 m/s	1.0E-5 m/s	Logarithmic	1.0
Formation specific storage	1.0E-8 m/s	1.0E-6 m/s	1.0E-7 m/s	Logarithmic	1.0
<b>Test-zone tab</b>					
Test-zone compressibility	1.0E-9 m/s	1.0E-7 m/s	3.0E-8 m/s	Logarithmic	1.0

### 11.2.5 Fit Specification Input

Within this input window, the field and simulated data sets to be compared are specified using the **Auto Setup→Basic Fits** command. These specified fits between field and simulated data are also called constraints. The nSIGHTS model will adjust the specified fitting parameters in order to achieve a match between the field and simulated data. The Fit Specification options are located under Fit Specification in the UI window and is only available when the Simulation type is set to “optimization” and/or Simulation sub-type to “range”.

In general, multiple constraints will reduce the uncertainty of parameter estimates. However, to give each constraint equal weight in the regression process, the range of Y values for each

constraint must be equal or very similar. For a set of constraints that varies over several orders of magnitude, the log of the constraint may be used.

Two constraints will be used in this example: pressure change and the derivative of pressure change. As the Y value of the two constraints vary over several orders of magnitude, the log of each constraint will be used.

- (1) Select Auto Setup → Basic Fits.
- (2) A dialog will appear as shown in figure 83:

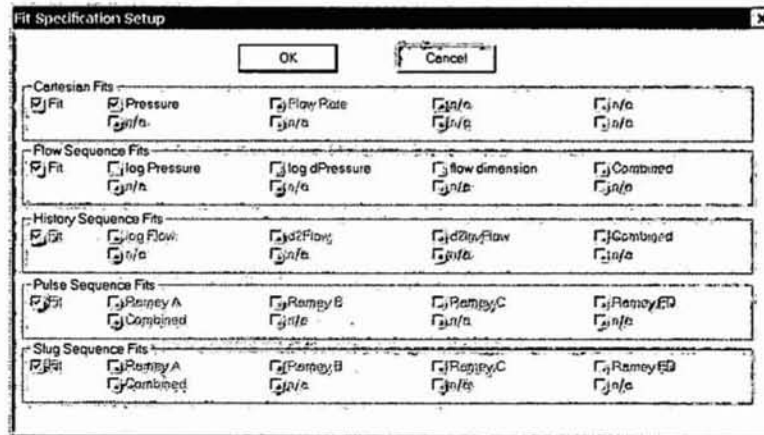


Figure 83. Fit Specification Input Setup Window

- In the Cartesian Fits frame, remove the Fit selection.
  - In the Flow Sequence Fits frame, select Fit, log Pressure, log dPressure, and Combined checkboxes.
  - Select **OK**.
- (3) One data page will be created:
    - Four **Single Scale/Transform** objects take the log of field and simulated pressure change and the derivative of pressure change.
    - Two **Single Fit** objects pair field and simulated data, one fit for pressure change, and the second fit for the derivative of pressure change.
    - A **Combined Fit** object combines the two single fits, to be solved simultaneously by the model.

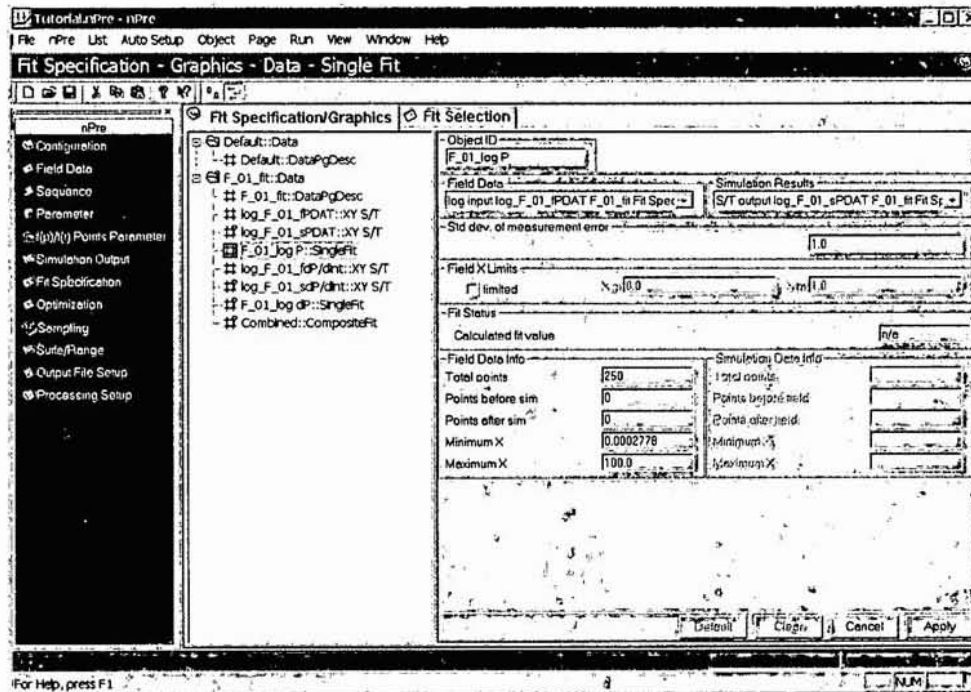


Figure 84. Fit Selection Tab of the Fit Specification Input Window

- (4) As well, within the Fit Selection tab, three Optimize? checkboxes will be selected, and the adjacent drop-down lists will select each single fit, and the composite fit. For this example, we only want to use the composite fit (i.e. we want the model to fit all three constraints simultaneously). Therefore, the first two Optimize? checkboxes should be unselected, leaving only the composite fit selected.


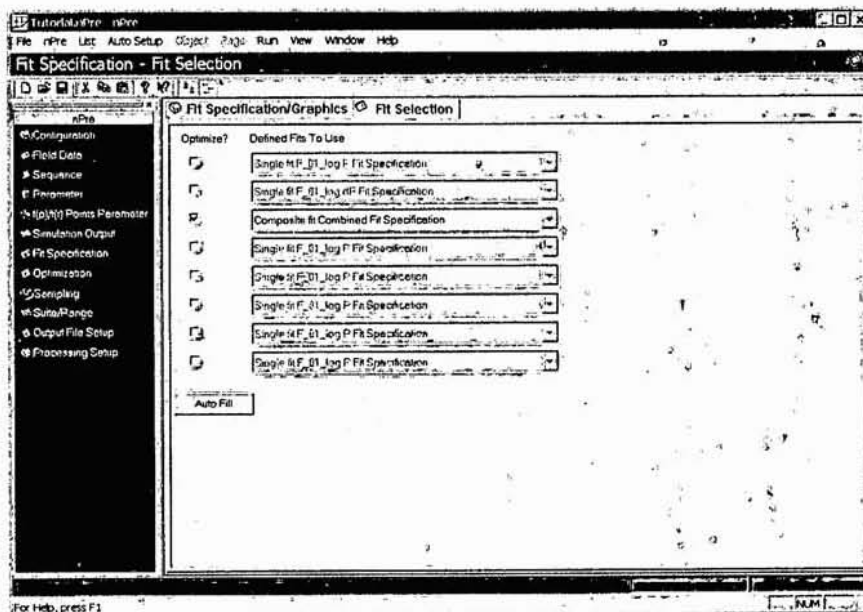


Figure 85. Fit Selection Tab with Optimize Fit Selected

## 11.2.6 Output File Setup Input

Within this tab, the available output files are specified. The Output File Setup option is located on the UI window.

- (1) In the **Optimization** tab, select the checkbox Write optimization output.
- (2) In the File name box, use the browse button to specify the output file location. Name the file **Tutorial.nOpt**.
- (3) Select yes for Store residuals and Store Jacobian data drop-down-boxes.

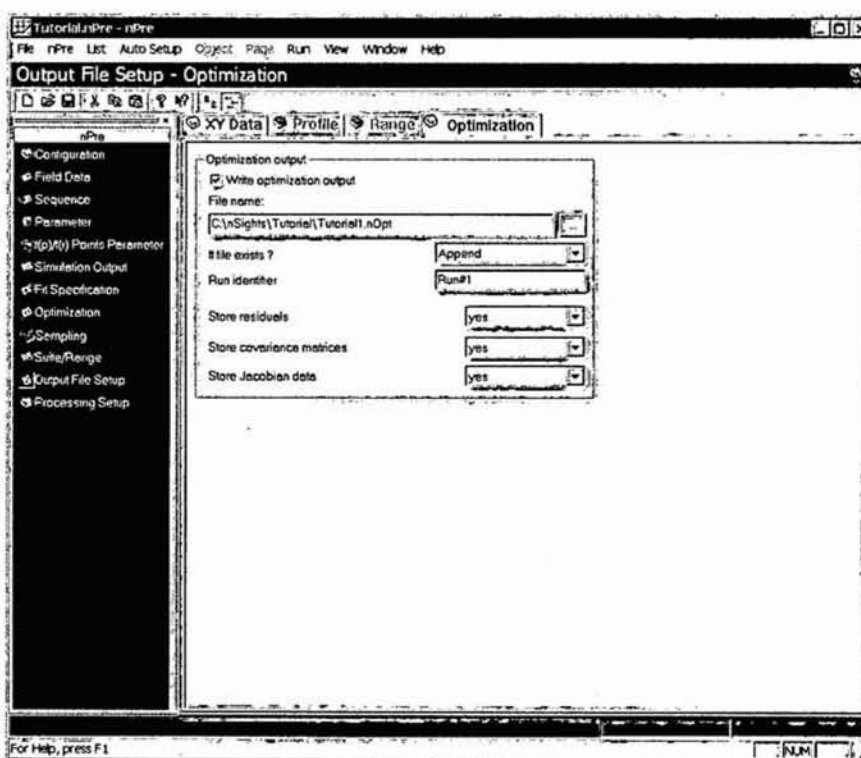

## 11.3 Executing The Model

Before executing the model, save the nPre configuration file.

To execute the model, select the **Verbose** command from the **Run** menu. A window will appear, tracking the model as it conducts the simulations.

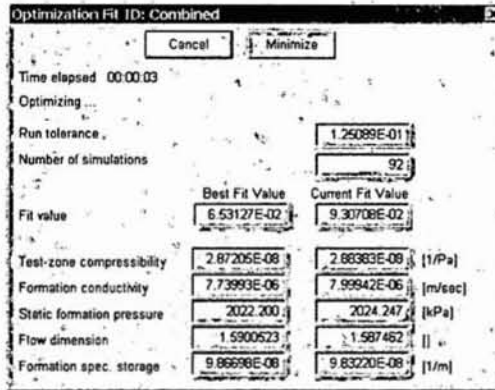


Figure 86. Combined Optimization Fit ID Screen

As there is only one case in this example, there is no progress bar (a progress bar tracks the number of cases completed for runs with multiple cases).

To view the real-time progress of plots developed in the **Processing Setup** input window, select the **Minimize** button. The run window and the main window will be minimized, leaving only plot windows on the screen.

The model run should take less than a minute. Once it is finished, look at the *Seq:F\_01\_diag* plot, which should now show data for simulated pressure and its derivative:

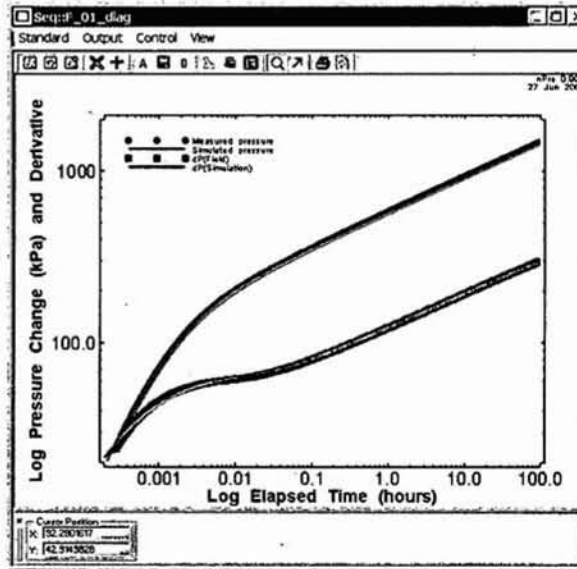


Figure 87.

After examining this plot, close nPre.

## 11.4 Evaluating Model Results

Many tools are available in nSIGHTS to evaluate test results. The simulation mode used dictates a test's output and consequently has a bearing on the analysis tool used. For example, a range grid is only output for range runs. Due to the great number of tools, and the myriad of ways of implementing these tools, only a few analysis tools will be examined in this tutorial. As the tutorial model ran in optimization mode, the model results evaluation will be specific to optimization mode.

Within this tutorial, a process for evaluating uncertainty in the well test simulation developed in nSIGHTS will be followed, as described in an article by R. M. Roberts, R. L. Beauheim and J. D. Avis (Quantifying Parameter Uncertainty in Well-Test Analysis, In Proceedings of International Groundwater Symposium, pg 238-239, Lawrence Berkeley National Laboratory, Berkeley, CA, March 25-28, 2002). The focus of the tutorial will be the steps required to produce the various plots, and not on interpretation of the results. The user is referred to the article above for details on interpretation of results.

The steps in the uncertainty analysis are summarized as follows:

- Evaluation of constraints and fitting parameters based on the sensitivity of fitting parameters to the chosen constraints.
- Residual analysis to determine whether the conceptual model adequately reproduces observed data.

- Quantifying uncertainty in the estimates of fitting parameters, through:
  - evaluation of joint confidence regions
  - perturbation analysis
  - uncertainty distributions for non-fitting parameters

Most of this analysis is conducted in nPost, designed as a post-processor for the nSIGHTS model. The last two methods, perturbation analysis and uncertainty distributions for non-fitting parameters, require the model to be run again under different conditions, and therefore are partly conducted in nPre.

### 11.4.1 Evaluation of Constraints and Fitting Parameters

Within nPost, a plot of the Jacobian matrix is used to evaluate the sensitivity of fitting parameters to the constraints. The sensitivity of a fitting parameter to a constraint indicates the effectiveness of a constraint in providing an estimate of that fitting parameter.

- (1) Open nPost.
- (2) Rename the default data page **Input Data** (by changing the object ID of the **DataPgDesc** object).
- (3) Create a new object: **Object**→**New**→**Read Input**→**nSIGHTS Optimizer Results**.  
The **Object** menu is accessed by selecting any of the objects in a page, and right-click to bring up the **Object** pop-up menu. Alternatively, use the **Object** menu in the menu bar. Note that the **Object** menu is page type specific.
- (4) The optimization results output file of the model run will be imported within this object.
  - Select the file **Tutorial.nOpt** using the browse button.
  - Select **Apply**.
- (5) Create a new data page. Rename the page **Jacobian Data**.
- (6) In the *Jacobian Data* data page, create a new object: **Object**→**New**→**nSIGHTS Results Extraction**→**Extract Jacobian**. Select **Apply**.



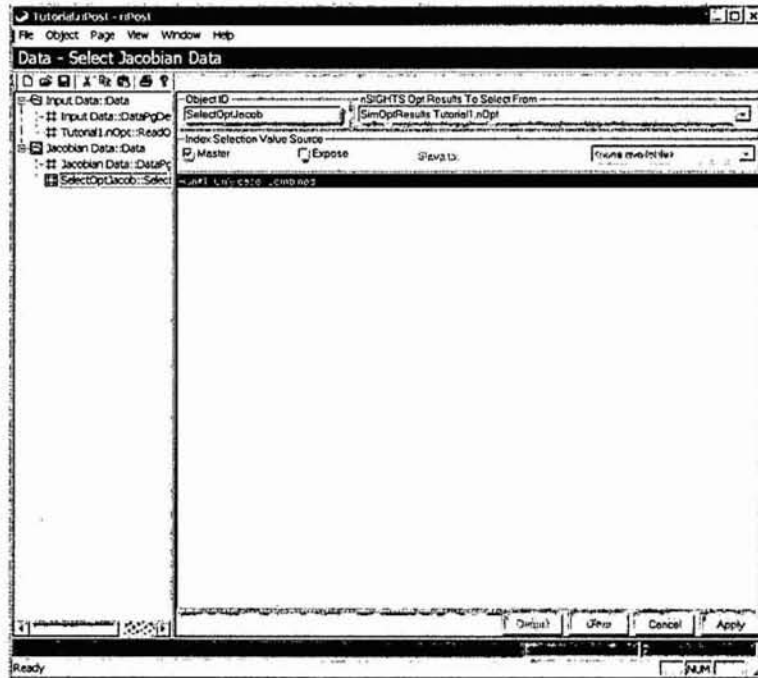


Figure 88. Select Jacobian Data Window

- (7) Create a new object: Object→New→Table Processing→Jacobian to Table.
- Change the Object ID to **Jacobian log P**.
  - In the Fit(s) drop-down-box, select *F\_01\_logP*.
  - Select Apply.

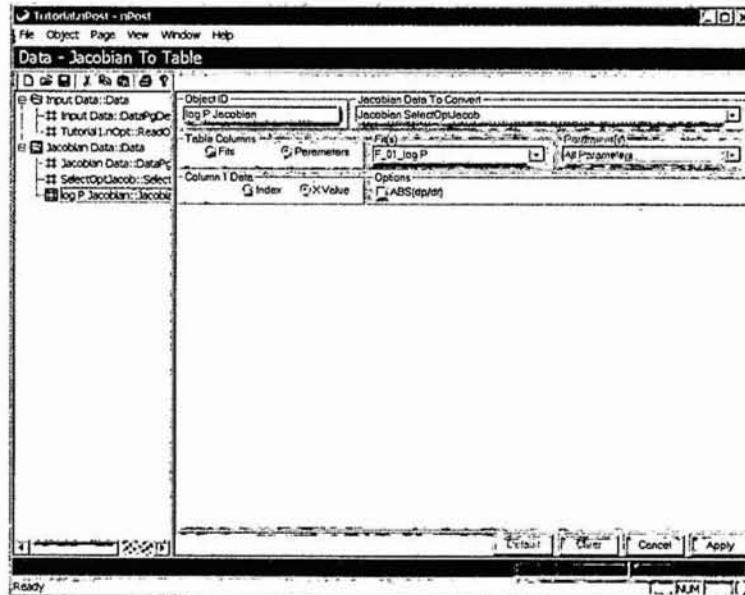


Figure 89. Jacobian to Table Window

- (8) Create a 2D plot page (Page→New 2D XY Plot).
- In the 2D XY object, change the name of the page to **Jacobian log P Plot**, and change the left margin to **100**. Select Apply.
  - In the X Axis object, change the Axis Type to Logarithmic.
  - Select the 2D Plot Anno object. Check the Axis Labels box, and type **Log Elapsed Time (hours)** for the X axis and **Sensitivity** for the Y axis labels. Select Apply.
- (9) Create a new object in the *Jacobian log P Plot* plot page: Object→New→Data: Single Table Series.
- The Table Data should already select *log P Jacobian*.
  - Select the first five check boxes. The five fitting parameters should be automatically selected in the drop-down-boxes (e.g. Test-zone compressibility).
  - Select Apply.

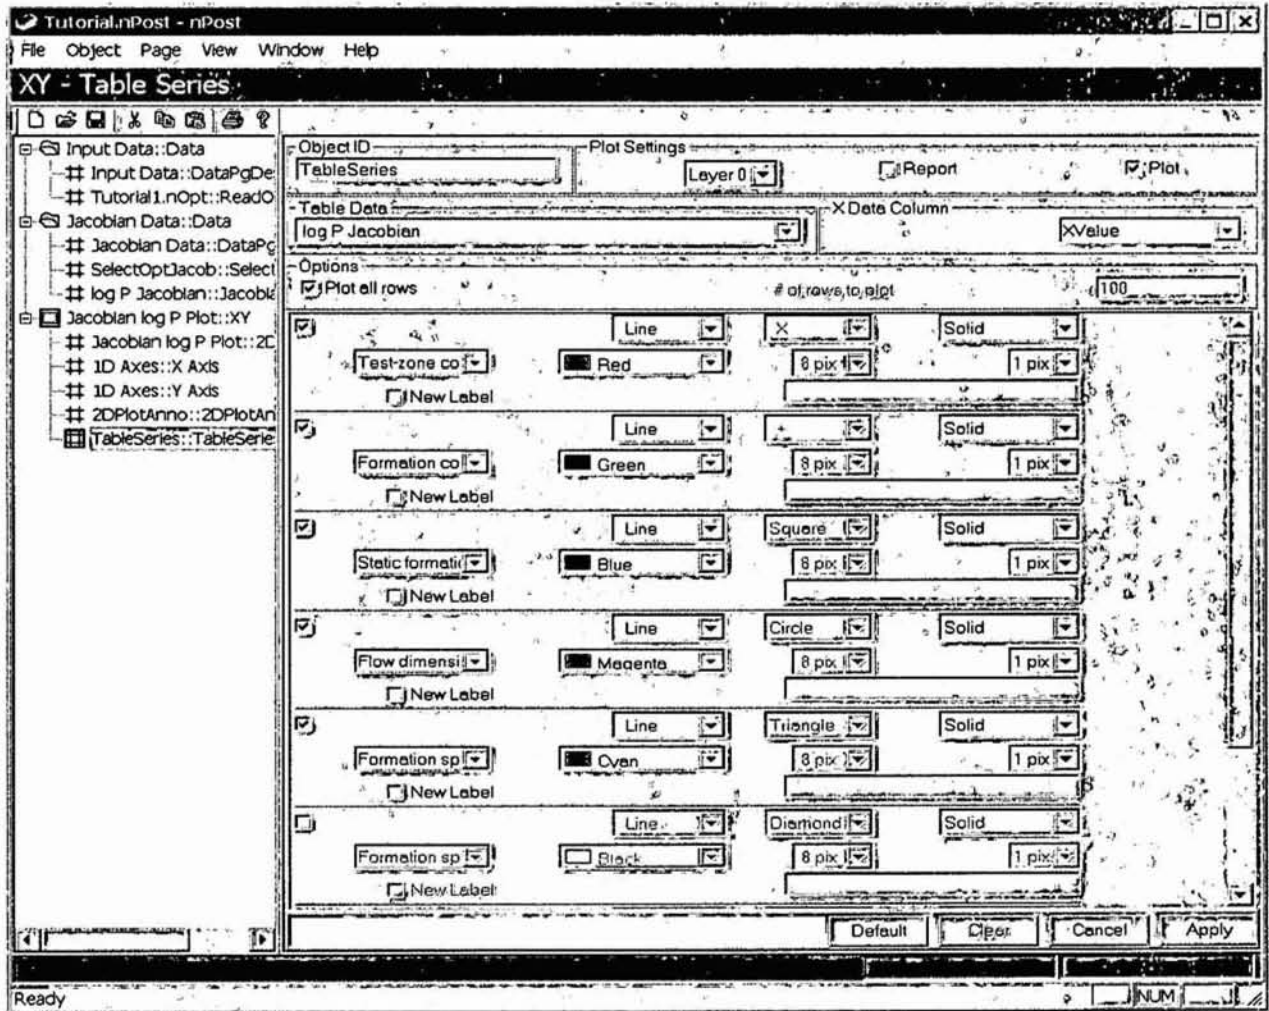


Figure 90. Table Data Series Window

- (10) Create a legend for the plot: Object→New→Anno: Series Legend.

- Select the first checkbox. The table series should already be selected in the adjacent drop-down-box (*Series Legend TableSeries Jacobian log P Plot*).
  - Change the Legend Font Size to 12 point.
  - Select Apply.
- (11) View the plot by selecting the *Jacobian log P Plot* plot page from the Window menu, or from the Window List window. The axes limits will need to be reset (select Axes->Data Limits in the 2D window pop-up menu), and the legend moved to an appropriate location (simply drag with the mouse).

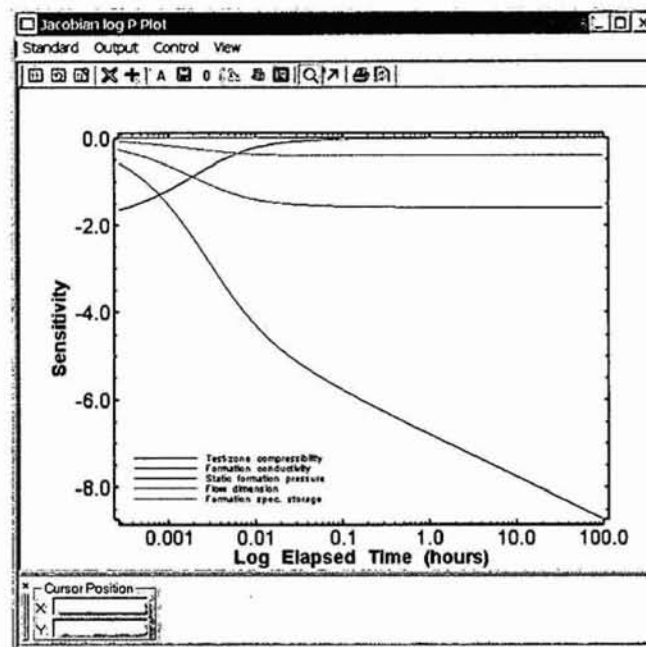


Figure 91. Jacobian Log P Plot

- (12) Steps (7) through (11) can be repeated for the  $F_{01\_log dP}$  fit.

Now is a good time to save the nPost configuration file. Name the file **Tutorial.nPost**.

### 11.4.2 Residual Analysis

Residuals are analyzed to determine whether the conceptual model sufficiently describes the observed data. Residuals should reflect random noise in the data, and be approximately randomly distributed (assuming the random noise to have a normal distribution). If the data are not normal, the conceptual model needs to be re-examined, or a reason for the non-normal behavior found (e.g. equipment problems that cannot be included in the conceptual model).

- (1) Create a new data page. Rename the page **Residual Data**.
- (2) In the *Residual Data* page, create a new object: Object→New→nSIGHTS Results

Extraction→Extract Residuals. Residuals are obtained from the optimization results file, already imported into nPost.

- Change the Object ID to **log P Residuals**.
- Select the first fit, Run #1 Only Case Combined F\_01 logP.
- Select **Apply**.

(3) Create a new object: **Object→New→Residual Processing→Calculate Residual Diagnostic**.

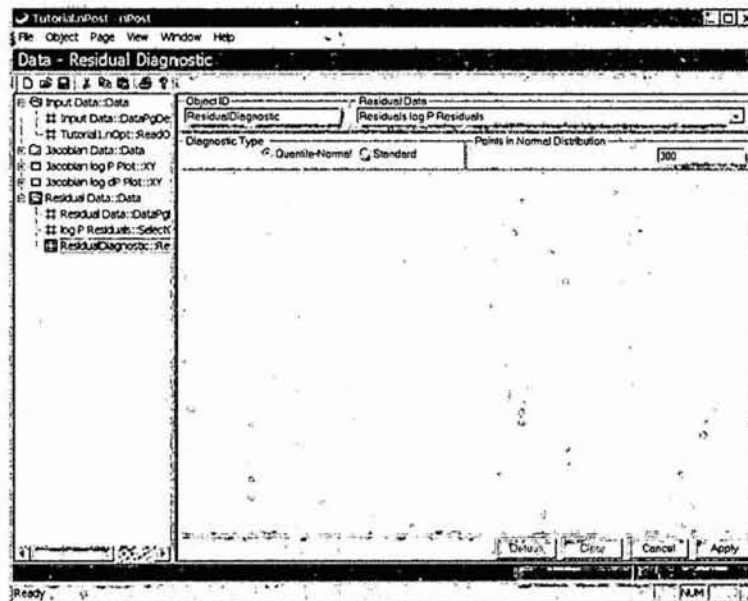


Figure 92. Residual Diagnostic Calculation Window

- Change the Object ID to **log P Res Diag**.
  - Keep the default input and settings, and select **Apply**.
- (4) Create a 2D plot page (**Page→New 2D XY Plot**).
- Change the name of the page to **log P Res Diag** and change the left margin to 125. Select **Apply**.
  - In the **X Axis** object, change the **Increment Label Format** to *Decimal* and *0.000*, and select **Apply**.
  - In the **Y Axis** object, change the **Increment Label Format** to *Decimal* and *0.000*, and select **Apply**.
  - Select the **2D Plot Anno** object. Check the **Axis Labels** box, and type **Normal Distribution** for the X axis and **Residuals** for the Y axis labels. Select **Apply**.
- (5) Create a new object in the *log P Res Diag* plot page: **Object→New→Data: XY Series**.
- Select the first two check boxes. Select *Quantile-Normal log P Res Diag* and *QuantileLine log P Res Diag* in the adjacent drop-down-boxes.
  - Change the *Quantile-Normal log P Res Diag XY Data* representation from *Line* to *Symbol*.
  - Select **Apply**.

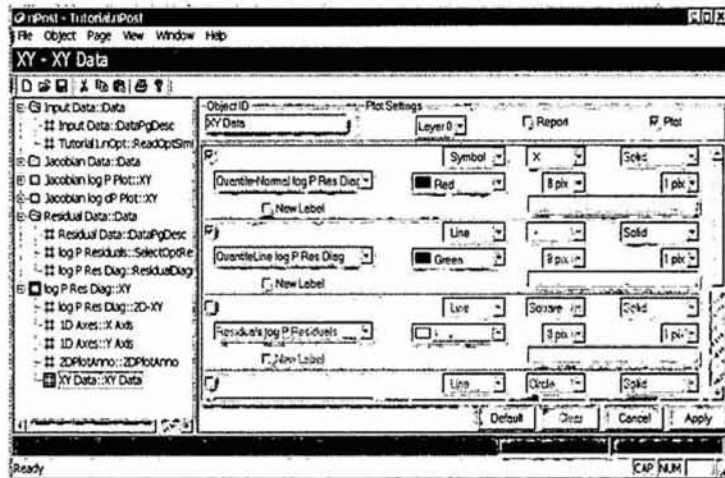


Figure 93. Data XY Series

- (6) Create a legend for the plot: **Object**→**New**→**Anno: Series Legend**.
  - Select the first checkbox. Select *SeriesLegend XY Data log P Res Diag* from the adjacent drop-down-box.
  - Change the Legend Font Size to 12 point.
  - Select **Apply**.
  
- (7) View the plot by selecting the *log P Res Diag* plot page from the **Window** menu, or from the **Window List** window. The axes limits will need to be reset (select **Axes**→**Data Limits** in the 2D window pop-up menu), and the legend moved to an appropriate location (simply drag with the mouse).

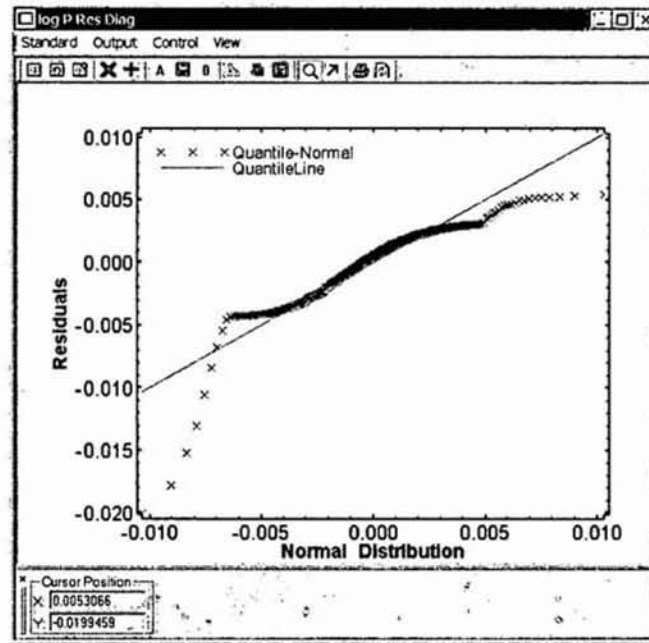


Figure 94. Log P Residual Dialog Plot

- (8) Steps (2) through (6) can be repeated for the  $F_{01\_log dP}$  fit.

### 11.4.3 Evaluation of Joint Confidence Regions

Joint confidence regions delineate areas that have a specified probability of containing the true parameter values. They evaluate the uncertainty in fitting parameter values due to fitting parameter correlations and data noise. This section will describe how confidence regions are plotted. Correlation coefficients are only calculated if there are multiple cases (e.g. perturbation analysis or sampling mode), and the viewing of correlation coefficients will be shown in Section 11.4.4 on perturbation analysis.

- (1) Create a new data page. Rename the page **Confidence Region Data**.
- (2) Within the *Confidence Region Data* data page, create a new object: **Object**→**New**→**nSIGHTS Results Extraction**→**Extract Covariance Matrices**. Joint confidence regions are obtained from the covariance matrix, stored in the optimization results file already imported into nPost.
  - Keep the defaults, and select **Apply**.
- (3) Create a 2D plot page (**Page**→**New 2D XY Plot**).
  - In the **2D-XY** object, change the name of the page to **K and n Confidence Region**, change the left margin to 100. Select **Apply**.
  - In the **X Axis** object, change the **Increment Label Format** to *Scientific* and  $0.0E+00$ , and select **Apply**.
  - In the **Y Axis** object, change the **Increment Label Format** to *Scientific* and  $0.000E+00$ , and

- select Apply.
- Select the **2D Plot Anno** object. Check the Axis Labels box, and type **Hydraulic Conductivity (m/s)** for the X axis and **Flow Dimension** for the Y axis labels. Select Apply.
- (4) Create a new object in the *K and n Confidence Region* plot page: **Object**→**New**→**Data: Confidence Limits**.
- Select *Formation Conductivity* for the X Variable and *Flow Dimension* for the Y Variable.
  - Select *Dual* as the Limit Type. This will create an ellipse surrounding the confidence region. *Single* will display an error bar for each axes.
  - Select Apply.
- (5) Create a legend for the plot: **Object**→**New**→**Anno: Series Legend**.
- Select the first checkbox. Select *SeriesLegend Covar Limits K and n Confidence Region* from the adjacent drop-down-box.
  - Change the Legend Font Size to 12 point.
  - Select Apply.
- (6) View the plot by selecting the *K and n Confidence Region* plot page from the Window menu, or from the Window List window. The axes limits will need to be reset (select **Axes**→**Data Limits** in the 2D window pop-up menu), and the legend moved to an appropriate location (simply drag with the mouse). As well, the plot may need to be resized in order to see the X axis increments (simply drag a corner of the plot window).

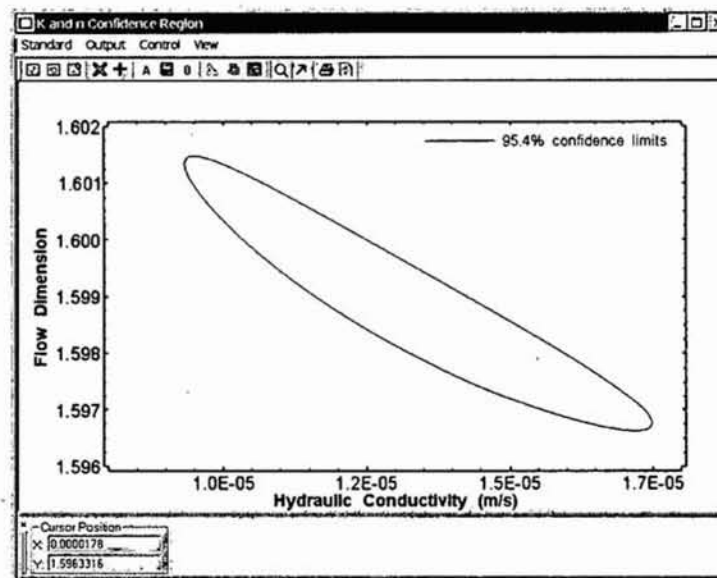


Figure 95. K and n Confidence Region Plot

- (7) Steps (3) to (6) can be repeated for other parameter combinations.



## 11.4.4 Perturbation Analysis

Perturbation analysis consists of executing a model run in nPre with many simulations; the initial estimates of fitting parameters for each simulation are randomly perturbed (i.e. initial estimate is slightly increased or decreased) and the model re-optimizes the fitting parameters from these perturbed estimates. If each perturbation simulation results in a fitting parameter value close to the initial estimate, the problem solution is unique and well-constrained.

In this tutorial, it will be demonstrated how to conduct a perturbation model run, and to create three useful plots for analyzing perturbation results: a histogram, XY scatter plot and XYZ scatter plot. As well, it will be shown how to view the correlation coefficients in a list page window.

It should be noted that the execution of the model for this example will take considerably more time than the simple optimization run (e.g. approximately 20 minutes on a 1GHz dual-processor Pentium III equipped with 2GB of RAM).

### 11.4.4.1 To conduct a perturbation model run

- (1) Open nPre.
- (2) Open the configuration file Tutorial.nPre (File→Open or the standard Windows open file button).
- (3) Select the Optimization input window. Select the Perturbation tab.
  - Check the Do optimization perturbation box.
  - Change the Perturbation span to **0.40**.

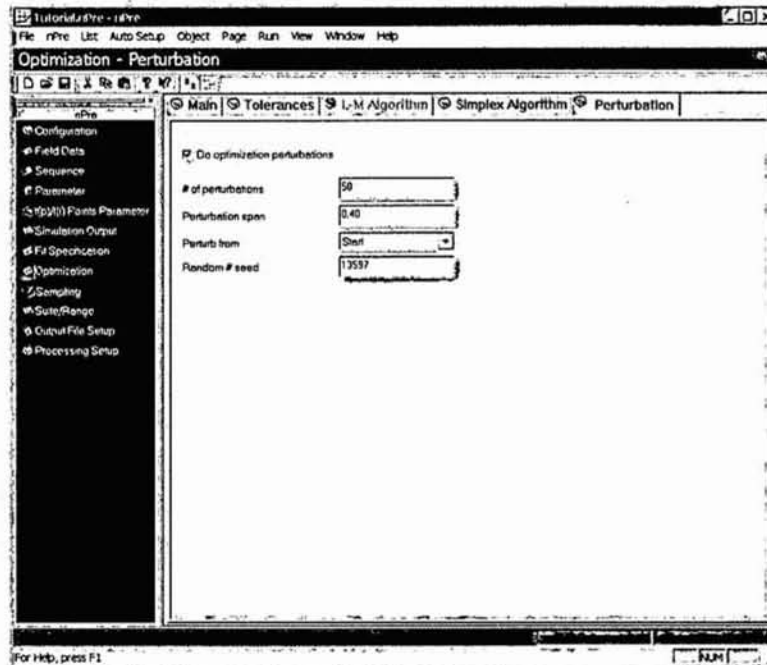


Figure 96. Perturbation Optimization Input Window

- (4) In the Output File Setup input window, Optimization tab, change the file name to **TutorialPerturb.nOpt**.
- (5) Select the Verbose command from the Run menu. As the model executes, a window will track the progress of the model. Note that the estimated time remaining will fluctuate considerably until several perturbation simulations have been conducted.

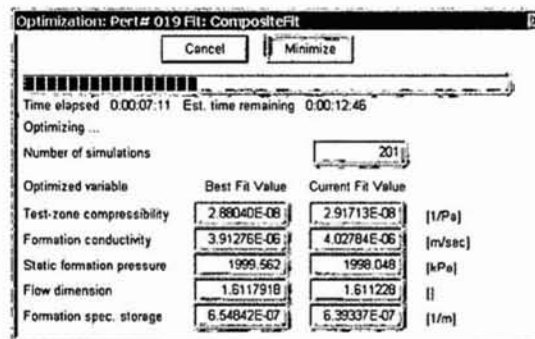


Figure 97. Optimization: Pert#019 Fit: CompositeFit

- (6) Exit nPre.

#### 11.4.4.2 To create a histogram plot

- (1) Within nPost, and the *Input Data* page, create a new object: Object→New→Read

Input→nSIGHTS Optimizer Results. The optimization results output file of the perturbation model run will be imported within this object.

- Select the file TutorialPerturb.nOpt using the browse button.
- Select Apply.

(2) Create a new data page. Rename the page **Perturb Results**.

(3) Within the *Perturb Results* data page, create a new object: Object→New→ nSIGHTS Results Extraction→Extract Optimizer Results Table.

- Select *SimOptResults TutorialPerturb.nOpt* as the nSIGHTS Opt Results to Select From.
- At the bottom of the property input window, select the All button. All cases included within the optimizer results file will be selected.
- Select the Optimization status checkbox. This will include fit value data within the table (e.g. SSE).
- Select Apply.

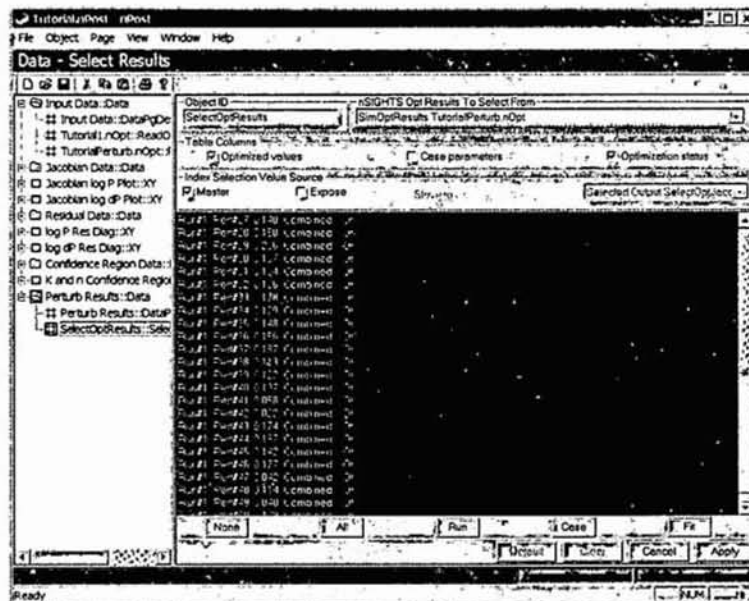


Figure 98. Data – Select Results

(4) Within the *Perturb Results* data page, create a new object: Object→New→Table Processing→Table Column To Histogram.

- Change the Object ID to **KTableHistogram**.
- Select *SelectOptResults Perturb Results* as the Table Data To Use.
- Select *Formation conductivity* from the Table Column drop-down-box.
- Select Apply.

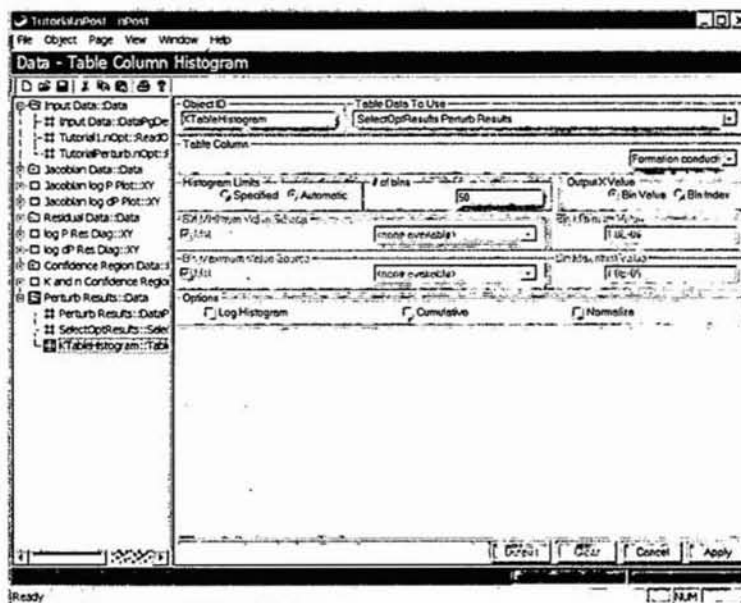


Figure 99. Data – Table Column Histogram Window

- (5) Create a 2D plot page (Page→New 2D XY Plot).
  - In the **2D-XY** object, change the name of the page to **K Perturb Histogram**. Select Apply.
  - In the **X Axis** object, change the **Increment Label Format** to *Scientific* and *0.0E+00*, and select Apply.
  - Select the **2D Plot Anno** object. Check the Axis Labels box, and type **Hydraulic Conductivity (m/s)** for the X axis and **Frequency** for the Y axis labels. Select Apply.
  
- (6) Create a new object in the *K Perturb Histogram* plot page: Object→New→Data: XY Histogram.
  - Select the first checkbox, and select *K Table Histogram Perturb Results* from the corresponding drop-down-box.
  - Select *%Avail* for Histogram Width. Check *Plot* in Edges box.
  - Select Apply.
  
- (7) View the plot by selecting the *K Perturb Histogram* plot page from the Window menu, or from the Window List window. The axes limits will need to be reset (select Axes→Data Limits in the 2D window pop-up menu).

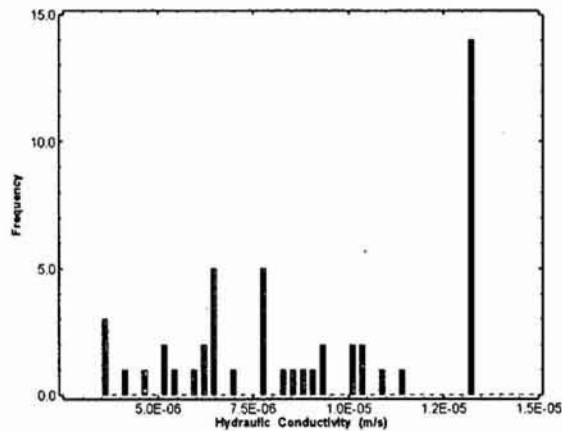


Figure 100. K Perturb Histogram

- (8) Histogram plots can be created for other parameters, by repeating steps (4) to (7).

#### 11.4.4.3 To create an XY scatter plot

- (1) Create a 2D plot page (Page→New 2D XY Plot).
  - Change the name of the page to **K and n Perturb Scatter** and change the left margin to 100. Select Apply.
  - In the X Axis object, change the Increment Label Format to *Scientific* and  $0.0E+00$ , and select Apply.
  - In the Y Axis object, change the Increment Label Format to *Decimal* and  $0.000$ , and select Apply.
  - Select the 2D Plot Anno object. Check the Axis Labels box, and type **Hydraulic Conductivity (m/s)** for the X axis and **Flow Dimension** for the Y axis labels. Select Apply.
- (2) Create a new object in the *K and n Perturb Scatter* plot page: Object→New→Data: Single Table Series.
  - Select *Formation conductivity* as the X Data Column.
  - Select the first checkbox, and select *Flow Dimension* from the corresponding drop-down-box.
  - Change the *Line* to *Symbol*.
  - Select Apply.
- (3) View the plot by selecting the *K and n Perturb Scatter* plot page from the Window menu, or from the Window List window. The axes limits will need to be reset (select Axes→Data Limits in the 2D window pop-up menu).

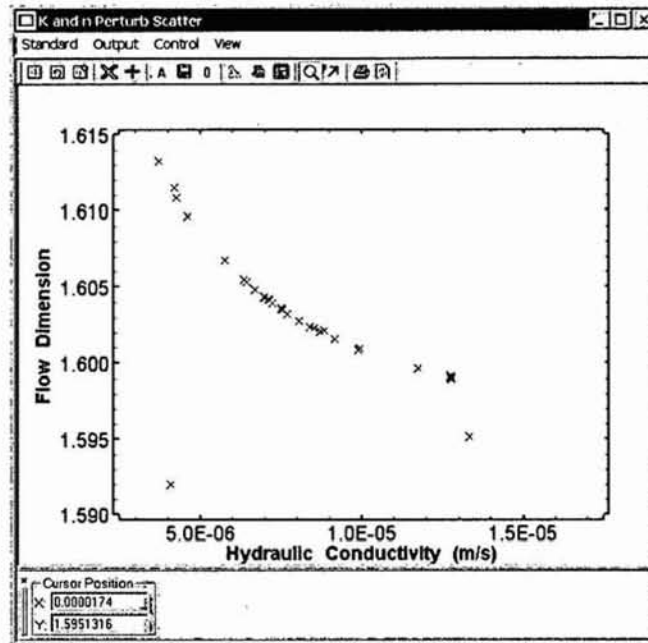


Figure 101. K and n Perturb Scatter Plot

- (4) A useful addition to the XY data plot are the confidence regions for each perturbation. Return to the *Perturb Results* data page, and add an **Extract Covariance Matrices** object (Object→New→nSIGHTS Results Extraction→Extract Covariance Matrices).
  - Select *SimOptResults TutorialPerturb.nOpt* from the nSIGHTS Opt Results To Select From drop-down list.
  - Check the Multiple checkbox in the Index Selection Value Source frame.
  - Press the All button.
  - Select Apply.
- (5) Return to the *K and n Perturb Scatter* plot page, and add Object→New→Data: Confidence Limits.
  - Select *Perturb Results* as the Covariance Data.
  - Select *Formation conductivity* as the X variable, and *Flow dimension* as the Y variable.
  - Select Limit Type *Dual*.
  - Select Apply.
- (6) View the *K and n Perturb Scatter* plot page again.

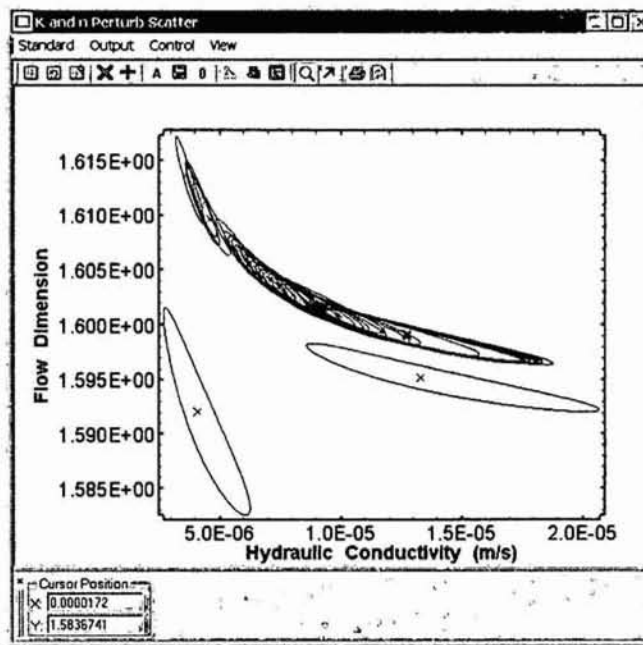


Figure 102. K and n Scatter Plot

- (7) XY scatter plots can be created for other parameter combinations, by repeating steps (1) to (6).

#### 11.4.4.4 To create an XYZ scatter plot

- (1) Create a 3D plot page (Page→New 3D XY Plot).
  - Change the name of the page to **K and n XYZ Scatter**. Select Apply.
  - In the **X Axis** object, change the Increment Label Format to *Scientific* and *0.0E+00*, and select Apply.
  - Select the **3D Axes Label** object. Check the Axis Labels box, and type **Hydraulic Conductivity (m/s)** for the X axis, **Flow Dimension** for the Y axis labels and **SSE** for the Z axis labels. Select Apply.
  
- (2) Create a new object in the *K and n XYZ Scatter* plot page: Object→New→Data: Table Series.
  - Select *Formation conductivity* as the X Data Column, select *Flow Dimension* as the Y Data Column, and select *SSE* as the Z Data Column.
  - Change the *Line* to *Symbol*. Change the symbol to *Filled C*.
  - Select Apply.



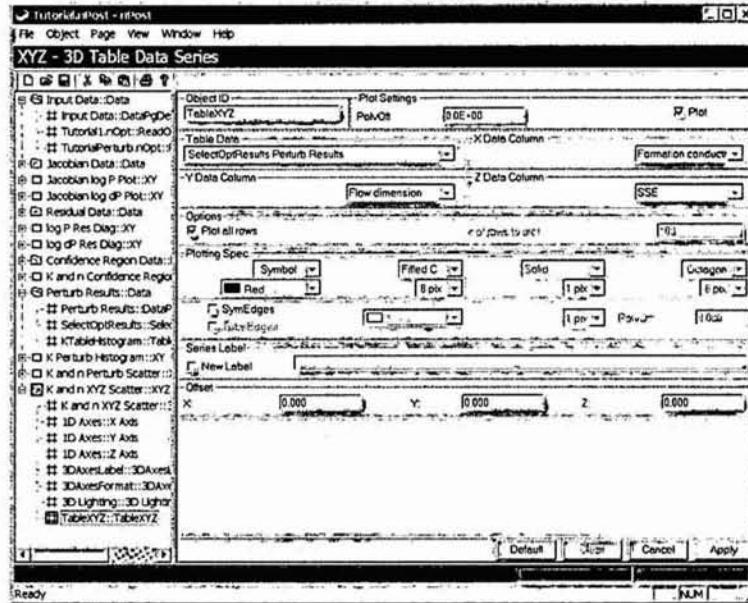


Figure 103. 3D Table Data Series Window

- (3) View the plot by selecting the *K and n XYZ Scatter* plot page from the Window menu, or from the Window List window. The axes limits will need to be reset (select Axes->Data Limits in the 2D window pop-up menu). As well, the plot's view can be adjusted, using the slider controls at the bottom of the window.

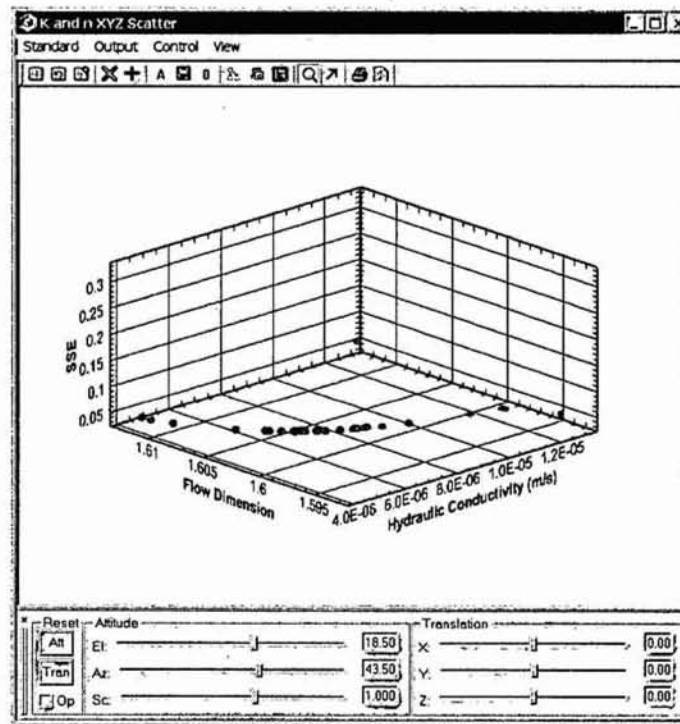


Figure 104. K and n XYZ Scatter Plot

- (4) XYZ scatter plots can be created for other parameter combinations, by repeating steps (1) to (3). Confidence limits may also be added, if all three parameters are fitting parameters.

#### 11.4.4.5 Viewing Correlation Coefficients

To view a table showing the correlation coefficients between parameters:

- (1) Create a list page (Page→New List).
- (2) Within the list page, create a new object: Object→New→Optimization Results. The page will automatically be named the object ID of this object.
  - Select the *SimOptResults TutorialPerturb.nOpt* from the Optimization Results to List drop-down-box.
  - Select *Run#1* in the Selected Runs to List frame.
  - Select only the Parameter correlations checkbox in the Listing Selections frame.
  - Select Apply.
- (3) View the list page by selecting the *OptRun:List* page in the Window menu or the Window List window menu. The list page will contain text, providing the correlation coefficients between parameters.

OptRun

Output View

nPost 0.90P

Version date 24 Jun 2002  
 Listing date 27 Jun 2002  
 QA status QA: no (beta)  
 Config file C:\nsights\Tutorial\Tutorial.nPost

Run#1/Combined : 50 Perturbations

Parameter Correlations

PearsonR	C_tz	K_fm	P_fm	n	ss_fm	FitValue
C_tz	1.000	0.586	-0.043	-0.047	-0.899	-0.950
K_fm		1.000	-0.002	-0.765	-0.693	-0.376
P_fm			1.000	-0.037	0.030	0.032
n				1.000	0.370	-0.220
ss_fm					1.000	0.772
FitValue						1.000

SpearmanR	C_tz	K_fm	P_fm	n	ss_fm	FitValue
C_tz	1.000	0.801	-0.091	-0.679	-0.827	-0.915
K_fm		1.000	0.014	-0.885	-0.919	-0.853
P_fm			1.000	-0.044	0.018	0.014
n				1.000	0.804	0.738
ss_fm					1.000	0.851
FitValue						1.000

Figure 105. OptRun:List page in the Window Menu or the List Windows Window

## 11.4.5 Uncertainty Distributions for Non-fitting Parameters

As with perturbation analysis, examining the uncertainty in fitting parameter uncertainty due to non-fitting parameter estimates requires running many simulations in nPre. For each simulation, a set of non-fitting parameters are determined randomly from an uncertainty distribution (i.e. optimization-sampling mode) and the model re-optimizes the fitting parameters. Correlations between non-fitting and fitting parameters can be observed from the results.

In this tutorial, it will be demonstrated how to conduct an optimization-sampling model run. As with perturbation analysis, a useful plot is the XY or XYZ scatter plot. Variables in an XY or XYZ scatter plot may be optimized parameters or sampled parameters. Extraction of results and creation of XY scatter plots is described in the perturbation analysis section. During extraction of the optimization results table (**Extract Optimizer Results Table** object), the Case Parameters checkbox should be selected in order to include sampled parameters in the resulting table data.

It should be noted that the execution of the model for this example will take considerably more time than the simple optimization run (e.g. approximately 10 minutes on a 1GHz dual-processor Pentium III equipped with 2GB of RAM).

### To conduct an optimization-sampling model run:

- (1) Open nPre.
- (2) Open the configuration file Tutorial.nPre (File→Open or the standard Windows open file button).
- (3) Select the Optimization input window. Select the Perturbation tab.
  - Uncheck the Do optimization perturbation box.
- (4) Select the Configuration input window. In the Main tab, select *Sampling* as the Simulation sub-type.
- (5) In the Parameter tab, select non-fitting parameters to be sampled. For the parameters outlined in the following table, select *Sample* in the Type cell, and double click on the Value cell to bring up the Sample Value Dialog. Enter the parameters provided in the table below.

Parameter	Distribution	Distribution Definition	
Formation thickness	Uniform	Low limit 8 m	Upper limit 15 m
External boundary radius	Normal	Mean 1E05 m	St.dev. 100m
Well radius	Normal	Mean 4 in	St.dev. 0.5 in

- (6) In the Sampling tab, select *no* for User specified variable correlations.
- (7) In the Output File Setup input window, Optimization tab, change the file name to **TutorialSampling.nOpt**.

- (8) Select the **Verbose** command from the **Run** menu. As the model executes, a window will track the progress of the model. Note that the estimated time remaining will fluctuate considerably until several perturbation simulations have been conducted.

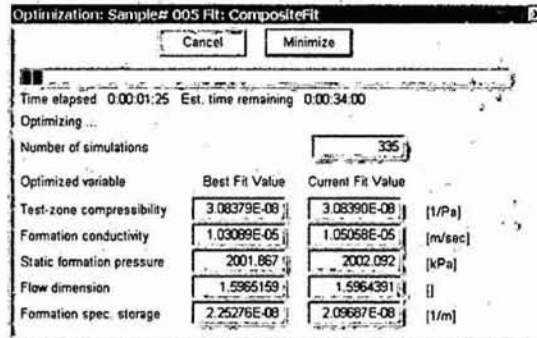


Figure 106. Optimization Sample # 005 Fit: CompositeFit Window

- (9) Exit nPre.

To create XY and XYZ scatter plots in nPost, refer to Section 11.4.4. The following is an example of an XYZ plot:

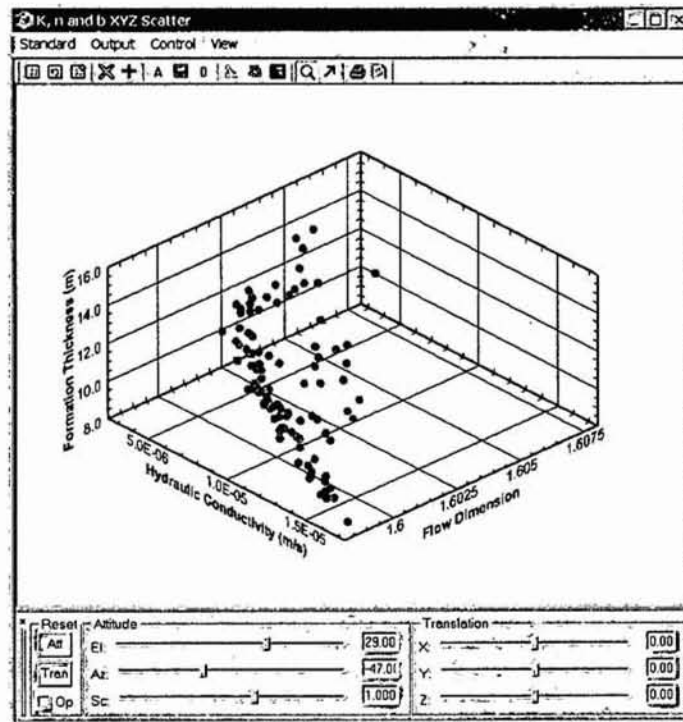


Figure 107. K, n and XYZ Scatter Plot in nPost

## 12 APPENDIX A – DATA OBJECT DESCRIPTIONS

### 12.1 Add Noise

**What:** Adds noise to Y data randomly based on a *Uniform* or *Normal* distribution.

**Why:** Used to create synthetic data.

**Used By:** Any object using XY data.

**Appearance:**

Figure 108. Add Noise Option

**Input Data:** XY data

**Output Data:** XY data

**Properties:**

**Add Noise**

Noise Distribution

A *Uniform* or *Normal* distribution can be selected.

Standard Deviation

For a normal noise distribution, the standard deviation limits the range of the added noise.

Noise Range

For a uniform distribution, the noise added to the data is limited to the entered range.

Random Seed

The random seed used to generate the noise in the data is entered, in order to be able to reproduce the added noise.

**Output Description**

Provides a description of the object, which will be used as the object type in drop-down lists, and the label of the object in a **Series Legend**.

## 12.2 Add XY to Array

**What:** Creates a collection of XY data from a single XY data object. Each time the **Apply** button is selected within the specified input XY data object, new XY data are added to the array. For example, if an **Extract XY** object (extracts XY data from a grid) is used as input, XY data for different Extraction Constant Value can be added to the array by changing the Extraction Constant Value in the **Extract XY** object and pressing the **Apply** button.

**Why:** To create an XY array from a data source containing many sets of XY data, but not in an XY array format (e.g. a grid, a curve file or a table).

**Used By:** Any object using an XY array, such as **Array Scale/Transform** or **XY Array Horsetail**.

**Appearance:**



Figure 109. XY to Array

**Application:** nPost

**Input Data:** XY data

**Output Data:** XY array

**Properties:**

**Input XY Data** Select the input XY data source for the array. Each time the input XY data source is changed (i.e. the **Apply** button is selected for the input XY data object), the new XY data will be added to the array.

**Status**

# of rows

Indicates the number of XY data sets in the array. Each XY data set is one row within the array.

## 12.3 Array Scale/Transform

**What:** Performs mathematical operations on XY array data types.

**Why:** Unit conversions or other data manipulations.

**Used By:** Any object using an XY array, such as **XY Array Horsetail** or **Select XY from XY Array**.

**Appearance:**

The screenshot shows a software dialog box titled "Array Scale/Transform". It contains several sections for configuring data operations. At the top, there are fields for "Object ID" (set to "XY Array S/T") and "XY Array Input Data" (set to "XYDataArrayXYToXYArray"). Below this is a section "Data Component to Operate On" with radio buttons for "XData" and "YData". The "Operation Order" is set to "Scale -> Transform", "Scale Operation" is "D \* Sc + Off", and "Transform" is "None". There are two sections for "Scale Value Source" and "Offset Value Source", each with "Mst" and "Exp" checkboxes and a "None available" button. The "Scale Value" is set to 1.0 and the "Offset Value" is set to 0.0. A "Null Processing" section has a "set to constant" checkbox and a "Constant" field set to 0.0. At the bottom, there are "Minimum Thresholding" and "Maximum Thresholding" sections, both with "None" selected in the dropdown and 0.0 and 1.0 in the respective input fields.

Figure 110. Array Scale/Transform

**Application:** nPost

**Input Data:** XY array

**Output Data:** XY array

**Properties:**

**XY Array Input Data** The input XY array data set that is scaled and/or transformed is selected.

**Data Components to Operate On**

X Data If selected, the X data of the array are scaled and/or transformed.

Y Data If selected, the Y data of the array are scaled and/or transformed.

The remaining scale/transform options are described in Section 7.1.3.



## 12.4 (Basic) Single Fit

**What:** Pairs field and simulated data to be selected as a constraint. Typically used in the Fit Specification/Graphics tab of the Fit Specification nPre input window.

**Why:** Used to determine the field data that simulated data should be compared to during an optimization or range simulation.

**Used By:** Fit Selection tab of the Fit Specification nPre input window.

**Appearance:**

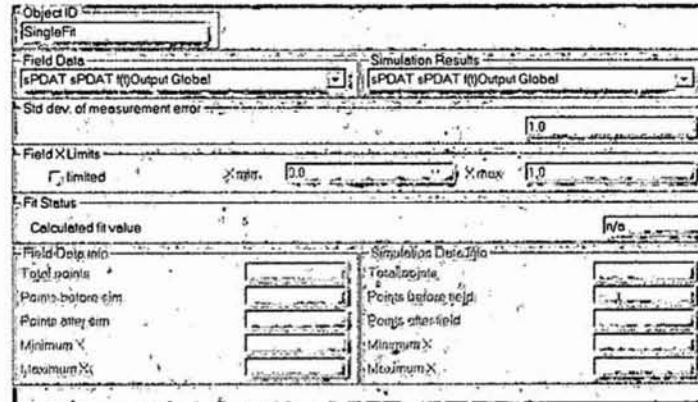


Figure 111. Single Fit Object Window

**Input Data:** XY data

**Output Data:** fit specification

### Properties:

**Field Data** Select XY or table data representing field data.

**Simulation Results** Select XY or table data representing simulation data.

**Std dev of measurement error** The standard deviation is used in the calculation of the Chi-squared minimization function.

**Field X Limits** The X limits of the data, usually time, can be limited between  $X_{min}$  and  $X_{max}$  if the limited checkbox is selected.

### Fit Status

Calculated Fit Value Once simulation results have been generated, the calculated fit value for the specified field and simulated data will be displayed.

**Field Data Info** Provides basic information about the field data selected, including the total number of points, points before and after the simulation, and the minimum and maximum X values.

**Simulation Data Info**

Provides the same information as **Field Data Info**, but for the selected simulation data. Will not be active until simulation results have been generated.

## 12.5 Calculate Basic Residual

**What:** Processes residuals from selected residual data. Residuals can be sorted in ascending or descending order, plotted versus the X Value or the data Index, and/or standardized to make the data comparable to a standard normal probability distribution.

**Why:** To manipulate residuals for the creation of specific plots.

**Used By:** XY Series plot object.

**Appearance:**

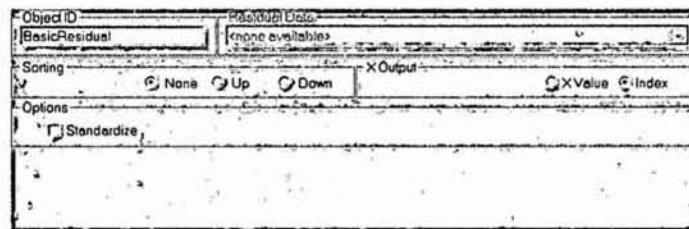


Figure 112. Calculate Basic Residual Window

**Application:** nPost

**Input Data:** Extract Residuals

**Output Data:** XY data

### Properties:

**Residual Data** Select the residual data to be processed.

### Sorting

- |              |   |
|--------------|---|
| <u>N</u> one | The residual data are not sorted.                 |
| <u>U</u> p   | The residual data are sorted in ascending order.  |
| <u>D</u> own | The residual data are sorted in descending order. |

### X Output

- |                |   |
|----------------|---|
| <u>X</u> Value | The X value of the resulting residuals will be equal to the X value of the input. |
| <u>I</u> ndex  | The X value of the resulting residuals will be equal to the index of the input.   |

### Options

- |                     |  |
|---------------------|--|
| <u>S</u> tandardize | If selected, the residuals will be standardized to make the data comparable to a standard normal probability distribution. |
|---------------------|--|

## 12.6 Calculate Residual Diagnostic

**What:** Manipulates selected residual data for a Quantile Normal or Standard normal residual plot.

**Why:** To plot a quantile normal or standard normal residual plot.

**Used By:** XY Series plot object.

**Appearance:**

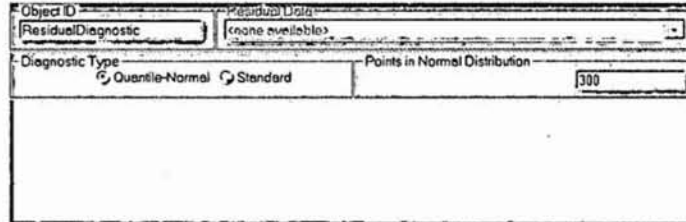


Figure 113. Calculate Residual Diagnostic Object Window

**Application:** nPost

**Input Data:** Extract Residuals

**Output Data:** Two XY data sets, one containing the manipulated data, the second a diagnostic line (*Quantile Line* or *CumNormDist*)

**Properties:**

**Residual Data** The residual data set manipulated is selected.

**Diagnostic Type**

Quantile-Normal Residual data are manipulated for a quantile-normal plot.

Standard Residual data are manipulated for a standard-normal plot.

**Points in Normal Distribution** The number of points for the resulting normal distribution is entered.

## 12.7 Composite Fit

**What:** Combines fit specification objects. A fit specification object contains a pair of field and simulated data to be selected as a constraint. Typically used in the Fit Specification/Graphics tab of the Fit Specification nPre input window.

**Why:** The model will fit all fits specified in this object simultaneously.

**Used By:** Fit Selection tab of the Fit Specification nPre input window.

**Appearance:**

The screenshot shows a window titled 'CompositeFit' with a table of fit objects. Each row contains a checkbox, a text field with the value '(none available)', a dropdown menu, and a text field with the value 'N/A'. At the bottom of the window, there is a 'Fit Status' section with a label 'Calculated fit value' and a text field containing 'N/A'.

Figure 114. Composite Fit Window

**Input Data:** Single Fit, Sequence Fit or Composite Fit

**Output Data:** fit specification

**Properties:**

For each checkbox selected, a fit object is selected. The additional box provides the calculated fit value for each selected fit object, once simulation results have been generated.

**Fit Status**

Calculated Fit Value Once simulation results have been generated, the calculated fit value for the composite fit will be provided.

## 12.8 Create Curve from XY Data

**What:** Creates functional approximations of XY data sets. The functions available include: Linear, Cubic Spline, Polynomial, Step Mid and Step Full. Each curve type is described in Section 7.1.5.

**Why:** Used to represent well-bore boundary conditions as a function of time, and parameters as a function of radius or pressure.

**Used By:** The Sequence tab and Parameter tab.

**Appearance:**

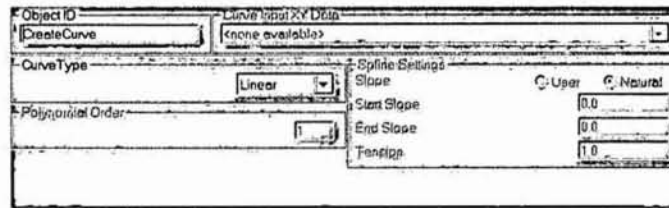


Figure 115. Curve Functions from XY Data

**Input Data:** XY data

**Output Data:** curve data

### Properties:

**Curve Input XY Data** The XY data set to be used as input data for the curve is selected.

**Curve Type** The curve type is selected: *Cubic Spline*, *Polynomial*, *Linear*, *StepMid* and *StepFull*. Each curve type is described in Section 7.1.5.

**Polynomial Order** For polynomial curve types, the order of the polynomial, between 1 to 10, is entered.

**Spline Settings** For cubic spline curve types, the shape of the curve may be modified by specifying the function slope at the extremes of the function or the spline tension.

Slope Function slopes at the extremes of the function are specified by the user (User is selected), or are not forced to any specific slope (Natural is selected).

Start Slope For user set slopes, the slope at the start of the function is specified.

End Slope For user set slopes, the slope at the end of the function is specified.

Tension Used to modify the shape of the function, increasing the tension factor has an effect similar to pulling on either ends of a piece of string, whereas decreasing the tension factor has the effect of providing slack to the piece of string.

## 12.9 Create Real Value

**What:** Outputs a single user-specified value.

**Why:** Used as input for many other objects.

**Used By:** Many other objects.

**Appearance:**

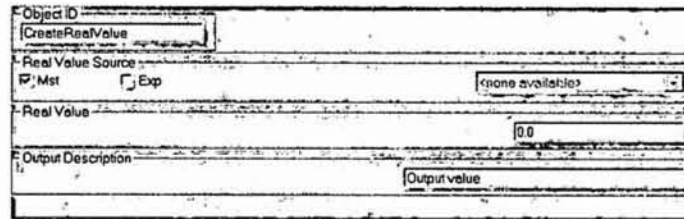


Figure 116. Creating a Real Value Object Number

**Input Data:** none

**Output Data:** real value

### Properties:

**Real Value Source** Specifies Master/Slave and expose properties. See Section 6.3 for more information on these properties.

**Real Value** A real value is entered.

**Output Description** Provides a description of the object, which will be used as the object type in drop-down lists, and the label of the object in a **Series Legend**.



## 12.10 Create XY Array

**What:** Creates a collection of XY data.

**Why:** Used to create custom XY output from nPre. For example, data processing in nPre can be output so that the same processing does not need to be repeated in nPost.

**Used By:** XY Data tab of the Output File Setup input window.

**Appearance:**

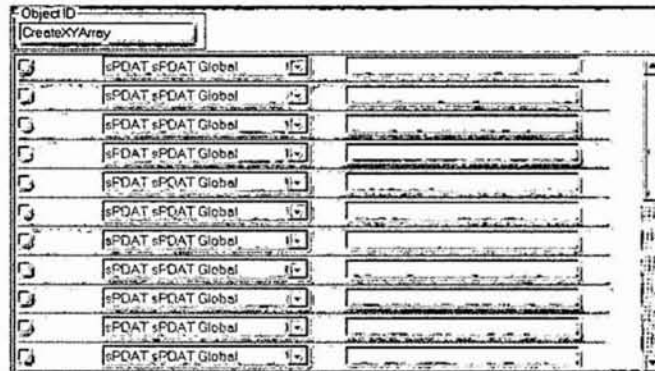


Figure 117. Create XY Array Window

**Application:** nPre

**Input Data:** XY data

**Output Data:** XY array

**Properties:**

XY data sets are added to the array by selecting a checkbox, and selecting an XY data object from the corresponding drop-down list. A text box is also provided where a short description of the XY data set may be entered.

## 12.11 Data Page Description

**What:** Contains documentation information. This object does not appear on any object selection menu. It is automatically created when a data page is created, and is always the first object on a data page.

**Why:** To document data processing and visualizations. The object ID for these objects is also used as the page identifier on the associated page button.

**Used By:** Nothing (no object output).

**Appearance:**

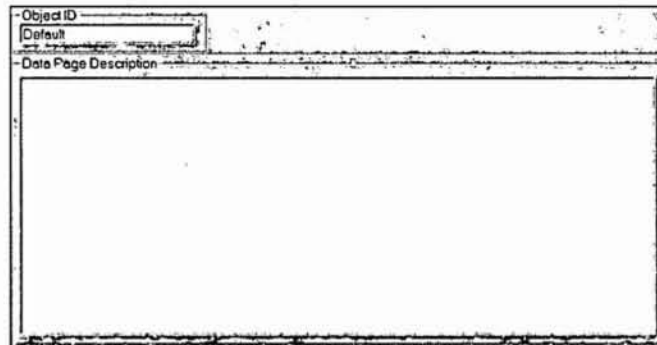


Figure 118. Data Page Description Window

**Input Data:** none

**Output Data:** none

**Properties:**

**Data Page Description** A large text box where up to 20 lines of text can be entered.

## 12.12 Dual Scale/Transform

**What:** Performs mathematical operations on both the X and the Y of XY data.

**Why:** Unit conversions or other data manipulations.

**Used By:** Any object using XY data.

**Appearance:**

Object ID	Dual XY S/T	
Name	Dual XY S/T	
Data File	<none available>	
X Scale/Transform		
Operation Order	Scale -> Transform	Scale Operation
		D * Sc + Off
		Transform
		None
Scale Value Source	<none available>	Scale Value
<input checked="" type="checkbox"/> Mst		1.0
Offset Value Source	<none available>	Offset Value
<input checked="" type="checkbox"/> Mst		0.0
Y Scale/Transform		
Operation Order	Scale -> Transform	Scale Operation
		D * Sc + Off
		Transform
		None
Scale Value Source	<none available>	Scale Value
<input checked="" type="checkbox"/> Mst		1.0
Offset Value Source	<none available>	Offset Value
<input checked="" type="checkbox"/> Mst		0.0
Options		
<input checked="" type="checkbox"/> +ve X only		
Output Description		

Figure 119. Dual Scale/Transform

**Input Data:** XY data

**Output Data:** XY data

**Properties:**

**Options**

+ve X only If selected, the scale/transform options are only performed on positive X values, and their corresponding Y values.

The remaining scale/transform options are described in Section 7.1.3.

## 12.13 Enter Table Data

**What:** Allows the user to input or modify table data. Table data can be input or modified by hand, pasted from the clipboard, or updated from another table data-type object.

**Why:** Used to input or modify table data.

**Used By:** Any object using table data.

**Appearance:**

Col ID	Col 1	Col 2	Col 3
1	0.0	0.0	0.0
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			

Figure 120. Enter Table Data Screen

**Input Data:** none or table data

**Output Data:** table data

**Properties:**

- Input Table Data** Table data from an object selected in this drop-down list may be entered into the table by selection of the Update button.
- Update** Upon selection of this button, the table will be replaced by the table values of the object selected as the Input Table Data.
- Data Format** Specifies the numeric format of the data. Number formatting options are described in Section 6.3.3.

Entering data into the table, and the object specific pop-up window are described in detail in Section 7.1.2.

## 12.14 Enter XY Data

**What:** Allows the user to input or modify XY data. XY data can be input or modified by hand, pasted from the clipboard, or updated from another XY data-type object.

**Why:** Used to input or modify XY data.

**Used By:** Any object using XY data.

**Appearance:**

	X	Y
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		

Figure 121. Input or Modify XY Data Screen

**Input Data:** none or XY data

**Output Data:** XY data

**Properties:**

- Input XY Data** XY data from an object selected in this drop-down list may be entered into the table by selection of the **Update** button.
- Update** Upon selection of this button, the table will be replaced by the XY values of the object selected as the **Input XY Data**.
- Data Format** Specifies the numeric format of the data. Number formatting options are described in Section 6.3.3.

Entering data into the table, and the object specific pop-up window are described in detail in Section 7.1.2.

## 12.15 Extract Covariance Matrices

**What:** Extracts covariance matrices from one or multiple simulations of an nSIGHTS Optimizer Results object. The confidence limits of the covariance matrix can be plotted using the **Confidence Limits** plot object.

**Why:** For the plotting of confidence limits or the viewing of the covariance matrix in a list page.

**Used By:** **Confidence Limits** plot object, or **Covariance List** list object.

**Appearance:**

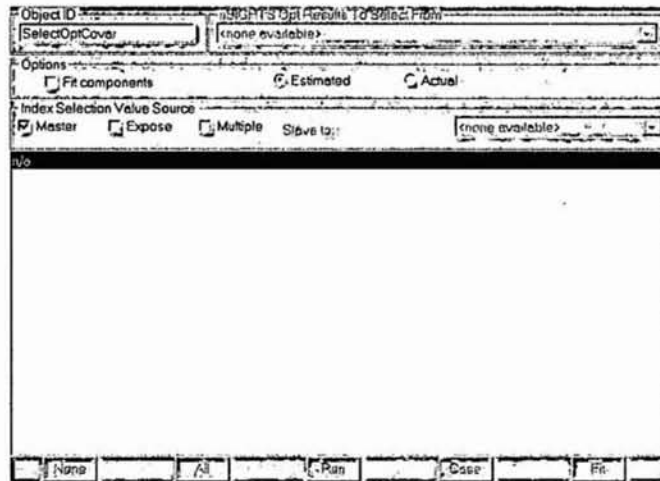


Figure 122. Extract Covariance Matrices

**Application:** nPost

**Input Data:** nSIGHTS Optimizer Results

**Output Data:** covariance data

**Properties:**

**nSIGHTS Opt Results To Select From** The optimizer results from which the covariance matrices are to be extracted is selected.

**Options**

Fit components

Allows the covariance matrix of sub-fits to be extracted. A sub-fit is a single fit of a composite fit.

Estimated

Covariance matrices use the estimated standard deviation specified by the user for each parameter.

Actual

Covariance matrices use the actual standard deviation calculated during the simulation.

**Index Selection Value Source**

A selection box containing a list of the available simulations allows the user to select the

	simulation from which to extract the covariance matrix. One or multiple selections may be made.
<u>Master</u>	Selection of the simulations may be slaved to another extraction object. See Section 6.3.1 for more information on Master/Slave controls.
<u>Expose</u>	Selection of the simulations may be exposed. See Section 6.3.2 for more information on exposed controls.
<u>Multiple</u>	Multiple simulations may be selected if this checkbox is selected.
<b>None</b>	Only for multiple selections, no simulations will be selected.
<b>All</b>	Only for multiple selections, all simulations will be selected.
<b>Run</b>	Only for multiple selections, all simulations with the same run identifier as the currently selected simulation will be selected.
<b>Case</b>	Only for multiple selections, all simulations with the same case identifier as the currently selected simulation will be selected.
<b>Fit</b>	Only for multiple selections, all simulations with the same fit as the currently selected simulation will be selected.



## 12.16 Extract Cube Indexes

- What:** Extracts cube indices from cube data within set limits.
- Why:** Cube indices are used to define the cube data to be plotted in a 3D plot.
- Used By:** 3D plot objects for cube data, **Cube Color Block** and **Cube Color Point**.
- Appearance:**

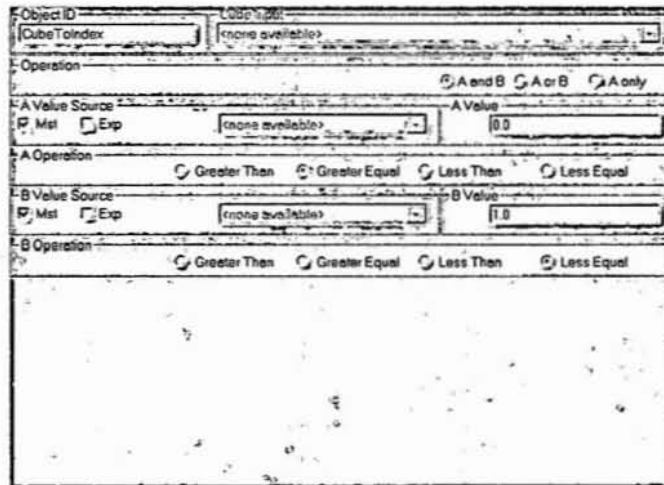


Figure 123. Extract Cube Indexes

- Input Data:** cube data
- Output Data:** cube indices
- Properties:**

<b>Cube Input</b>	The cube data set from which indices will be extracted is selected.
<b>Operation</b>	The cube data can be limited by two variables, A and B, representing the values at each point in the cube. If no data limitations are desired, select <u>A only</u> , and ensure the A Operation and A value will include all data.
<u>A and B</u>	Values are extracted if the value complies with both A restrictions and B restrictions.
<u>A or B</u>	Values are extracted if the value complies with either A restrictions or B restrictions.
<u>A only</u>	Data are only limited by the A value.
<b>A Value Source</b>	Master/Slave and expose controls for the A value. See Section 6.3 for more information on these controls.
<b>A Value</b>	A value for the A variable is entered.
<b>A Operation</b>	Cube data are limited to values “greater than”, “greater than or

	equal to", "less than", or "less than or equal to" the <u>A Value</u> .
<b>B Value Source</b>	Master/Slave and expose controls for the B value. See Section 6.3 for more information on these controls.
<b>B Value</b>	A value for the B variable is entered.
<b>B Operation</b>	Cube data are limited to values "greater than", "greater than or equal to", "less than", or "less than or equal to" to the <u>B Value</u> .

## 12.17 Extract Grid

**What:** Extracts a grid from cube data such that every point of the grid represents a specified constant grid axes value.

**Why:** To view a slice of the cube data.

**Used By:** Any object using grid data.

**Appearance:**

The screenshot shows a dialog box titled 'Extract Grid'. It contains the following elements:

- Object ID:** A text field with the value 'CubeExtractGrid'.
- Cube Input Data:** A dropdown menu showing '<none available>'.
- Extraction Options:** A section containing:
  - Grid X:** A dropdown menu set to 'Cube X'.
  - Grid Y:** A dropdown menu set to 'Cube Y'.
  - Interp on log data:** An unchecked checkbox.
- Extraction Constant Value Source:** A section containing:
  - Mst:** A checked checkbox.
  - Exp:** An unchecked checkbox.
  - A dropdown menu set to 'Reference A Value Cube Tolnd'.
- Extraction Constant Value:** A text field containing the value '0.0'.

Figure 124. Extract Grid Screen

**Input Data:** cube data

**Output Data:** grid data

**Properties:**

<b>Cube Input Data</b>	The cube data set from which a grid is extracted is selected.
<b>Extraction Options</b>	
<u>Grid X</u>	The cube variable used as the grid X is selected.
<u>Grid Y</u>	The cube variable used as the grid Y is selected.
<u>Interp on log data</u>	Linear interpolation between cube points is based on the log of the cube point values.
<b>Extraction Constant Value Source</b>	Master/Slave and expose controls. See Section 6.3 for more information on these controls.
<b>Extraction Constant Value</b>	The grid is extracted for cube variable values at this entered value (the cube variable is assumed to be the cube variable not specified as the grid X or grid Y). If the cube variable value occurs between cube points, the resulting grid point is linearly interpolated.

## 12.18 Extract Jacobian

**What:** Extracts Jacobian data from one or multiple simulations of an nSIGHTS Optimizer Results object.

**Why:** Jacobian data can be viewed in a list page, or converted to a table for plotting.

**Used By:** **Jacobian to Table** data object and **Jacobian List** list object.

**Appearance:**



Figure 125. Extract Jacobian Data Screen

**Application:** nPost

**Input Data:** nSIGHTS Optimizer Results

**Output Data:** Jacobian data

**Properties:**

**nSIGHTS Opt Results To Select From** The optimizer results from which the Jacobian matrix is to be extracted is selected.

**Index Selection Value Source** A selection box containing a list of the available simulations allows the user to select the simulation from which to extract the Jacobian matrix.

Master

Selection of the simulation may be slaved to another extraction object. See Section 6.3.1 for more information on Master/Slave controls.

Expose

Selection of the simulation may be exposed. See Section 6.3.2 for more information on exposed controls.

## 12.19 Extract Optimizer Results Table

**What:** Extracts a table containing optimized values, case parameters and/or optimization status from one or multiple simulations of an nSIGHTS Optimizer Results object.

**Why:** To examine optimization results.

**Used By:** Any object using table data, and the **Optimization Results** list object.

**Appearance:**

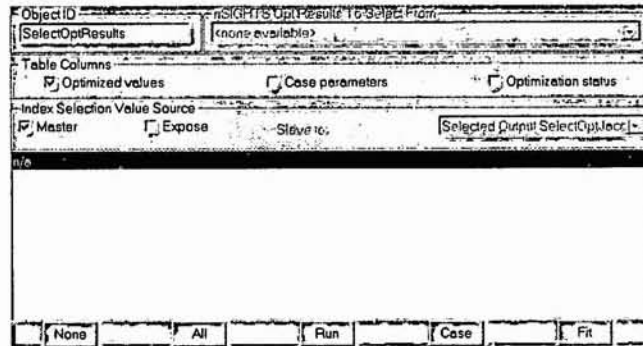


Figure 126. Extract Optimizer Results Table Screen

**Application:** nPost

**Input Data:** nSIGHTS Optimizer Results

**Output Data:** table data

**Properties:**

**nSIGHTS Opt Results To Select From** The optimizer results from which the optimization results are to be extracted is selected.

**Table Columns**

Optimized values

If selected, includes optimized values in the extraction.

Case parameters

If selected, includes the values of case parameters (e.g. suite, range or sampled values for the simulation) in the extraction.

Optimization status

If selected, includes optimization status in the extraction.

**Index Selection Value Source**

A selection box containing a list of the available simulations allows the user to select the simulation from which to extract the optimization results. One or multiple selections may be made.

Master

Selection of the simulations may be slaved to another

extraction object. See Section 6.3.1 for more information on Master/Slave controls.

Expose

Selection of the simulations may be exposed. See Section 6.3.2 for more information on exposed controls.

None

All simulations are unselected.

All

All simulations are selected.

Run

All simulations with the same run identifier as the currently selected simulation are selected.

Case

All simulations with the same case identifier as the currently selected simulation are selected.

Fit

All simulations with the same fit as the currently selected simulation are selected.

## 12.20 Extract Profile Grid

- What:** Extracts a grid from one or multiple simulations of an nSIGHTS profile results object. The grid will have time and radius for axes, with a pressure value at each point of the grid.
- Why:** To examine pressure results as a function of time and radius, spatially.
- Used By:** Any object using grid data.
- Appearance:**



Figure 127. Extract Profile Grid Screen

**Application:** nPost

**Input Data:** nSIGHTS Profile Results

**Output Data:** grid data

### Properties:

**nSIGHTS Profile Results To Select From**

The profile results from which the profile grid is to be extracted is selected.

**Index Selection Value Source**

A selection box containing a list of the available simulations allows the user to select the simulation from which to extract the profile grid.

Master

Selection of the simulation may be slaved to another extraction object. See Section 6.3.1 for more information on Master/Slave controls.

Expose

Selection of the simulation may be exposed. See Section 6.3.2 for more information on exposed controls.



## 12.21 Extract Range

**What:** Extracts XY data within a specified range.

**Why:** To examine a specified interval within XY data.

**Used By:** Any object using XY data.

**Appearance:**

Figure 128. Extract Range Screen

**Application:** nPost

**Input Data:** XY data

**Output Data:** XY data

**Properties:**

**Data Component to Operate On**

The XY range is extracted based on a range for either X data or Y data. The limits of the range are described by two variables, A and B.

**Operation**

The data are limited by two variables, A and B.

A and B

Values are extracted if the value complies with both A restrictions and B restrictions.

A or B

Values are extracted if the value complies with either A restrictions or B restrictions.

A only

Data are only limited by the A value.

**A Value Source**

Master/Slave and expose controls for the A value. See Section 6.3 for more information on these controls.

**A Value**

A value for the A variable is entered.

**A Operation**

XY data are limited to values "greater than", "greater than or equal to", "less than", or "less than or equal to" to the A Value.

<b>B Value Source</b>	Master/Slave and expose controls for the B value. See Section 6.3 for more information on these controls.
<b>B Value</b>	A value for the B variable is entered.
<b>B Operation</b>	XY data are limited to values “greater than”, “greater than or equal to”, “less than”, or “less than or equal to” the <u>B Value</u> .
<b>Output Description</b>	Provides a description of the object, which will be used as the object type in drop-down lists, and the label of the object in a <b>Series Legend</b> .

## 12.22 Extract Range Cube

**What:** Extracts cube data from one or multiple simulations of an nSIGHTS range results object.

**Why:** To examine the results of a range simulation with three range variables.

**Used By:** Any object using cube data.

**Appearance:**

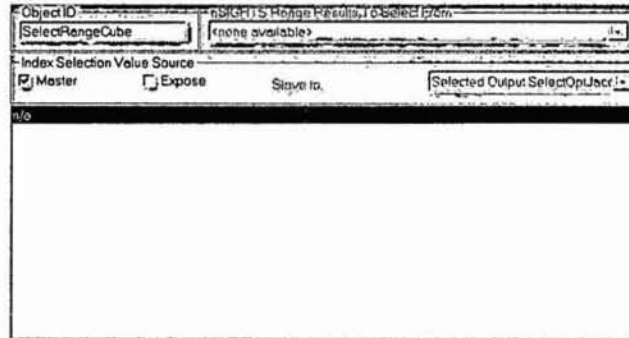


Figure 129. Extract Cube Data Screen

**Application:** nPost

**Input Data:** nSIGHTS Range Results

**Output Data:** cube data

**Properties:**

**nSIGHTS Range Results To Select From**

The range results from which the range cube is to be extracted is selected.

**Index Selection Value Source**

A selection box containing a list of the available simulations allows the user to select the simulation from which to extract the range cube.

Master

Selection of the simulation may be slaved to another extraction object. See Section 6.3.1 for more information on Master/Slave controls.

Expose

Selection of the simulation may be exposed. See Section 6.3.2 for more information on exposed controls.

## 12.23 Extract Range Grid

**What:** Extracts a grid from one or multiple simulations of an nSIGHTS range results object.

**Why:** To examine the results of a range simulation with two range variables.

**Used By:** Any object using grid data.

**Appearance:**



Figure 130. Extract Range Grid Screen

**Application:** nPost

**Input Data:** nSIGHTS Range Results

**Output Data:** grid data

**Properties:**

nSIGHTS Range Results To Select From

The range results from which the range grid is to be extracted is selected.

Index Selection Value Source

A selection box containing a list of the available simulations allows the user to select the simulation from which to extract the range grid.

Master

Selection of the simulation may be slaved to another extraction object. See Section 6.3.1 for more information on Master/Slave controls.

Expose

Selection of the simulation may be exposed. See Section 6.3.2 for more information on exposed controls.

## 12.24 Extract Real from Table

**What:** Extracts a table column property (number of rows, minimum value, maximum value, last row value, or specified row value) and converts it to a real data type. The real value is displayed in the object property window, in the **Current Value** frame.

**Why:** To examine table column properties.

**Used By:** Any object using real values.

**Appearance:**

Figure 131. Extract Range From Table Screen

**Input Data:** table data

**Output Data:** real value

**Properties:**

<b>Table Data To Use</b>	The table property is extracted from the selected table.
<b>Table Column</b>	The table property is extracted from the selected table column.
<b>Operation</b>	The table property extracted is selected: number of rows, minimum column value, maximum column value, last row value or specified row value.
<b>Index of row to select (0 based)</b>	If <i>Specified row value</i> is the table property extracted, the row is specified according to the entered row index.
<b>Current Value</b>	Displays the extracted table property value.

## 12.25 Extract Residuals

**What:** Extracts residuals (XY data) from one or multiple simulations of an nSIGHTS Optimizer Results object.

**Why:** To examine optimization residuals.

**Used By:** Any object using residuals, such as **Basic Residual** or **Calculate Residual Diagnostic**, as well as any object using XY data.

**Appearance:**

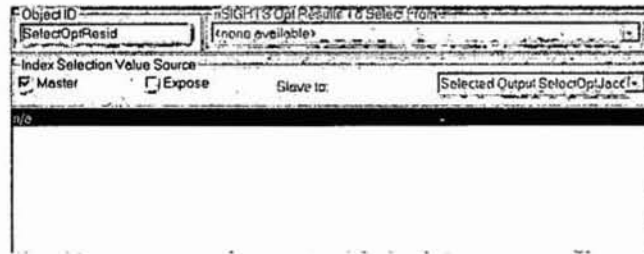


Figure 132. Extract Residuals Screen

**Application:** nPost

**Input Data:** nSIGHTS Optimizer Results

**Output Data:** XY data

**Properties:**

nSIGHTS Opt Results To Select From	The optimizer results from which the residuals are to be extracted is selected.
Index Selection Value Source	A selection box containing a list of the available simulations allows the user to select the simulation from which to extract the residuals.
<u>Master</u>	Selection of the simulation may be slaved to another extraction object. See Section 6.3.1 for more information on Master/Slave controls.
<u>Expose</u>	Selection of the simulation may be exposed. See Section 6.3.2 for more information on exposed controls.

## 12.26 Extract Sequence(s)

**What:** Extracts XY data for one or multiple sequences, based on the sequences defined by sequence time data.

**Why:** To examine simulation results within one or a set of defined sequences.

**Used By:** Any object using XY data.

**Appearance:**

Figure 133. Extract Sequence Screen

**Input Data:** XY data and sequence time interval data

**Output Data:** XY data

**Properties:**

<b>XY Data To Extract From</b>	The XY data set from which data are extracted is selected.
<b>Sequence Time Data</b>	The sequence time data set is selected. In nPre, the sequence time data set is by default a global object defined in the Sequence input window. In nPost, the sequence time data must be read in with a <b>Sequence Time Interval Data</b> object, or with XY or profile simulation results.
<b># of Sequences</b>	<u>Single</u> or <u>Multiple</u> sequences may be selected.
<b>Time Adjustment</b>	The extracted X values, or time, may be adjusted by resetting the start time, or by removing duplicate times.
<b>Pressure/Flow Rate Adjustment</b>	The extracted Y values, or pressure or flow rate, may be adjusted.
<u>Adjust Start</u>	If selected, all pressure or flow rate values are



	decreased by the starting pressure/flow rate value, or offset by the entered value.
<u>Start</u>	Pressure/flow rates are decreased by the starting pressure/flow rate value
<u>Offset</u>	Pressure/flow rates are offset by the value entered in the adjacent text box.
<u>ABS(Y)</u>	If selected, the extracted Y values are the absolute value of the adjusted pressure/flow rates.
<u>log10(Y)</u>	If selected, the log of the adjusted pressure/flow rates is extracted.
<u>Set final</u>	If selected, the final pressure/flow rate is specified in the adjacent text box.
<b>Start Sequence Value Source</b>	The sequences available in the specified Sequence Time Data are listed, and the starting sequence is selected. XY data will be extracted starting at this sequence.
<b>End Sequence Value Source</b>	The sequences available in the specified Sequence Time Data are listed, and if multiple sequences were specified, the end sequence is selected.

## 12.27 Extract Table Rows

**What:** Extracts a range of rows from a table column based on specified limits.

**Why:** To examine a subset of the data.

**Used By:** Any object using table data.

**Appearance:**

Figure 134. Extract Table Rows Screen

**Input Data:** table data

**Output Data:** table data

**Properties:**

Table Data To Use	Table rows are extracted from the selected table.
Table Column	Table rows are extracted from the selected table column.
Operation	The table rows are extracted according to a range of values, specified by two limit variables, A and B.
<u>A and B</u>	Rows are extracted if the value complies with both A restrictions and B restrictions.
<u>A or B</u>	Rows are extracted if the value complies with either A restrictions or B restrictions.
<u>A only</u>	Rows are extracted if the value complies the A restriction.
A Value Source	Master/Slave and expose controls for the A value. See Section 6.3 for more information on these controls.
A Value	A value for the A variable is entered.
A Operation	Values are limited to values “greater than”, “greater than or equal to”, “less than”, or “less than or equal

to” to the A Value.

**B Value Source**

Master/Slave and expose controls for the B value. See Section 6.3 for more information on these controls.

**B Value**

A value for the B variable is entered.

**B Operation**

Values are limited to values “greater than”, “greater than or equal to”, “less than”, or “less than or equal to” the B Value.


## 12.28 Extract XY

**What:** Extracts data from a grid corresponding to a specified constant X or Y value. The resulting X value will be based on one of the grid axes, and the resulting Y value is based on the value at each grid point.

**Why:** To view a slice of grid data.

**Used By:** Any object using XY data.

**Appearance:**

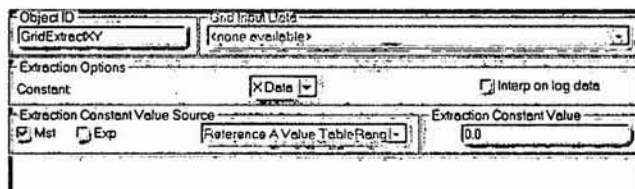

The screenshot shows a dialog box titled "Extract XY Data from Grid Screen". It has several sections: "Object ID" with a text field containing "GridExtractXY" and a "Grid Input Data" dropdown menu showing "<none available>"; "Extraction Options" with a "Constant" dropdown menu set to "Date", an "Interp on log data" checkbox, and an "Extraction Constant Value Source" section with "Mst" and "Exp" checkboxes and a dropdown menu set to "Reference A Value TableRange"; and an "Extraction Constant Value" text field containing "0.0".

Figure 135. Extract XY Data from Grid Screen

**Input Data:** grid data

**Output Data:** XY data

**Properties:**

<b>Grid Input Data</b>	The grid data set from which the XY data are extracted is selected.
<b>Extraction Options</b>	
<u>Constant:</u>	The grid axes to be used as the extraction constant is selected.
<u>Interp on log data</u>	Linear interpolation between two grid points is based on the log of the grid point values.
<b>Extraction Constant Value Source</b>	Master/Slave and expose controls. See Section 6.3 for more information on these controls.
<b>Extraction Constant Value</b>	X and Y values are extracted for constant values of the grid axes specified as <u>Constant:</u> at this entered value. If the constant value occurs between two grid points, the resulting XY point is linearly interpolated.

## 12.29 Extract XY from XY Results

**What:** Extracts one set of XY data from one or multiple simulations of an nSIGHTS XY Results object.

**Why:** To examine simulation results (e.g. pressure as a function of time).

**Used By:** Any object using XY data.

**Appearance:**



Figure 136. Extract XY Data from XY Results Screen

**Application:** nPost

**Input Data:** nSIGHTS XY Results

**Output Data:** XY data

**Properties:**

<b>nSIGHTS XY Results To Select From</b>	The XY simulation results from which the XY data are extracted is selected.
<b>XY Data to Select</b>	Select the XY data from the XY data sets available in the simulation file.
<b>Index Selection Value Source</b>	A selection box containing a list of the available simulations allows the user to select the simulation from which to extract the XY data. One or multiple selections may be made.
<u>Master</u>	Selection of the simulations may be slaved to another extraction object. See Section 6.3.1 for more information on Master/Slave controls.
<u>Expose</u>	Selection of the simulations may be exposed. See Section 6.3.2 for more information on exposed controls.
<u>Multiple</u>	Multiple simulations may be selected if this checkbox is selected.

<b>None</b>	Only for multiple selections, no simulations will be selected.
<b>All</b>	Only for multiple selections, all simulations will be selected.
<b>Run</b>	Only for multiple selections, all simulations with the same run identifier as the currently selected simulation will be selected.
<b>Case</b>	Only for multiple selections, all simulations with the same case identifier as the currently selected simulation will be selected.
<b>Fit</b>	Only for multiple selections, all simulations with the same fit as the currently selected simulation will be selected.

## 12.30 Fourier Transform on Y

**What:** Conducts a forward or inverse Fourier transform on Y data.

**Why:** To observe frequency components of a test response.

**Used By:** Any object using XY data.

**Appearance:**

Figure 137. Fourier Transform on Y Screen

**Input Data:** XY data

**Output Data:** XY data

**Properties:**

**XY Fourier Transform**

The XY data set to apply the Fourier transform is selected.

**Operation**

Either a forward or inverse Fourier transform is calculated.

**Inverse Options**

For inverse Fourier transforms only, Y may be scaled by  $2/n$ , and X may be scaled by the entered value.

**Output Description**

Provides a description of the object, which will be used as the object type in drop-down lists, and the label of the object in a **Series Legend**.

**# of FFT points**

The number of calculated Fourier transform points is displayed.



## 12.31 Full Table Correlations

**What:** Calculates the Pearson R or Spearman R correlation coefficients between all column pairs within a table. For example, for a table with three columns, the correlation coefficient is calculated between column 1 and column 2, column 1 and column 3 and column 2 and column 3.

**Why:** Determines the correlation between table columns.

**Used By:** Any object using table data. The resulting coefficients can be viewed with the **View Table Data** object.

**Appearance:**

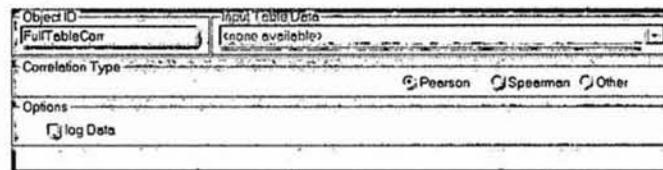


Figure 138. Full Table Correlations Screen

**Input Data:** table data

**Output Data:** table data: the correlation coefficients using column 1 are within column 1 or row 1, the correlation coefficients using column 2 are within column 2 or row 2, etc., such that the correlation coefficient between column 1 and column 3 can be found in row 1, column 3 or row 3, column 1.

**Properties:**

**Table Data To Use**

The input table data set is selected.

**Correlation Type**

The correlation coefficient to be calculated is selected: Pearson R or Spearman R. Other is for future use and is not currently supported.

**Options**

log Data

If the table data are log transformed, toggle the checkbox on.

## 12.32 Histogram

- What:** Creates the input data for a histogram plot based on cube, grid or XY data. The actual histogram is plotted using an **XY Series** plot object on a plot page, with this object as the input. Note there are separate objects for each data type.
- Why:** Manipulates data in order to plot a histogram.
- Used By:** Any object using XY data. In particular, the **XY Series** plot object is used to plot the histogram.
- Appearance:** The appearance is identical for each data type, except for the name of the input data frame, and an extra frame for XY data. The appearance is shown for XY data:

Figure 139. Histogram Screen

**Input Data:** cube, grid or XY data

**Output Data:** cube, grid or XY data

### Properties:

- |  |   |
|--|---|
| <b>Cube/Grid/XY Input Data</b>               | The input data set to be converted to a histogram is selected.  |
| <b>Data Components to Operate On</b>         | XY data only. The value frequency of X data or Y data may be calculated for the histogram.                                |
| <b>Histogram Limits</b><br><u>Automatic.</u> | Bin minimum and maximums are <u>Specified</u> or <u>Automatic</u> .   |
| <b># of bins</b>                             | The number of bins for the histogram are entered in the text box.   |
| <b>Output X Value</b>                        | The X value of the histogram is the Bin Value or the Bin Index.   |
| <b>Bin Minimum Value Source</b>              | Master/Slave Controls for the bin minimum, if specified. See Section 6.3.1 for more information on Master/Slave controls. |
| <b>Bin Minimum Value</b>                     | If specified, the bin minimum is entered in the text  |

	box.
<b>Bin Maximum Value Source</b>	Master/Slave Controls for the bin maximum, if specified. See Section 6.3.1 for more information on Master/Slave controls.
<b>Bin Maximum Value</b>	If specified, the bin maximum is entered in the text box.
<b>Options</b>	
<u>Log Histogram</u>	The log of the X or Y data is calculated before the value frequency is calculated.
<u>Cumulative</u>	Cumulative value frequencies are calculated.
<u>Normalize</u>	Value frequencies are normalized.

## 12.33 Integrate

**What:** Calculates the integral of XY data.

**Why:** To find the area under an XY curve.

**Used By:** Any object using XY data.

**Appearance:**

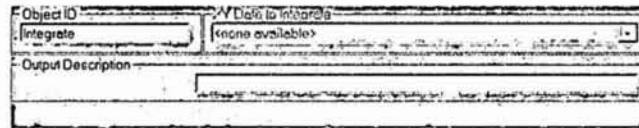


Figure 140. Integrate XY Data

**Input Data:** XY data

**Output Data:** XY data

### Properties:

**XY Data to Integrate**

The XY data set to be integrated is selected.

**Output Description**

Provides a description of the object, which will be used as the object type in drop-down lists, and the label of the object in a **Series Legend**.

## 12.34 Interpolate Table Columns

**What:** Interpolates Y values based on a given value for X. Values in the X table column must be in ascending order.

**Why:** To determine a Y value based on any given X value.

**Used By:** Any object using real values.

**Appearance:**

Figure 141. Interpolate Table Columns Screen

**Input Data:** table data

**Output Data:** 2 real values, one X value (interpolant value) and one Y value (interpolated value).

**Properties:**

<b>Table Data To Use</b>	Table columns are interpolated from the selected table.
<b>X Data Column</b>	Table column to be used as the X value.
<b>Y Data Column</b>	Table column to be used as the Y value.
<b>Interpolant Value Value Source</b>	Master/Slave controls for the interpolant value. See Section 6.3 for more information on these controls.
<b>Interpolant Value Value</b>	The X value used to interpolate the Y value is entered.
<b>Interpolation Method</b>	Interpolation method is selected, described in detail in Section 7.1.4.
<b>Options</b>	The log of the X or Y value may be taken after interpolation.
<b>Interpolation Results</b>	Displays the resulting interpolated Y value.

## 12.35 Interpolate XY Data from Curve

**What:** Interpolates XY values based on curve data, for a specified number of points and specified limits.

**Why:** This object allows curve data to be plotted.

**Used By:** Any object using XY data.

**Appearance:**

Figure 142. Interpolate XY Data from Curve Screen

**Input Data:** curve data and if *input X* interpolation method, XY data

**Output Data:** XY data

**Properties:**

<b>Curve to Interpolate</b>	The curve to interpolate is selected.
<b>Interpolation Method</b>	Interpolation method is selected, described in detail in Section 7.1.4.
<b>Number of points</b>	For all interpolation methods except <i>Input X</i> , determines the number of equally spaced X values and corresponding interpolated Y values.
<b>Log relative start</b>	For <i>Log (Relative)</i> interpolation method only, determines the value of the first log X value.
<b>Limit Settings</b>	For all interpolation methods except <i>Input X</i> .
<u>Specified</u>	The minimum and maximum X values are specified in the <u>Minimum</u> and <u>Maximum</u> text boxes.
<u>From Input</u>	Determines the minimum and maximum X values automatically from the input data.
<b>Input X</b>	For the <i>Input X</i> interpolation method, XY data are selected from which the X values are used to calculate an interpolated Y value.

## 12.36 Jacobian to Table

**What:** Converts Jacobian data to table data.

**Why:** To examine Jacobian data.

**Used By:** Any object using table data.

**Appearance:**

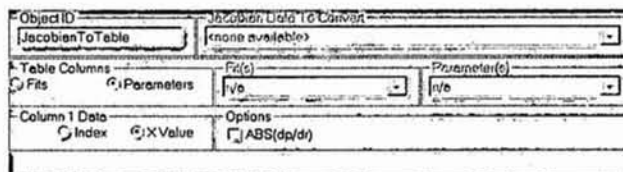


Figure 143. Jacobian to Table Screen

**Application:** nPost

**Input Data:** Jacobian data

**Output Data:** table data

**Properties:**

<b>Jacobian Data To Convert</b>	The Jacobian data set to convert is selected.
<b>Table Columns</b>	The resulting table columns will contain <u>Fits</u> or <u>Parameters</u> .
<b>Fit(s)</b>	For parameter table columns, the fit for which parameters will be extracted is selected. All fits or any individual fit may be selected.
<b>Parameter(s)</b>	For fits table columns, the parameter for which fits will be extracted is selected. All parameters or any individual parameter may be selected.
<b>Column 1 Data</b>	
<u>Index</u>	The first column of the table will contain the fit or parameter index.
<u>X value</u>	The first column of the table will contain the fit or parameter value.
<b>Options</b>	Calculates the absolute value of sensitivity (sensitivity is calculated as the derivative of the parameter value with respect to the residual).



## 12.37 Linear Color Map

**What:** Creates a color map with a linear variation between starting and ending RGB or HSV values.

**Why:** Used to support mapping of values to colors.

**Used By:** Any object using color maps such as **Merge Color Maps** or color plot objects.

**Appearance:**

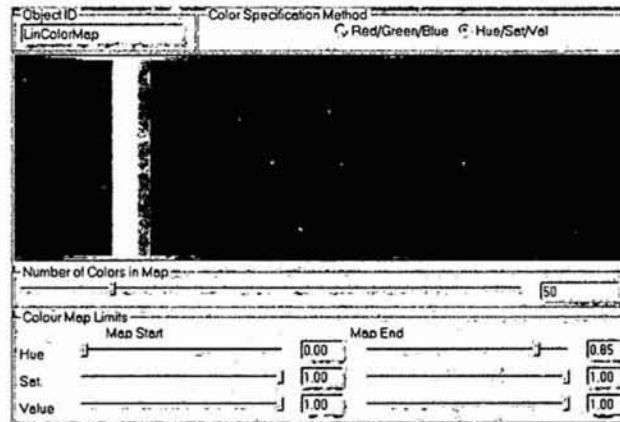


Figure 144. Linear Color Map Method

**Input Data:** no input

**Output Data:** color map

**Properties:**

<b>Color Specification Method</b>	How end-point colors are defined.
<u>Red/Green/Blue</u>	Use RGB method of primary color components.
<u>Hue/Saturation/Value</u>	Use HSV method.
<b>Number Of Colors In Map</b>	Color maps may consist of 5 to 256 separate colors.
<b>Color Map Limits</b>	
<u>Map Start</u>	The RGB or HSV components of the color at the start of the map.
<u>Map End</u>	The RGB or HSV components of the color at the end of the map.

## 12.38 Matrix Math

- What:** Basic array mathematics (+, -, \*, /) can be applied to two sets of cube data or grid data. Note there are separate objects for each data type.
- Why:** Data manipulations.
- Used By:** Any object using cube or grid data.
- Appearance:** The appearance is identical for each data type. The appearance is shown for grid data:

The screenshot shows a software interface for Matrix Math. It contains the following fields and controls:

- Object ID:** A text box containing the value "GridMath".
- Data Source A:** A dropdown menu with "none available" selected.
- Data Source B:** A dropdown menu with "none available" selected.
- Operation:** A set of radio buttons for selecting a mathematical operation:  $A+B$ ,  $A-B$ ,  $A*B$ , and  $A/B$ .
- Output Description:** A text box for entering a description of the output.

Figure 145. Matrix Math Screen

- Input Data:** cube or grid data
- Output Data:** cube or grid data
- Properties:**

<b>Data Source A</b>	The first cube/grid data set is selected.
<b>Data Source B</b>	The second cube/grid data set is selected. Data source A and B must be of the same size (i.e. same number of nodes in the grid or cube data).
<b>Operation</b>	The math operation between data source A and B is selected. The two data sources can be added, subtracted, multiplied, or divided.
<b>Output Description</b>	Provides a description of the object, which will be used as the object type in drop-down lists, and the label of the object in a <b>Series Legend</b> .

## 12.39 Merge Color Maps

**What:** Combines two color maps. The two color maps are joined together, such that the beginning of map B is placed after the end of map A.

**Why:** Provides flexibility in color map specification.

**Used By:** Any object using color maps, including itself (a **Merge Color Map** may be input for another **Merge Color Map** object).

**Appearance:**

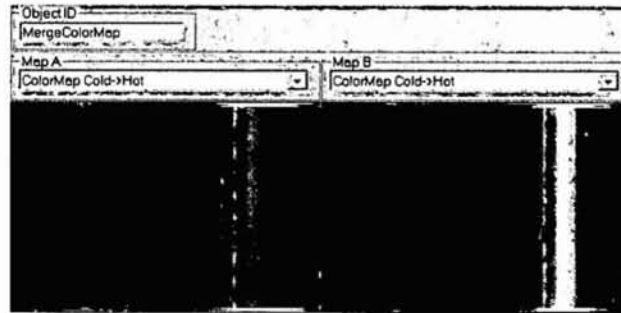


Figure 146. Merge Color Maps Screen

**Input Data:** two color maps

**Output Data:** color map

**Properties:**

The color maps are selected in the **Map A** and **Map B** drop-down lists. The total number of colors in the input maps must be less than 256.

## 12.40 Normalize

- What:** Normalizes cube and grid data within specified data limits, based on a power value or both. Note there are separate objects for each data type.
- Why:** For manipulating data, in particular for normalized plots.
- Used By:** Any object using cube or grid data.
- Appearance:** The appearance is identical for each data type, except for the name of the input data frame. The appearance is shown for cube data:

Figure 147. Normalize Cube & Grid Data Screen

**Input Data:** cube or grid data

**Output Data:** cube or grid data

### Properties:

<b>Cube/Grid Input Data</b>	The input data set to be normalized is selected.
<b>Normalize Specification</b>	Master/Slave controls for the normalize specifications. For more information on Master/Slave controls, refer to Section 6.3.1.
<b>Normalize Operation</b>	
<u>Limits</u>	Data are normalized within specified data limits.
<u>Power</u>	Data are normalized based on a power value.
<u>Both</u>	Data are normalized based on a power value within specified data limits.
<b>Limit Specification</b>	For limit specified normalization, the input minimum and maximum limits are automatically determined or specified, and the output minimum and maximum limits are specified.
<b>Power Value Source</b>	Master/Slave and expose controls for the power value. For more information on these controls, refer to Section 6.3.

**Power Value**

For power value normalization, the power value is entered in the text box.

**Information Only**

## 12.41 P(t) Derivative Calculation

- What:** Calculates the derivative of a pressure function (P(t)).
- Why:** In particular, used to create constraints based on the derivative of pressure.
- Used By:** Any object using XY data.
- Appearance:**

Figure 148. P(t) Derivative Calculation Screen

**Input Data:** XY data, and if superposition of time is used, the output of a **P(t) Time Processing** object

**Output Data:** XY data

### Properties:

- |                          |   |
|--------------------------|---|
| Input P(t) Data          | The derivative is calculated for the selected input pressure time series data.  |
| Derivative Specification | Master/Slave controls for the derivative specifications. For more information on Master/Slave controls, refer to Section 6.3.1.   |
| Derivative Type          | One of four derivative types is selected: $dY/dX$ , $dY/d\log_{10}(X)$ , $d\log_{10}(Y)/d\log_{10}(X)$ , or $dY/d\ln(X)$ .  |
| Derivative Calculation   | All derivative calculation procedures calculate the derivative at each data point based on a subset of data points on either side of the data point. The derivative calculation will smooth noisy input data before the derivative calculation in order to produce a useful derivative. |
| <i>Between</i>           | The derivative is calculated based on the slope between two adjacent data points. The X value for the derivative is the linear average of the X value of  |

	the two data points. Only useful for very smooth data.
<i>2 Point</i>	The derivative is calculated based on the average slope between the data point and two data points on either side of the data point. The # points in Window parameter determines which point on either side of the data point to use. For example, if the # of point in Window is 1, the points adjacent to the data point are used. If the # of point in Window is 2, the second point from the data point will be used. Only useful for very smooth data.
<i>Window</i>	The data points within a window surrounding the data point are used in the derivative calculation.
<i>Log % Span</i>	All points within a specified log X distance of the data point are used in the derivative calculation. The distance is specified by a percentage of the log range of the entire data set ( $\log(X_{\max}) - \log(X_{\min})$ ).
<i>Lin % Span</i>	All points within a specified X distance of the data point are used in the derivative calculation. The distance is specified by a percentage of the linear range of the entire data set ( $X_{\max} - X_{\min}$ ).
<i>Log Value Span</i>	All points within a specified X distance of the data point are used in the derivative calculation. The distance is specified as an absolute log range of the entire data set ( $\log(X_{\max}) - \log(X_{\min})$ ).
<i>Lin Value Span</i>	All points within a specified X distance of the data point are used in the derivative calculation. The distance is specified as an absolute linear range of the entire data set ( $X_{\max} - X_{\min}$ ).
<b>Windowed Calculation</b>	For Window, Lin/Log % Span and Lin/Log Value Span methods, determines the derivative calculation algorithm used. Linear, Clark and Simmons algorithms are available.
<b># points in Window</b>	For 2 Point and Window calculations only, determines which points to use for a 2 Point calculation or the number of data points in the window for a Window calculation.
<b>Log Epsilon</b>	Minimum Y value allowed for a log transform. If a Y value is less than log epsilon, the derivative is not calculated for that point.



<b>Y Offset</b>	Adjusts Y values above the log epsilon (e.g. increases values above zero to allow log calculations).
<b>Lin/Log % Span Value Source</b>	Master/Slave and expose controls for the lin/log % span value. For more information on these controls, refer to Section 6.3.
<b>Lin/Log % Span Value</b>	For Lin/Log % Span methods, the percentage of the linear/log range of the entire data set is entered.
<b>Lin/Log Span Value Source</b>	Master/Slave and expose controls for lin/log span value. For more information on these controls, refer to Section 6.3.
<b>Lin/Log Span Value</b>	For Lin/Log Value Span methods, the absolute linear/log range of the entire data set is entered.
<b>Time Multiplier</b>	
<u>None</u>	The resulting Y value of the object is the calculated derivative.
<u>T</u>	After the derivative has been calculated, the derivative is multiplied by time for the Y output.
<u>delta T</u>	After the derivative has been calculated, the derivative is multiplied by delta time for the Y output.
<b>Time Processing</b>	
<u>Use Superposition</u>	Superposition may be conducted on time. The output of a <b>P(t) Time Processing</b> object is selected in the adjacent drop-down-box.
<b>Options</b>	
<u>ABS(derivative Y)</u>	If selected, the absolute value of the calculated derivative Y value is output.

## 12.42 P(t) Time Processing

**What:** Applies one of four time functions to X data (Horner, Agarwal, Horner Super or Bourdet Super).

**Why:** Used to create plots that require a time function for the X axis such as a Horner plot.

**Used By:** Any object using XY data.

**Appearance:**

The screenshot shows a software interface for 'P(t) Time Processing'. It includes several sections: 'Object ID' with a dropdown menu; 'Time Processing Specification' with 'Master' and 'Slave to' options; 'Time Processing' with radio buttons for 'Horner', 'Agarwal', 'Horner Super', and 'Bourdet Super'; 'Horner/Agarwal T Value Source' with 'Met' and 'Exp' options; 'Horner/Agarwal T Value' with a text input field containing '1.0'; 'Superposition Input Q(t) Data' with a dropdown menu; and 'Options' with a checkbox for 'replace Final Q' and a 'Final Q value' text input field containing '0.0'.

Figure 149. P(t) Time Processing Screen

**Input Data:** XY data

**Output Data:** XY data

**Properties:**

<b>Input P(t) Data</b>	Time processing is calculated for the X value of the selected input pressure time series data.
<b>Time Processing Specification</b>	Master/Slave controls for the time processing specifications. For more information on Master/Slave controls, refer to Section 6.3.1.
<b>Time Processing</b>	One of four time processing functions is selected: <u>Horner</u> , <u>Agarwal</u> , <u>Horner Super</u> and <u>Bourdet Super</u> .
<b>Horner/Agarwal T Value Source</b>	Master/Slave and expose controls for the Horner/Agarwal T Value. For more information on these controls, refer to Section 6.3.
<b>Horner/Agarwal T Value</b>	For Horner or Agarwal time processing, the Horner time or Agarwal time is entered in the text box.
<b>Superposition Input Q(t) Data</b>	For Horner Super or Bourdet Super time processing, the flow data to use in the time calculation is specified in the drop-down list.
<b>Options</b>	For Horner Super or Bourdet Super time processing,

the final value can be replaced.

## 12.43 Pen Set

**What:** Defines a set of pens to be used in plotting. Each pen set consists of 24 pens, each of which may be defined to be different colors. Normally, the default Standard Pen Set is all that is required.

**Why:** Establishes the color of plot objects.

**Used By:** All plot definitions.

**Appearance:**



Figure 150. Pen Set Screen

**Input Data:** no input

**Output Data:** pen set

### Properties:

Each pen is defined by an ID and a color. Selecting a color causes the color's current settings to be shown on the sliders in the Pen Color Settings frame. Subsequent slider adjustments update the selected color.

Pen Color Method

RGB or HSV

Pen Color Settings

The RGB or HSV values for the currently selected pen.

## 12.44 Pulse Normalization

**What:** Normalizes pressure XY data based on one of two equations:  $\frac{(P_i - P(t))}{(P_i - P_0)}$  and  $\frac{1 - (P_i - P(t))}{(P_i - P_0)}$ , where  $P_i$  is the static pressure and  $P_0$  is the initial pulse pressure. Both  $P_i$  and  $P_0$  are to be specified in the object property window.

**Why:** Standard well test analysis normalization.

**Used By:** Any object using XY data.

**Appearance:**

Figure 151. Pulse Normalization Screen

**Input Data:** XY data

**Output Data:** XY data

**Properties:**

Input P(t) Data	The pressure Y values are normalized for the selected input pressure time series data.
Pulse Normalization Type	Pressure is normalized based on one of two equations: $\frac{(P_i - P(t))}{(P_i - P_0)}$ or $\frac{1 - (P_i - P(t))}{(P_i - P_0)}$ .
P0(initial pulse pressure) Value Source	Master/Slave and expose controls for the initial pulse pressure. For more information on these controls, refer to Section 6.3.
P0(initial pulse pressure) Value	The initial pulse pressure is entered in the text box.
Pi(static pressure) Value Source	Master/Slave and expose controls for the static pressure. For more information on these controls, refer to Section 6.3.
Pi(static pressure) Value	The static pressure is entered in the text box.
Options	Y can be multiplied by X.

## 12.45 Read Color Map

**What:** Reads a color map from a specially formatted text file (default file extension: \*.cmap).

**Why:** Allows creation of color maps outside nSIGHTS (for example, in an Excel spreadsheet) to meet special requirements.

**Used By:** Any object using a color map.

**Appearance:**

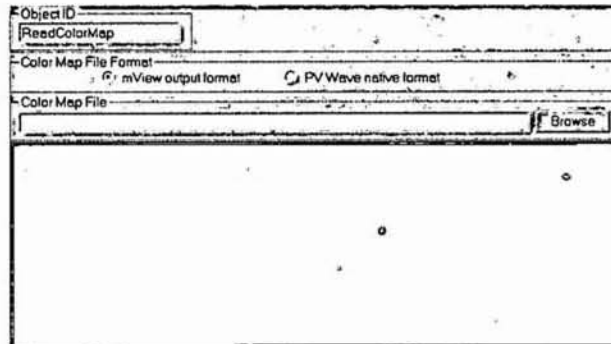


Figure 152. Read Color Map Screen

**Input Data:** external file containing a color map definition

**Output Data:** color map

**Properties:**

<b>Color Map File Format</b>	The format of the data in the input file (see <b>File Formats</b> below).
<u>mView output format</u>	The format produced by the object <b>Write Color Map</b> .
<u>PV Wave native format</u>	PV Wave format.
<b>Color Map File</b>	The name of the file (including the file path) containing the color map data is entered in the text box or the <b>Browse</b> button is used to find the file using the standard Windows open file dialog.

Once the color map is read, the color map defined in the file will display in the color window.

## **File Formats:**

### **mView Output**

The mView color map file format is as follows:

Line 1:   ncolor                   # of RGB data in file (max 256)

Line 2:   Red 1 Green 1 Blue 1    RGB values (reals 0.0 to 1.0)

.

.

.

Line n+1:   Red n Green n Blue n.

### **PV Wave**

The PV Wave color map file format is as follows:

Line 1:   Red 1 Green 1 Blue 1    RGB values (integers 0 to 255)

.

.

.

Line n:    Red n Green n Blue n n maximum 256.



## 12.46 Read Cube Data

- What:** Reads cube data from an input file (default file extension: \*.cube).
- Why:** Allows use of cube data created or manipulated outside the current nSIGHTS application (for example, in another nSIGHTS application).
- Used By:** Any object using cube data.
- Appearance:**

Figure 153. Read Cube Data Screen

- Application:** nPost
- Input Data:** external file containing cube data
- Output Data:** cube data
- Properties:**

**Cube Data File**

The name of the file (including the file path) containing the cube data is entered in the text box or the **Browse** button is used to find the file using the standard Windows open file dialog.

**File Format**

The format of the data in the input file.

Standard

Standard format output from nSIGHTS.

Other

For future use, not currently supported.

Options

If X, Y or Z is a log value in the cube data file, it should be specified in the appropriate checkbox. X ID, Y ID and Z ID are used as the respective object types in drop-down lists, and labels in a **Series Legend**.

**Data Status**

Once the cube data file is loaded, the number of X, Y and Z values are displayed.

## 12.47 Read Curve File

**What:** Reads a curve data file (default file extension: \*.nCRV). A curve file may contain several curve data sets.

**Why:** Allows use of curve data created or manipulated outside the current nSIGHTS application (for example, in another nSIGHTS application).

**Used By:** Select Curve File

**Appearance:**

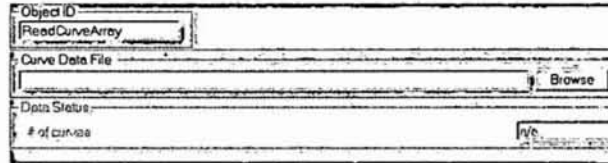


Figure 154. Read Curve File Screen

**Application:** nPost

**Input Data:** external file containing curve data

**Output Data:** curve data file for **Select Curve File**

**Properties:**

**Curve Data File**

The name of the file (including the file path) containing the curve data is entered in the text box or the **Browse** button is used to find the file using the standard Windows open file dialog. The curve file format is based on the file format written by the **Write Curve File** object.

**Data Status**

Once the curve data file is loaded, the number of curves in the curve file is displayed.

## 12.48 Read Grid Data

- What:** Reads grid data from an input file (default file extension: \*.grd).
- Why:** Allows use of grid data created or manipulated outside the current nSIGHTS application (for example, in another nSIGHTS application).
- Used By:** Any object using grid data.
- Appearance:**

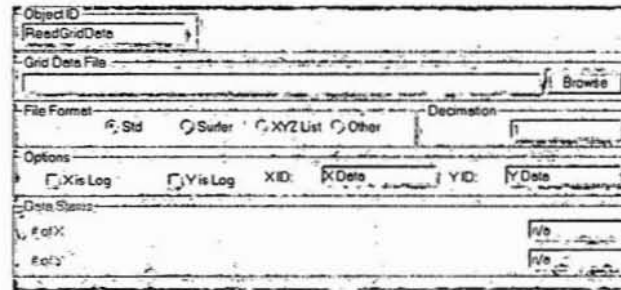


Figure 155. Read Grid Data Screen

- Application:** nPost
- Input Data:** external file containing grid data
- Output Data:** grid data
- Properties:**

**Grid Data File**

The name of the file (including the file path) containing the grid data is entered in the text box or the **Browse** button is used to find the file using the standard Windows open file dialog.

**File Format**

One of four file formats can be selected. See the **File Formats** section below for standard and XYZ list file formats.

Std

The standard format produced by the object **Write Grid File**.

Surfer

The grid format produced by Surfer Version 7 software. Select *GS ASCII (\*.grd)* as the file format.

XYZ List

List of XYZ points.

Other

For future use, not currently supported.

**Decimation**

The grid file is reduced based on the decimation factor entered in the text box: every n grid points in both X and Y are kept, where n is the decimation factor.

**Options**

If X or Y is a log value in the grid data file, it should be specified in the appropriate checkbox. X ID and Y ID are used as the respective object types in drop-down lists, and labels in a **Series Legend**.

**Data Status**

Once the grid data file is loaded, the number of X and Y points in the grid are displayed.

**File Formats:**

For all grids, X1 and Y1 is at the bottom left hand corner (e.g. X1=0,Y1=0).

**Standard**

The format produced by the object **Write Grid File**. The standard grid file format is as follows:

Line 1: file heading

Line 2: nX nY nX=number of X points, nY=number of Y points

Line 3: Grid Value at X1,Y1 ... Grid Value at X1,Y20

Line a: Grid Value at X1,(nY-19) ... Grid Value at X1,nY

Line a+1: Grid Value at X2,Y1 ... Grid Value at X2,Y20

Last Line: Grid Value at nX,(nY-19) ... Grid Value at nX,nY

**XYZ list**

The XYZ list grid file format is as follows:

Line 1: X1, Y1, Grid Value at X1,Y1

Line 2: X1, Y2, Grid Value at X1,Y2

Line nY: X1, nY, Grid Value at X1,nY

Line nY+1: X2, Y1, Grid Value at X2,Y1 nY= number of Y points

Line nX\*nY: nX, nY, Grid Value at nX,nY nX=number of X points

## 12.49 Read nSIGHTS Optimizer Results

**What:** Reads an nSIGHTS optimizer simulation results file (default file extension: \*.nOpt), specified in the Output File Setup nPre input window.

**Why:** To examine optimization results created in nPre within nPost.

**Used By:** Extract Covariance Matrices, Extract Jacobian, Extract Optimizer Results Table and Extract Residuals.

**Appearance:**

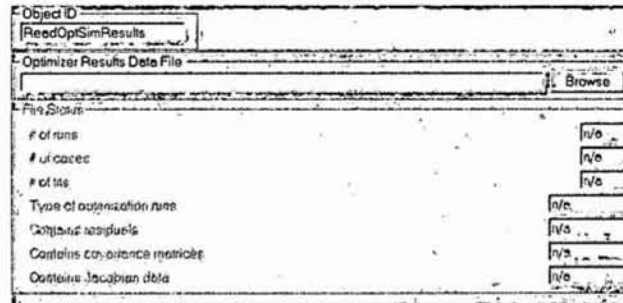


Figure 156. Read nSIGHTS Optimizer Results Screen

**Application:** nPost

**Input Data:** optimizer simulation results file

**Output Data:** optimizer results file

**Properties:**

**Optimizer Results Data File**

The name of the file (including the file path) containing the optimizer results is entered in the text box or the **Browse** button is used to find the file using the standard Windows open file dialog.

**File Status**

Once the optimizer results file is loaded, the number of runs, cases and fits in the file, as well as the type of optimization runs (e.g. Sampled) and the contents of the file (e.g. Contains Residuals yes) are displayed.


## 12.50 Read nSIGHTS Profile Results

**What:** Reads an nSIGHTS profile simulation results file (default file extension: \*.nPro), specified in the Output File Setup nPre input window.

**Why:** To examine simulation results created in nPre within nPost.

**Used By:** Extract Profile Grid

**Appearance:**

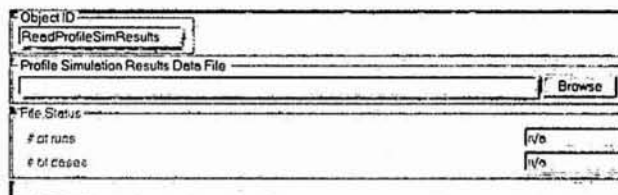

Object ID	
ReadProfileSimResults	
Profile Simulation Results Data File	
	Browse
File Status	
# of runs	n/a
# of cases	n/a

Figure 157. Read nSIGHTS Profile Results Screen

**Application:** nPost

**Input Data:** profile simulation results file

**Output Data:** profile results file

**Properties:**

**Profile Simulation Results Data File**

The name of the file (including the file path) containing the profile results is entered in the text box or the **Browse** button is used to find the file using the standard Windows open file dialog.

**File Status**

Once the profile results file is loaded, the number of runs and cases in the file are displayed.

## 12.51 Read nSIGHTS Range Results

**What:** Reads an nSIGHTS range simulation results file (default file extension: \*.nRng), specified in the Output File Setup nPre input window.

**Why:** To examine range results created in nPre within nPost.

**Used By:** Extract Range Cube and Extract Range Grid

**Appearance:**

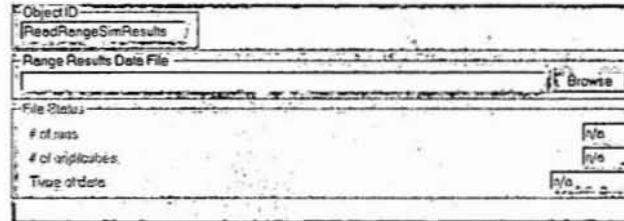


Figure 158. Read nSIGHTS Range Results Screen

**Application:** nPost

**Input Data:** range simulation results file

**Output Data:** range results file

**Properties:**

**Range Results Data File**

The name of the file (including the file path) containing the range results is entered in the text box or the **Browse** button is used to find the file using the standard Windows open file dialog.

**File Status**

Once the range results file is loaded, the number of runs, the number of grids or cubes in the file, and the type of data (i.e. grid or cube data) are displayed.

## 12.52 Read nSIGHTS XY Results

**What:** Reads an nSIGHTS XY simulation results file (default file extension: \*.nXYSim), specified in the Output File Setup nPre input window.

**Why:** To examine XY simulation results created in nPre within nPost.

**Used By:** Extract XY from XY Results

**Appearance:**

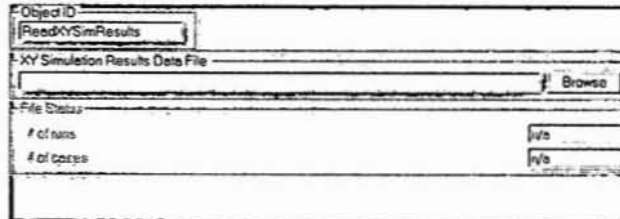


Figure 159. Read nSIGHTS XY Results Screen

**Application:** nPost

**Input Data:** XY simulation results file

**Output Data:** XY results file

**Properties:**

**XY Simulation Results Data File**

The name of the file (including the file path) containing the XY results is entered in the text box or the **Browse** button is used to find the file using the standard Windows open file dialog.

**File Status**

Once the XY results file is loaded, the number of runs and cases in the file are displayed.



## 12.53 Read Sequence Time Interval Data

- What:** Reads a sequence time data file (default file extension: \*.seqt).
- Why:** Contains time information for sequences defined in nPre, which are required for nPost objects.
- Used By:** **Extract Sequence(s) and Time Limits Extraction/Interpolation**
- Appearance:**

Figure 160. Read Sequence Time Interval Data Screen

- Application:** nPost
- Input Data:** external file containing sequence time data
- Output Data:** sequence time data
- Properties:**

Sequence Time Data File	The name of the file (including the file path) containing the sequence time data is entered in the text box or the <b>Browse</b> button is used to find the file using the standard Windows open file dialog.
Data Status	Once the sequence time file is loaded, the number of sequences in the file is displayed.

### File Format:

The sequence time data file format is as follows:

Line 1: SeqID StartingTime

Line 2: SeqID StartingTime

.

.

.

Line n: SeqID StartingTime EndTime n=number of sequences

Note: The sequence ID cannot contain embedded spaces.

## 12.54 Read Table File

**What:** Reads tabular data from a file.

**Why:** Allows use of table data created or manipulated outside the current nSIGHTS application (for example, in another nSIGHTS application or a spreadsheet).

**Used By:** Any object using table data.

**Appearance:**

The screenshot shows a dialog box titled "Read Table File". It has several sections: "Object ID" with a text box containing "Read Table"; "Table File" with a text box and a "Browse" button; "File Format" with four radio buttons: "Basic" (selected), "CSV", "Tecplot", and "Other"; "Options" with two checkboxes: "Read Column IDs" and "Read Row IDs"; and "Table Status" with two text boxes: "# of columns" and "# of rows".

Figure 161. Read Table File Screen

**Input Data:** external file containing tabular data

**Output Data:** table data

**Properties:**

**Table File**

The name of the file (including the file path) containing the table data is entered in the text box or the **Browse** button is used to find the file using the standard Windows open file dialog.

**File Format**

One of four file formats can be selected.

Basic

Table values are separated by spaces, each line representing one row. If Read Column IDs is selected, the first row is assumed to have column IDs separated by spaces or commas, with no embedded spaces. If Read Row IDs is selected, the first value in each row is considered the row ID.

CSV

Same as Basic file format, except that commas separate table values.

Tecplot

Standard Tecplot output table.

Other

For future use, not currently supported.

**Options**

If column and/or row IDs are present in the table data file (Basic or CSV file formats), the appropriate checkbox is selected.

**Data Status**

Once the table file is loaded, the number of columns and rows in the table are displayed.

## 12.55 Read XY Data

- What:** Reads a list of XY points from a file (default file extension: \*.dat).
- Why:** Allows use of XY data created or manipulated outside the current nSIGHTS application (for example, in another nSIGHTS application or a spreadsheet).
- Used By:** Any object using XY data.
- Appearance:**

Figure 162. Read XY Data Screen

**Input Data:** external file containing XY data

**Output Data:** XY data

### Properties:

#### XY Data File

The name of the file (including the file path) containing the XY data is entered in the text box or the **Browse** button is used to find the file using the standard Windows open file dialog.

#### File Format

One of three file formats can be selected.

##### Basic

XY values are separated by commas or spaces, one row per line. All data after the first two values of each line are ignored. If ID from Column Header is selected, the first line of file contains column header names, without embedded spaces.

##### Table

XY values are separated by commas or spaces, one row per line. Columns selected as the X data and the Y data are specified in the X column index and Y column index fields. If ID from Column Header is selected, the first line of file contains column header names, without embedded spaces.

##### Other

For future use, not currently supported.

#### Options

<u>ID from Column Header</u>	If selected, the ID is obtained from the Y column header.
<u>ID</u>	If not obtained from the column header, the ID is specified in the text box. The ID is used as the object type in drop-down lists, and the label in a <b>Series Legend</b> .
<u>X column index</u>	For table file formats, the table column to use for X data is specified.
<u>Y column index</u>	For table file formats, the table column to use for Y data is specified.
<b>Data Status</b>	Once the XY data file is loaded, the number of XY points is displayed.

## 12.56 Read XYZ Label Data

**What:** Reads a list of XYZ co-ordinates and associated text labels from a file.

**Why:** Used to specify 3D labels for plotting.

**Used By:** 3D plot object **XYZ Labels**.

**Appearance:**

The screenshot shows a dialog box titled "Read XYZ Label Data". It has several fields and controls: "Object ID" with a text box containing "ReadLabelArray"; "XYZ Label Input File" with a text box and a "Browse" button; "File Format" with two radio buttons, "Points" (selected) and "Other"; "Data Status" with a text box; and "# of labels read" with a text box containing "1/6".

Figure 163. Read XYZ Label Data Screen

**Input Data:** external file containing XYZ co-ordinates and associated text labels

**Output Data:** XYZ label

**Properties:**

**XYZ Label Input File**

The name of the file (including the file path) containing the XYZ label data is entered in the text box or the **Browse** button is used to find the file using the standard Windows open file dialog.

**File Format**

One of two file formats can be selected.

Points

List of XYZ points and text separated by spaces. See the **File Formats** section below for details on the file format.

Other

For future use, not currently supported.

**Data Status**

Once the XYZ label file is loaded, the number of labels in the file is displayed.

**File Formats:**

**Points**

The Points file format is as follows:

Line 1        X1\_1 Y1\_1 Z1\_1    FirstLabelText

Line 2        X1\_2 Y1\_2 Z1\_2    SecondLabelText

.  
Line n      X1\_n Y1\_n   Z1\_n   nthLabelText  
Line n+1    [blank]  
Line n+2    X2\_1 Y2\_1 Z2\_1   Group2Label1Text  
. . .

## 12.57 Real Value(s) To Table

**What:** Converts real values into table data.

**Why:** Collects real values from an object with changing input (e.g. uses exposed controls) and configures the real values in table format. For example, the statistics of an XY slice of a grid can be stored in a table for several different grid slices.

**Used By:** Any object using table data. In particular, the table may be viewed using the **View Table Data** object.

**Appearance:**

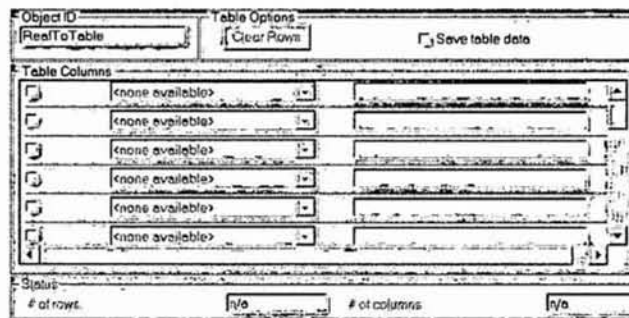


Figure 164. Real Value(s) Converted to Table Screen

**Input Data:** real value

**Output Data:** table data

**Properties:**

### Table Options

Clear Rows

Clears the table. A subsequent change in the real values defined in the Table Columns frame will add a new row to the table.

Save table data

Saves the current table values in the nSIGHTS configuration file.

### Table Columns

In each line, a real value object can be selected from the drop-down list. The column header is input into the adjacent text box. The line is activated/deactivated with the checkbox at the beginning of the line.

### Status

# of rows

The number of rows represents the number of table rows created.

# of columns

The number of columns will reflect the number of



**Apply**

table columns defined in the **Table Columns** frame.

Will add one row to the table, containing the current values of the real values in each table column.

## 12.58 Reduction

**What:** Reduces the number of XY points by skipping points or by keeping points such that the change in value between consecutive points is maximized below a specified maximum.

**Why:** Reduces very large XY data sets into a data set of a more manageable size.

**Used By:** Any object using XY data.

**Appearance:**

Figure 166. Reduction Screen

**Input Data:** XY data

**Output Data:** XY data

**Properties:**

**XY Data Reduction**

The XY data set to be reduced is selected in the drop-down list.

**Operation**

Data Reduction Operation

The method of reducing the XY data is selected.

*Skip*

Values in the XY data set are skipped, according to the specified interval.

*Maximum Change*

Points are removed such that the difference between consecutive point values is maximized below a specified maximum, for both X and Y data.

*Both*

Values are skipped, unless the difference between consecutive point values is greater than the specified maximum.

Point Skip Interval

For skip data reduction, the interval at which points are skipped are entered. For example, with a point skip interval of 2, every other point remains within the data set.

<u>log X change</u>	For maximum change data reduction, the maximum change in X values is based on log X if this checkbox is selected.
<u>Maximum X Change</u>	For maximum change data reduction, the maximum difference in values between two consecutive X points is entered.
<u>log Y change</u>	For maximum change data reduction, the maximum change in Y values is based on log Y if this checkbox is selected.
<u>Maximum Y Change</u>	For maximum change data reduction, the maximum difference in values between two consecutive Y points is entered.
<b>Output Description</b>	Provides a description of the object, which will be used as the object type in drop-down lists, and the label of the object in a <b>Series Legend</b> .
<b>Reduction Status</b>	The number of input points and output points are displayed, indicating the extent of the data reduction.

## 12.59 Remove Duplicates

**What:** Removes duplicate values from X data, Y data or both. Duplicates are considered values that have differences less than a specified value.

**Why:** Reduces the size of the data set, or improves its appearance in plotting.

**Used By:** Any object using XY data.

**Appearance:**

Figure 167. Remove Duplicates Screen

**Input Data:** XY data

**Output Data:** XY data

**Properties:**

**XY Remove Duplicate**

Duplicates will be removed from the XY data selected in the drop-down list.

**X Values**

Remove Duplicate X Values

X duplicates are only removed if Yes is selected.

Data Reduction Operation

Determines which duplicate X value to keep: the *Minimum, Maximum, Average, First* or *Last* Y value.

Duplicate X Limit

Duplicates are considered values that have differences less than this specified value.

Remove Out of Sequence X Points

X points are assumed to be ordered in ascending order. Points that do not fit within this ascending order will be removed if Yes is selected.

**Y Values**

Remove Duplicate Y Values

Y duplicates are only removed if Yes is selected.

Duplicate Y Limit

Duplicates are considered values that have differences less than this specified value.

**Output Description**

Provides a description of the object, which will be

used as the object type in drop-down lists, and the label of the object in a **Series Legend**.

**Reduction Status**

The number of input points and output points are displayed, indicating the number of duplicates removed.

## 12.60 Scale/Transform

- What:** Performs mathematical operations on a single real input value, cube data or grid data. Note there are separate objects for each data type.
- Why:** Unit conversions, other data manipulations.
- Used By:** Any object using real values, cube data or grid data.
- Appearance:** The appearance is identical for each data type, except for the name of the input data frame. The appearance is shown for cube data:

The screenshot shows a software interface for configuring a 'Cube Scale/Transform' object. The window title is 'Cube Input Data'. The 'Object ID' is 'Cube S/T' and the 'Cube Input Data' is '(none available)'. The 'Operation Order' is 'Scale -> Transform', the 'Scale Operation' is 'D \* Sc - Off', and the 'Transform' is 'None'. The 'Scale Value Source' is '(none available)' with 'Mst' checked and 'Exp' unchecked, and the 'Scale Value' is '1.0'. The 'Offset Value Source' is '(none available)' with 'Mst' checked and 'Exp' unchecked, and the 'Offset Value' is '0.0'. The 'Null Processing' is 'set to constant' with a 'Constant' value of '0.0'. The 'Minimum Thresholding' is 'None' with a value of '0.0', and the 'Maximum Thresholding' is 'None' with a value of '1.0'. There is an 'Output Description' field at the bottom.

Figure 168. Cube Scale/Transform Screen

**Input Data:** real value, cube data or grid data

**Output Data:** real value, cube data or grid data

**Properties:**

**Real To Scale/Transform or Cube/Grid Input Data** The input data set to be scaled and/or transformed is selected.

The remaining scale/transform options are described in Section 7.1.3.

## 12.61 Select Curve from File

**What:** Selects a curve from a curve file. A curve file may contain several sets of curve data.

**Why:** Allows manipulation or plotting of one curve stored within a curve file.

**Used By:** Any object using curve data.

**Appearance:**

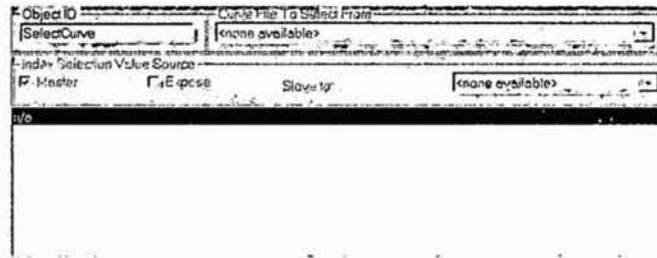


Figure 169. Select Curve from File Screen

**Application:** nPre

**Input Data:** Read Curve File

**Output Data:** curve data

**Properties:**

<b>Curve File To Select From</b>	The curve file from which the curve data are extracted is selected.
<b>Index Selection Value Source</b>	A selection box containing a list of the available curve data sets allows the user to select the curve data to extract.
<u>Master</u>	Selection of the curve data may be slaved to another object. See Section 6.3.1 for more information on Master/Slave controls.
<u>Expose</u>	Selection of the curve data may be exposed. See Section 6.3.2 for more information on exposed controls.

## 12.62 Select Range Cube

**What:** Used in real-time processing, allows the selection of a range cube data set available during a run. Only for range mode simulations with three variables specified as range variables.

**Why:** Used to plot simulation range cube data during the simulation.

**Used By:** Any object using cube data.

**Appearance:**

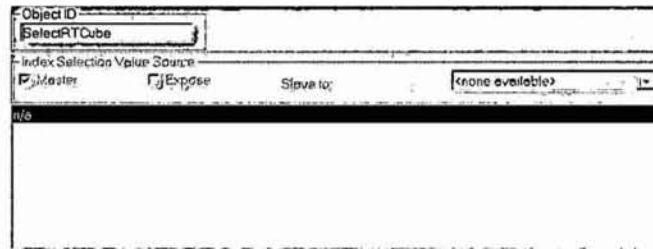


Figure 170. Select Range Cube Screen

**Application:** nPre

**Input Data:** cube data

**Output Data:** cube data

**Properties:**

**Index Selection Value Source**

Master

A selection box containing a list of the available range cube data sets allows the user to select the range cube data to extract.

Selection of the range cube data may be slaved to another object. See Section 6.3.1 for more information on Master/Slave controls.

Expose

Selection of the range cube data may be exposed. See Section 6.3.2 for more information on exposed controls.



## 12.63 Select Range Grid

**What:** Used in real-time processing, allows the selection of a range grid data set available during a run. Only for range mode simulations with two variables specified as range variables.

**Why:** Used to plot simulation range grid data during the simulation.

**Used By:** Any object using grid data.

**Appearance:**

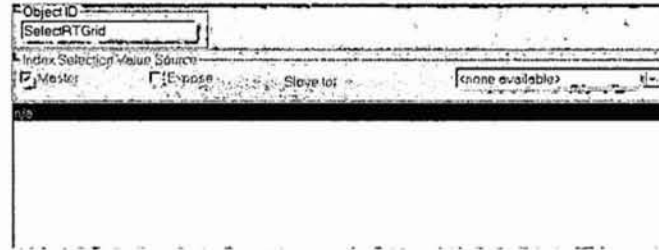


Figure 171. Select Range Grid Screen

**Application:** nPre

**Input Data:** grid data

**Output Data:** grid data

**Properties:**

**Index Selection Value Source**

A selection box containing a list of the available range grid data sets allows the user to select the range grid data to extract.

Master

Selection of the range grid data may be slaved to another object. See Section 6.3.1 for more information on Master/Slave controls.

Expose

Selection of the range grid data may be exposed. See Section 6.3.2 for more information on exposed controls.

## 12.64 Select XY from XY Array

**What:** Select an XY data set from an XY array. An XY array is a collection of XY data sets.

**Why:** To examine, manipulate or plot one XY data set within an XY array.

**Used By:** Any object using XY data.

**Appearance:**



Figure 172. Select XY for XY Array Screen

**Input Data:** XY array

**Output Data:** XY data

**Properties:**

**XY Data Array To Select From**

The XY array from which the XY data are extracted is selected.

**Index Selection Value Source**

A selection box containing a list of the available XY data sets in the array allows the user to select the XY data to extract.

Master

Selection of the XY data may be slaved to another object. See Section 6.3.1 for more information on Master/Slave controls.

Expose

Selection of the XY data may be exposed. See Section 6.3.2 for more information on exposed controls.

## 12.65 Sequence Fit

**What:** Similar to (Basic) Single Fit, except the fit can be limited to a range of time or sequences. The Y data of both field and simulated data may also be interpolated based on synthetic X data (See Section 7.1.4 for details). No interpolation occurs if *Input X* is selected as the Interpolation Method. Typically used in the Fit Specification/Graphics tab of the Fit Specification nPre input window.

**Why:** Used to determine the field data that simulated data should be compared to during an optimization or range simulation, limited within defined sequences.

**Used By:** Fit Selection tab of the Fit Specification nPre input window.

**Appearance:**

The screenshot shows the 'Sequence Fit' dialog box with the following fields and options:

- Object ID:** SequenceFit
- XY Field Data:** sPDAT sPDAT Global
- Simulation Results:** sPDAT sPDAT Global
- Time Data To Use:**  All Input,  Sequence Range,  Specified Range
- Sequence Range:** SeqTimes SequenceTimes Gl. (dropdown)
- Start:** n/a
- End:** n/a
- Time Range:** Minimum: 0.0, Maximum: 1000000
- Interpolation Method:** Linear
- Limit Settings:**  Specified,  From Input
- Minimum:** 0.0
- Maximum:** 1.0
- Number of points:** 250
- Log (relative start):** 0.01
- Std dev. of measurement error:** 1.0
- Fit Status:** Calculated fit value: n/a

Figure 173. Sequence Fit Screen

**Application:** nPre

**Input Data:** XY data

**Output Data:** fit specification

**Properties:**

XY Field Data	Select XY data representing field data.
Simulation Results	Select XY or table data representing simulation data.
Time Data To Use	
<u>All Input</u>	Field and simulation data are not limited by time or sequences, i.e. all data are used for interpolation.
<u>Sequence Range</u>	Field and simulation data are limited by one or more sequences, as defined in the Sequence Range frame.

<u>Time Range</u>	Field and simulation data are limited by a time range defined by a minimum and maximum time in the <b>Time Range</b> frame.
<b>Sequence Range</b>	
<u>Seq times</u>	The sequence time data set to be used is selected. By default, the sequence time data are a global object defined in the <b>Sequence</b> input window.
<u>Start</u>	The sequences available in the specified <b>Sequence Time Data</b> will be listed in the drop-down-box, and the starting sequence is selected. Field and simulation data starting at this sequence are included in the fit.
<u>End</u>	The sequences available in the specified <b>Sequence Time Data</b> will be listed in the drop-down-box, and the ending sequence is selected. Field and simulation data up to the end of this sequence are included in the fit.
<b>Time Range</b>	
<u>Minimum</u>	Minimum time of the time range included in the fit.
<u>Maximum</u>	Maximum time of the time range included in the fit.
<b>Interpolation Method</b>	Interpolation method is selected, described in detail in Section 7.1.4. If no interpolation is desired, select the <i>Input X</i> method. Interpolation and related options apply to both field and simulated data.
<b>Number of points</b>	For all interpolation methods except <i>Input X</i> , determines the number of equally spaced X values and corresponding interpolated Y values.
<b>Log relative start</b>	For <i>Log (Relative)</i> interpolation method only, determines the value of the first log X value.
<b>Limit Settings</b>	
<u>Specified</u>	The minimum and maximum X values are specified in the <u>Minimum</u> and <u>Maximum</u> text boxes.
<u>From Input</u>	Determines the minimum and maximum X values automatically from the input data.
<b>Std dev of measurement error</b>	The standard deviation is used in the calculation of the Chi-squared minimization function.
<b>Fit Status</b>	

Calculated Fit Value

Once simulation results are generated, the calculated fit value for the specified field and simulated data will be displayed.

## **12.66 Single Fit**

See (Basic) Single Fit

## 12.67 Single Scale/Transform

**What:** Performs mathematical operations on either the X or the Y of XY data.

**Why:** Unit conversions or other data manipulations.

**Used By:** Any object using XY data.

**Appearance:**

The screenshot shows a dialog box for 'Single Scale/Transform'. It includes fields for 'Object ID' (set to 'XY S/T'), 'XY Input Data' (set to 'none available'), and radio buttons to select 'X Data' or 'Y Data'. The 'Operation Order' is set to 'Scale -> Transform', and the 'Scale Operation' is 'D \* Sc + Off'. The 'Transform' is set to 'None'. The 'Scale Value Source' is 'Mst' (checked) with a value of '1.0'. The 'Offset Value Source' is 'Mst' (checked) with a value of '0.0'. There are also sections for 'Null Processing' (set to constant, value 0.0) and 'Minimum/Maximum Thresholding' (both set to None with values 3.0 and 1.0 respectively). An 'Output Description' field is at the bottom.

Figure 174. Single Scale/Transform Screen

**Input Data:** XY data

**Output Data:** XY data

**Properties:**

**XY Input Data**

The input XY data set that is scaled and/or transformed is selected.

**Data Components to Operate On**

X Data

If selected, the X data are scaled and/or transformed.

Y Data

If selected, the Y data are scaled and/or transformed.

The remaining scale/transform options are described in Section 7.1.3.

## 12.68 Smooth/Filter

**What:** Filters and smoothes XY data using one of the following methods: *FFT smooth*, *Median smooth*, *low pass* and *high pass*.

**Why:** Smoothes and filters anomalies within data for improved data approximations or plotting.

**Used By:** Any object using XY data.

**Appearance:**



Figure 175. Smooth/Filter Screen

**Input Data:** XY data

**Output Data:** XY data

**Properties:**

**XY Smooth/Filter**

The input data set that is smoothed and filtered is selected in the drop-down-box.

**Smooth/Filter**

Smooth/Filter Operation

The method of smoothing and filtering is selected in the drop-down-box.

*FFT Smooth*

A fast Fourier transform is applied to the data, removing high frequency values.

*Median Smooth*

Takes the average value within a window. The larger the window, the greater the smoothing.

*Low Pass*

Removes high frequency components.

*High Pass*

Removes low frequency components.

FFT Smooth Parameter

For FFT Smooth, indicates the strength of the smoothing: the greater the magnitude of the parameter, the greater the smoothing.

# of points in half window

For Median Smooth, determines the number of points in half a window.



# of FFT points to keep

For Low or High Pass, determines the number of points to keep: the greater the number of points kept, the less smoothing of the data.

**Output Description**

Provides a description of the object, which will be used as the object type in drop-down lists, and the label of the object in a **Series Legend**.

## 12.69 Statistics

- What:** Calculates basic statistics (e.g. sum, mean, minimum, maximum, etc.) for XY, cube or grid data. Four basic statistics are selected for output as real values, typically used as data labels on a plot.
- Why:** For examination of data. Can also be included as labels for plots.
- Used By:** Any object using real values.
- Appearance:** The appearance is identical for each data type, except for the name of the input data frame, and an extra frame for XY data. The appearance is shown for XY data:

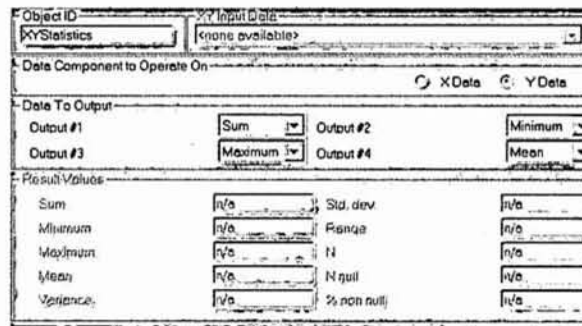


Figure 176. Statistics Screen

**Input Data:** XY, cube or grid data

**Output Data:** 4 real values

**Properties:**

<b>Cube/Grid/XY Input Data</b>	Statistics are computed for the input data selected.
<b>Data Components to Operate On</b>	XY data only. Statistics are calculated for X data or Y data.
<b>Data to Output</b>	The statistics to output as real values are selected from four drop-down-boxes (four real values are output).
<b>Result Values</b>	
<u>Sum</u>	The total of all non-null values.
<u>Minimum</u>	Minimum non-null value.
<u>Maximum</u>	Maximum non-null value.
<u>Mean</u>	Sum / N
<u>Variance</u>	$\text{Sum}((y_i - \text{Mean})^2) / N$ , where $y_i$ = ith non-null value.
<u>Std. dev.</u>	$\text{Sqrt}(\text{Sum}((y_i - \text{Mean})^2) / (N - 1))$

<u>Range</u>	Maximum - Minimum
<u>N</u>	Number of non-null data.
<u>N null</u>	Number of null data.
<u>% non-null</u>	$N/(N + N\_null) * 100.$

Note that only N, N Null and % non-null will be calculated if N = 0. Variance and Std. dev. are only calculated if N > 1.

## 12.70 Sum Tables

- What:** Sums the values between multiple tables. For example, the value in column 2, row 1 of Table A will be added to column 2, row 1 of Table B. A specified X column will not be summed. A maximum of 24 tables may be summed, including the base table.
- Why:** To combine data within a table.
- Used By:** Any object using table data.
- Appearance:**



Figure 177. Sum Tables Screen

**Input Data:** table data

**Output Data:** table data

### Properties:

**Base Table**

Selects the table to which the tables specified in the **Tables to Add** frame are added. The X column and table size are obtained from this base table.

**X Column Processing**

skip X column

If selected, the specified column in the drop-down-box will be excluded from table addition. The column will appear in the output table as it appears in the base table.

**Tables to Add**

A checkbox and associated drop-down-box indicates the tables to sum with the base table. Each table selected must be the same size as the base table (i.e. equal number of rows and columns).

## 12.71 Table Column Correlations

**What:** Calculates the Pearson R and Spearman R correlation coefficients between two specified columns of a table.

**Why:** Determines the correlation between table columns.

**Used By:** Any object using real values.

**Appearance:**

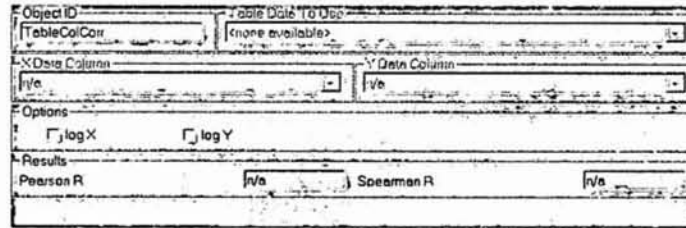


Figure 178. Table Column Correlations Screen

**Input Data:** table data

**Output Data:** 4 real values: Pearson R, Spearman R, X column ID and the Y column ID

**Properties:**

<b>Table Data To Use</b>	The input table data set is selected.
<b>X Table Column</b>	The table column to be used as the X value is selected.
<b>Y Table Column</b>	The table column to be used as the Y value is selected.
<b>Options</b>	
<u>log X</u>	If the X data are log transformed, toggle the checkbox on.
<u>log Y</u>	If the Y data are log transformed, toggle the checkbox on.
<b>Results</b>	Once the <b>Apply</b> button is selected, the calculated <u>Pearson R</u> and <u>Spearman R</u> correlation coefficients are displayed.

## 12.72 Table Column Math

**What:** Basic mathematics (+, -, \*, /) are applied to two table columns.

**Why:** Data manipulations.

**Used By:** Any object using XY data.

**Appearance:**

Figure 179. Table Column Math Window

**Input Data:** table data

**Output Data:** table data

**Properties:**

Table Data To Use	The input table is selected.
X Data Column	The column to be used as X data is selected.
Y Data Column	The column to be used as Y data is selected.
Math Operations	The math operation between column X and Y is selected. The two columns can be added, subtracted, multiplied or divided.
<b>Options</b>	
<u>log X</u>	The X data can be log transformed before the math operation is conducted.
<u>log y</u>	The Y data can be log transformed before the math operation is conducted.
<u>full table is output</u>	If selected, the output table will contain all the columns of the input table, with an additional column containing the math results. If not checked, the output table will contain three columns, one X column, one Y column and one math results column.
Result Column ID	The column containing the math results will have a column ID as specified in the text box.

## 12.73 Table Column Scale/Transform

**What:** Performs mathematical operations on a specified column of a table.

**Why:** Unit conversions, other data manipulations.

**Used By:** Any object using table data.

**Appearance:**

The screenshot shows a software window titled "Table Column Scale/Transform". It has a standard Windows-style border. The window is divided into several sections. At the top, there are two dropdown menus: "Object ID" (containing "Table Col S/T") and "Table Data To Use" (containing "<none available>"). Below these is a "Table Column" dropdown menu. The next section contains three dropdown menus: "Operation Order" (set to "Scale -> Transform"), "Scale Operation" (set to "D \* Sc + Off"), and "Transform" (set to "None"). Below these are two rows of controls. The first row has "Scale Value Source" with radio buttons for "Met" (checked) and "Exp" (unchecked), a dropdown menu set to "<none available>", and a "Scale Value" text box containing "1.0". The second row has "Offset Value Source" with radio buttons for "Met" (checked) and "Exp" (unchecked), a dropdown menu set to "<none available>", and an "Offset Value" text box containing "0.0". Below these is a "Null Processing" section with a checked checkbox "set to constant" and a "Constant" text box containing "0.0". At the bottom, there are two "Thresholding" sections. "Minimum Thresholding" has a dropdown set to "None" and a text box containing "0.0". "Maximum Thresholding" also has a dropdown set to "None" and a text box containing "0.0".

Figure 180. Table Column Scale/Transform Window

**Application:** nPost

**Input Data:** table data

**Output Data:** table data

**Properties:**

Table Data To Use

The input table data set that is scaled and/or transformed is selected.

Table Column

The table column that is scaled and/or transformed.

The remaining scale/transform options are described in Section 7.1.3.

## 12.74 Table Column Statistics

**What:** Calculates basic statistics (e.g. sum, mean, minimum, maximum, etc.) for a specified column of a table. Four basic statistics are selected for output as real values, typically used as data labels on a plot.

**Why:** For examination of table column data. Can also be included as labels for plots.

**Used By:** Any object using real values.

**Appearance:**

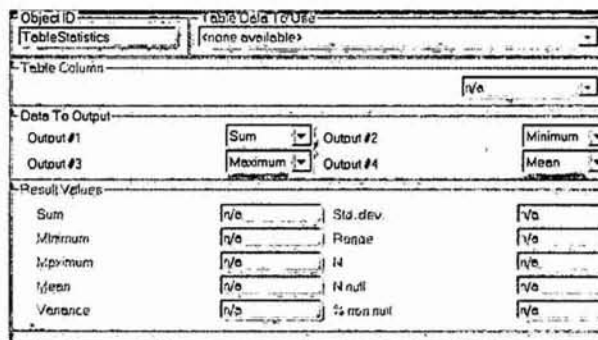


Figure 181. Table Column Statistics Window

**Input Data:** table data

**Output Data:** 4 real values

**Properties:**

Table Data To Use	Statistics are calculated on a column of the table data selected.
Table Column	Statistics are calculated on the specified table column.

The remaining options are described in the **Statistics** object description in this Appendix.



## 12.75 Table Column To Histogram

**What:** Creates the input data for a histogram plot based on a specified column of a table. The actual histogram is plotted using an **XY Series** plot object on a plot page, with this object as the input.

**Why:** Manipulates data in order to plot a histogram.

**Used By:** Any object using **XY** data. In particular, the **XY Series** plot object is used to plot the histogram.

**Appearance:**

The screenshot shows a software window titled "Table Column to Histogram". It contains several sections:

- Object ID:** TableHistogram
- Table Data To Use:** (none available)
- Table Column:** f/e
- Histogram Limits:**  Specified  Automatic. # of bins: 50. Output X Value:  Bin Value  Bin Index.
- Bin Minimum Value Source:**  Min. (none available). Bin Minimum Value: 10.
- Bin Maximum Value Source:**  Max. (none available). Bin Maximum Value: 50.
- Options:**  Log Histogram,  Cumulative,  Normalize.

Figure 182. Table Column to Histogram Window

**Input Data:** table data

**Output Data:** XY data

**Properties:**

Table Data To Use

Selects the input table data from which a column is converted to a histogram.

Table Column

The value frequency of the table column selected is calculated for the histogram.

The remaining options are described in the **Histogram** object description in this Appendix.

## 12.76 Table Columns To XY

**What:** Extracts two specified columns from a table to create XY data.

**Why:** To convert table data to XY data.

**Used By:** Any object using XY data.

### Appearance:

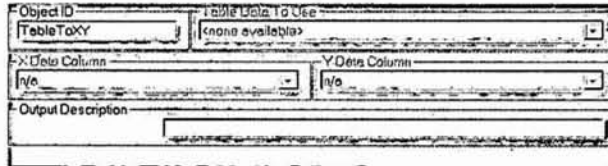


Figure 183. Table Columns to XY Window

**Input Data:** table data

**Output Data:** XY data

### Properties:

**Table Data To Use**

XY data are extracted from columns of the table data selected.

**X Data Column**

The specified table column is used as the X data.

**Y Data Column**

The specified table column is used as the Y data.

**Output Description**

Provides a description of the object, which will be used as the object type in drop-down lists and the label of the object in a **Series Legend**.

## 12.77 Table Row Index Logic

- What:** Conducts Boolean Logic (AND, OR, XOR) between two sets of table rows.
- Why:** Used to limit selection of simulations according to several parameter values, using the Master/Slave facility (the object's **Index Selection Value Source** will be a slave to this **Table Row Index Logic** object). For example, extraction of optimization results can be limited to simulations with a hydraulic conductivity and a flow dimension greater than specified values.
- Used By:** Any object using table data.
- Appearance:**

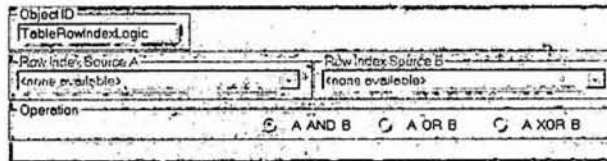


Figure 184. Table Row Index Logic Window

- Application:** nPost
- Input Data:** output from **Extract Table Rows**
- Output Data:** table data
- Properties:**

<b>Row Index Source A</b>	Select table rows, extracted from an <b>Extract Table Rows</b> object, to be compared with the table rows specified as Source B.
<b>Row Index Source B</b>	Select table rows, extracted from an <b>Extract Table Rows</b> object, to be compared with the table rows specified as Source A.
<b>Operation</b>	One of three Boolean logic operators may be selected:
<u>A AND B</u>	Row Indexes that occur in both A and B are output (i.e. only indexes common to A and B).
<u>A OR B</u>	Row Indexes that occur in either A or B are output (i.e. all A indexes and all B indexes).
<u>A XOR B</u>	Row Indexes that occur in either A or B, but not both, are output (i.e. all indexes in A and B except those indexes common to A and B).

## 12.78 Table Row Statistics

**What:** Calculates basic statistics (e.g. sum, mean, minimum, maximum, etc.), as well as confidence limits and the median, for all rows of a table. The statistics are output in table format, and may be viewed as a table with the **View Table Data** object.

**Why:** For examination of table row data. Can also be included as labels for plots.

**Used By:** Any object using real values.

**Appearance:**

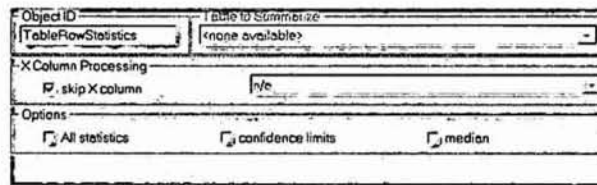


Figure 185. Table Row Statistics Window

**Input Data:** table data

**Output Data:** table data

**Properties:**

<p><b>Table to Summarize</b></p>	A table data object is selected, from which statistics will be calculated for each row of the table.
<p><b>X Column Processing</b></p> <p><u>skip X column</u></p>	If selected, the specified column in the drop-down-box will be excluded from the row statistics.
<p><b>Options</b></p> <p><u>All statistics</u></p> <p><u>confidence limits</u></p> <p>Mean</p> <p>Min</p> <p>Max</p> <p>Upper95</p>	<p>Each option determines the statistics calculated. The statistics calculated are viewed by viewing the resulting table data with a <b>View Table Data</b> object. If multiple options are selected, the mean, min and max are only output once.</p> <p>If selected, outputs the statistics outlined for the <b>Statistics</b> object for each table row.</p> <p>If selected, outputs the following statistics for each table row:</p> <p>(sum of all non-null values)/(number of non-null data)</p> <p>Minimum non-null value.</p> <p>Maximum non-null value.</p> <p>Upper 95% confidence limit.</p>

Lower95	Lower 95% confidence limit.
<u>median</u>	If selected, outputs the following statistics for each table row:
Mean	(sum of all non-null values)/(number of non-null data)
Min	Minimum non-null value.
Max	Maximum non-null value.
Median	The middle number of non-null data, i.e. half the non-null data have values greater than the median, and half have values less than the median. If the number of non-null data is even, the median is the average of the two middle numbers.

## 12.79 Time Limits Extraction/Interpolation

**What:** Extracts XY data for a range of sequences or time and within specified data limits, and interpolates the extracted data.

**Why:** Allows the examination of XY within a specified time frame.

**Used By:** Any object using XY data.

**Appearance:**

Figure 186. Time Limits Extraction/Interpolation Window

**Input Data:** XY data and sequence time interval data if Sequence Range time\_data selected.

**Output Data:** XY data

**Properties:**

**XY Input Data**

Select XY data to extract and/or interpolate.

**Time Data To Use**

All Input

XY data are not limited by time or sequences, i.e. all data are used for interpolation.

Sequence Range

XY data are limited by one or more sequences, as defined in the Sequence Range frame.

Time Range

XY data are limited by a time range defined by a minimum and maximum time in the Time Range frame.

**Sequence Range**

Seq times

The sequence time data set to be used is selected. In nPre, the sequence time data are by default a global object defined in the Sequence input window. In nPost, the sequence time data must be read in with a **Sequence Time Interval Data** object, or with XY or profile simulation results.

<u>Start</u>	The sequences available in the specified <b>Sequence Time Data</b> will be listed in the drop-down-box, and the starting sequence is selected. XY data starting at this sequence is extracted.
<u>End</u>	The sequences available in the specified <b>Sequence Time Data</b> will be listed in the drop-down-box, and the ending sequence is selected. XY data up to the end of this sequence is extracted.
<b>Time Range</b>	
<u>Minimum</u>	Minimum time of the time range extracted.
<u>Maximum</u>	Maximum time of the time range extracted.
<b>Interpolation Method</b>	Interpolation method is selected, described in detail in Section 7.1.4. If no interpolation is desired, select the <i>Input X</i> method.
<b>Number of points</b>	For all interpolation methods except <i>Input X</i> , determines the number of equally spaced X values and corresponding interpolated Y values.
<b>Log relative start</b>	For <i>Log (Relative)</i> interpolation method only, determines the value of the first log X value.
<b>Limit Settings</b>	For all interpolation methods except <i>Input X</i>
<u>Specified</u>	The minimum and maximum X values are specified in the <u>Minimum</u> and <u>Maximum</u> text boxes.
<u>From Input</u>	Determines the minimum and maximum X values automatically from the input data.

## 12.80 Transpose

**What:** Switches the X and Y data (i.e. output X = input Y and output Y = input X).

**Why:** To manipulate data.

**Used By:** Any object using XY data.

**Appearance:**




Figure 187. Transpose Window

**Input Data:** XY data

**Output Data:** XY data

**Properties:**

**XY Transpose**

Selects the XY input data for which the X and Y will be transposed.

**Output Description**

Provides a description of the object, which will be used as the object type in drop-down lists and the label of the object in a **Series Legend**.



## 12.81 Vector Math

**What:** Basic array mathematics (+, -, \*, /) can be applied to two sets of XY data.

**Why:** Data manipulations.

**Used By:** Any object using XY data.

**Appearance:**

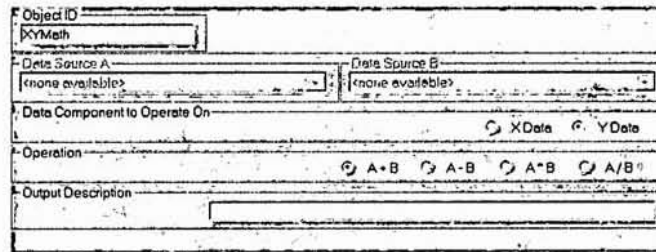


Figure 188. Vector Math Window

**Input Data:** XY data

**Output Data:** XY data

**Properties:**

**Data Source A**

The first XY data set is selected.

**Data Source B**

The second XY data set is selected. Data source A and B must be of the same size (i.e. same number of XY points).

**Operation**

The math operation between data source A and B is selected. The two data sources can be added, subtracted, multiplied or divided.

**Output Description**

Provides a description of the object, which will be used as the object type in drop-down lists, and the label of the object in a **Series Legend**.

## 12.82 View Table Data

**What:** Allows the user to view table data.

**Why:** Used to view table data created in another object, such as **Real Values(s) to Table** or **Table Row Statistics**.

**Used By:** Any object using table data.

**Appearance:**

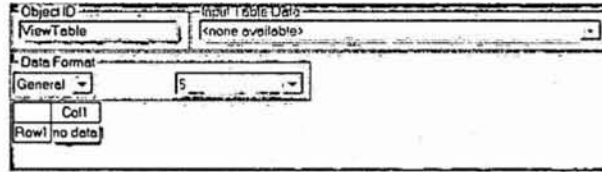


Figure 189. View Table Data Table Window

**Input Data:** table data

**Output Data:** table data

**Properties:**

**Input Table Data**

Table data from the object selected are viewed in this property window.

**Data Format**

Specifies the numeric format of the data. Number formatting described in Section 6.3.3.

Data are viewed in the table once the **Apply** button has been selected. To modify table data, use the **Enter Table Data** object.

## 12.83 View XY Data

**What:** Allows the user to view XY data.

**Why:** Used to view XY data created in another object, such as **Read XY Data** or **Dual Scale Transform**.

**Used By:** Any object using XY data.

**Appearance:**

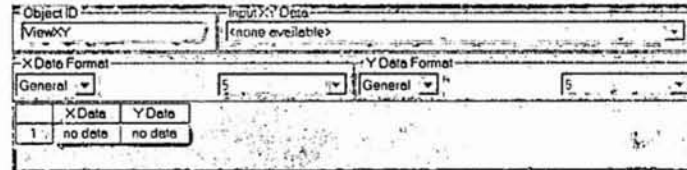


Figure 190. View XY Data Window

**Input Data:** XY data

**Output Data:** XY data

**Properties:**

**Input XY Data**

XY data from the object selected are viewed in this property window.

**X/YData Format**

Specifies the numeric format of the X and Y data. Number formatting options are described in Section 6.3.3.


Data are viewed in the table once the **Apply** button has been selected. To modify XY data, use the **Enter XY Data** object.

## 12.84 Write Color Map

**What:** Writes a color map to a text file.

**Why:** Allows a color map to be used or manipulated outside the current nSIGHTS application.

**Appearance:**

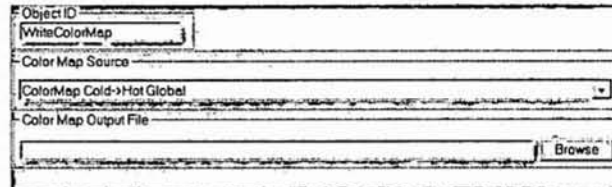

The image shows a dialog box titled "Write Color Map". It has three main sections: "Object ID" with a text field containing "WriteColorMap"; "Color Map Source" with a dropdown menu showing "ColorMap Cold->Hot Global"; and "Color Map Output File" with a text field and a "Browse" button.

Figure 191. Write Color Map Window

**Application:** nPre, nPost as an output object

**Input Data:** color map

**Output Data:** text output file containing color map information compatible with **Read Color Map**, default file extension \*.cmap

**Properties:**

Color Map Source

Selects the color map data to be output.

Color Map Output File

The path and name of the output file is entered in the text box or the **Browse** button is used to find the file path using the standard Windows open file dialog.

The output file is only written once the **Apply** button is selected.

## 12.85 Write Curve File

**What:** Writes single or multiple curve data to a text file. Up to 24 curves may be included in one file.

**Why:** Allows curve data to be used or manipulated outside the nSIGHTS application (for example, in another nSIGHTS application).

**Appearance:**

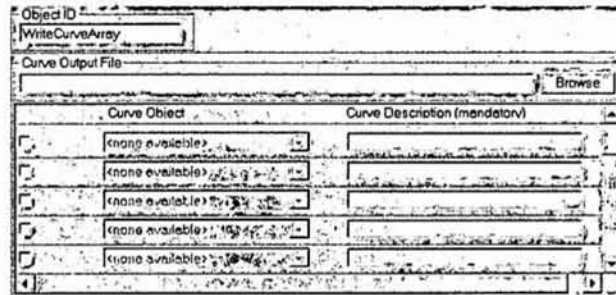


Figure 192. Write Curve File Window

**Application:** nPre, nPost as an output object

**Input Data:** curve data

**Output Data:** text output file containing curve file information compatible with **Read Curve File**, default file extension \*.nCRV

**Properties:**

**Curve Output File**

The path and name of the output file is entered in the text box or the **Browse** button is used to find the file path using the standard Windows open file dialog.

**Curve Object**

Curve data to be included in the output file is selected with the checkbox and adjacent drop-down list. Up to 24 curve data objects can be written to the output file.

**Curve Description (mandatory)**

A description of the curve is required. This description is used as the curve ID once the file is loaded into another nSIGHTS application.

The output file is only written once the **Apply** button is selected.

## 12.86 Write Table File

**What:** Writes a table to a text file.

**Why:** Allows table data to be used or manipulated outside the nSIGHTS application (for example, in another nSIGHTS application).

**Appearance:**

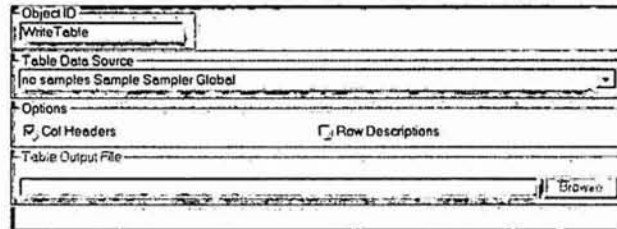


Figure 193. Write Table File Window

**Application:** nPre, nPost as an output object

**Input Data:** table data

**Output Data:** text output file containing table data compatible with **Read Table File**

**Properties:**

<b>Table Data Source</b>	Selects the table data to be output.
<b>Options</b>	
<u>Col Headers</u>	If selected, the first line of file contains column header names, right justified.
<u>Row Descriptions</u>	If selected, each row is prefaced by a row identifier.
<b>Table Output File</b>	The path and name of the output file is entered in the text box or the <b>Browse</b> button is used to find the file path using the standard Windows open file dialog.

The output file is only written once the **Apply** button is selected.

**File Format:**

The table is written as a text file with each column right justified in a field 16 characters wide, each column separated by a space (Basic file format for the **Read Table File** object). Numeric values are written in scientific notation with 9 digit precision.

## 12.87 Write XY File

**What:** Writes XY data to a text file.

**Why:** Allows XY data to be used or manipulated outside the nSIGHTS application (for example, in another nSIGHTS application).

**Appearance:**

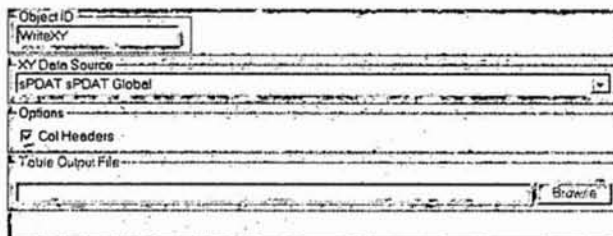


Figure 194. Write XY File Window

**Application:** nPre, nPost as an output object

**Input Data:** XY data

**Output Data:** text output file containing XY data compatible with **Read XY Data**, default file extension \*.dat

**Properties:**

**XY Data Source** Selects the XY data to be output.

**Options**

**Col Headers** If selected, the first line of file contains column header names, right justified.

**XY Output File** The path and name of the output file is entered in the text box or the **Browse** button is used to find the file path using the standard Windows open file dialog.

The output file is only written once the **Apply** button is selected.

**File Format:**

The XY data are written as a text file with each column right justified in a field 16 characters wide, each column separated by a space. Numeric values are written in scientific notation with 9 digit precision.

## 13 APPENDIX B – PLOT OBJECT DESCRIPTIONS

This Appendix is divided into four sections:

- (1) Default Plot Objects
- (2) Data Display Plot Objects
- (3) Annotation Plot Objects
- (4) Active Plot Objects

Default plot objects are automatically created upon creation of a plot page, whereas data display, annotation and active plot objects are created using the **Object→New** command. Within the selection menu of the **Object→New** command, data display object names are prefixed by **Data:**, annotation object names are prefixed by **Anno:**, and active objects have prefixes specific to the object.



# DEFAULT PLOT OBJECTS

## 13.1 2D XY Main Menu

**What:** Controls the general layout and characteristics of 2D XY plots.

**Appearance:**

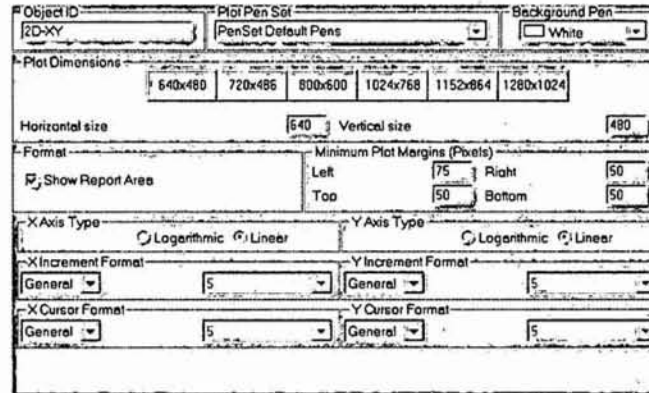


Figure 195. 2D XY Main Menu Window

### Properties:

- |                        |   |                        |                        |                      |                        |
|------------------------|---|------------------------|------------------------|----------------------|------------------------|
| <b>ObjectID</b>        | For plot pages the object ID of the main menu is used as the title of the plot window itself, and as the identifier for the page in the object tree.  |                        |                        |                      |                        |
| <b>Plot pen set</b>    | The pen set to be used for all objects on the plot. This restricts all objects on the plot to the same palette of 24 colors (except for objects which use color maps to display data).  |                        |                        |                      |                        |
| <b>Background Pen</b>  | The pen color used for the background in the plotting area.   |                        |                        |                      |                        |
| <b>Plot Dimensions</b> | Size of the window area. Pressing any of the buttons sets the X and Y of the window accordingly. Custom window sizes can be set manually with the following commands:<br><br><table border="0" style="margin-left: 40px;"><tr><td style="padding-right: 20px;"><u>Horizontal size</u></td><td>X dimension in pixels.</td></tr><tr><td><u>Vertical size</u></td><td>Y dimension in pixels.</td></tr></table> | <u>Horizontal size</u> | X dimension in pixels. | <u>Vertical size</u> | Y dimension in pixels. |
| <u>Horizontal size</u> | X dimension in pixels.  |                        |                        |                      |                        |
| <u>Vertical size</u>   | Y dimension in pixels.  |                        |                        |                      |                        |
| <b>Format</b>          |   |                        |                        |                      |                        |

Show report area

If selected, the bottom of the plot window will contain an area for displaying cursor related data.

**Minimum Plot Margins (Pixels)**

The distance between the plot axes/frame and the edge of the plotting area.

The following dialog prompts are also available on the **2D XY Axes** objects. Changes made here will be automatically updated in the **2D XY Axes** objects.

**X/Y Axis Type**

Linear or logarithmic axes can be defined.

**X/Y Increment Label Format**

Numeric format for labels at each major increment. Numeric format is discussed further in Section 6.3.3.

**X/Y Cursor Reporting Format**

Numeric format for the X or Y value of the current cursor location in the cursor reporting area. This format is also used for all reporting plot objects that do not have a specific reporting format. Numeric format is discussed further in Section 6.3.3.

## 13.2 2D XY Axes

**What:** There are two default plot objects to define the plot axes, one for the X axis and one for the Y axis, each with identical object property windows.

**Appearance:**

Figure 196. 2D XY Axes Window

**Properties:**

<b>Increment Style</b>	Axes increments are represented by grid lines ( <i>Grid</i> ), tic marks ( <i>Tic</i> ), or not plotted ( <i>None</i> ).
<u>M</u> ajor	Style for labelled increments.
<u>M</u> inor	Style of unlabelled increments between major increments.
<b>Axis Type</b>	Linear or logarithmic axes can be defined. This dialog prompt is also available on the <b>2D XY Main Menu</b> object. Changes made here will be automatically updated in the <b>2D XY Main Menu</b> object.
<b>Axes Limits</b>	Defines the domain of the plot.
<u>A</u> uto	Axes are adjusted to enclose all defined plot objects.
<u>L</u> inear min	The left (X axis) or bottom (Y axis) co-ordinate of the plot if a linear axis is used.
<u>L</u> inear max	The right (X axis) or top (Y axis) co-ordinate of the

	plot if a linear axis is used.
<u>Log min</u>	The left/bottom co-ordinate of the plot if a log axis is used.
<u>Log max</u>	The right/top co-ordinate of the plot if a log axis is used.
<b>Major Increment Setup</b>	Distance between labelled increments for linear axes.
<u>Auto</u>	Increments are set automatically based on data range.
<u>Major increment</u>	Value to use if not <u>Auto</u> .
<b>Minor Increment Setup</b>	Number of minor increments between each major increment for linear axes.
<u>Auto</u>	Increments are set automatically based on major increment size.
<u>Minor per major</u>	Value to use if not <u>Auto</u> .

The following dialog prompts are also available on the **2D XY Main Menu** object. Changes made here will be automatically updated in the **2D XY Main Menu** object.

<b>Increment Label Format</b>	Numeric format for labels at each major increment. Numeric format is discussed further in Section 6.3.3.
<b>Cursor Reporting Format</b>	Numeric format for the X or Y value of the current cursor location in the cursor reporting area. This format is also used for all reporting plot objects that do not have a specific reporting format. Numeric format is discussed further in Section 6.3.3.

## 13.3 2D Plot Annotation

**What:** Provides control over axes labelling and the general appearance of all 2D plots.

**Appearance:**

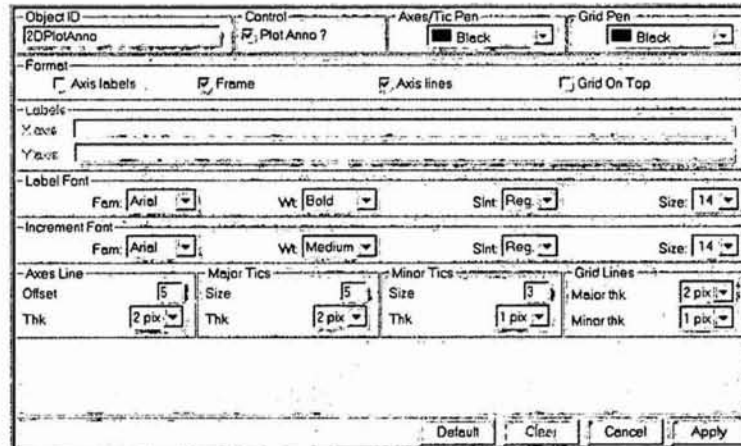


Figure 197. 2D Plot Annotation Window

### Properties:

#### Control

Plot Anno ?

If not selected, axes related annotation is not shown on the plot.

Axes/Tic Pen

The pen color used for the axes lines, tics, and labels.

Grid Pen

The pen color used for any increment grid lines.

Format

Toggle control over components of annotation

Axis labels

If selected, labels will be drawn to the left of the left Y axis and underneath the bottom X axis.

Frame

If selected, the axes (including tics) are drawn on the top and right as well as the bottom and left. Increment labels will not be drawn on these mirror axes.

Axis lines

Axes lines will only be drawn if this is selected.

Grid On Top

If major or minor grid lines are used, this controls the

	order in which the grid is drawn – before the plot data objects (toggle not set) or after the plot data objects (toggle selected).
<b>Labels</b>	If toggle <u>Axis labels</u> is set, the text entered here will be displayed at the appropriate axis.
<u>X axis</u>	Label displayed under bottom X axis.
<u>Y axis</u>	Label displayed to left of left Y axis.
<b>Label Font</b>	The font used for axis labels. Font dialogs are discussed in Section 6.3.4.
<b>Increment Font</b>	The font used for axes increment labels.
<b>Axes Line</b>	The offset of the axes line in pixels away from the data plotting area, and the thickness of the lines used to draw the axes.
<b>Major Tics</b>	The length of the major tics in pixels and their thickness.
<b>Minor Tics</b>	The length of the minor tics in pixels and their thickness.
<b>Grid Lines</b>	The thickness of major and minor grid lines in pixels.

## 13.4 3D XYZ: Main Menu

**What:** Controls the general layout and characteristics of 3D XYZ plots.

**Appearance:**

Object ID	Plot Pen Set	Background Pen
3D-XYZ	PenSet Default Pens System	White
Plot Dimensions		
640x480 720x486 800x600 1024x768 1152x864 1280x1024		
Horizontal size		Vertical size
640		480
Projection		Minimum Plot Margins (Pixels)
<input checked="" type="radio"/> Perspective <input type="radio"/> Orthographic		Left: 0 Right: 0
Field of view: 40.0		Top: 0 Bottom: 0
XYZ Properties		
XY axes length ratio		1.0
XZ axes length ratio		0.5
Default Clear Cancel Apply		

Figure 198. 3D XYZ: Main Menu Window

**Properties:**

ObjectID, Plot Pen Set, Background Pen, Plot Dimensions, and Minimum Plot Margins are as described for the 2D XY: Main Menu.

**Projection**

How 3D space is converted to a 2D representation.

Perspective

Lines diminish with distance from the view coordinate.

Orthographic

Relative sizes remain the same at all distances from the view co-ordinate.

Field of View

For Perspective, the angle of the *viewing lens*. Smaller values reduce perspective distortion.

**XYZ Properties**

Used to set the relative lengths of the plotted axes. The X axes has a relative length of 1.

X:Y axes length ratio

Controls length of Y (horizontal axes).

X:Z axes length ratio

Controls length of Z (vertical axes).

## 13.5 3D XYZ Axes

**What:** There are three default plot objects to define the plot axes, one for the X axis, one for the Y axis and one for the Z axis, each with identical object property windows.

### **Appearance and Properties:**

Appearance and all dialog items in the object property windows were previously described for the 2D XY Axes object property window.



## 13.6 3D Axes Labels

**What:** Provides control over axes labelling for 3D plots.

**Appearance:**

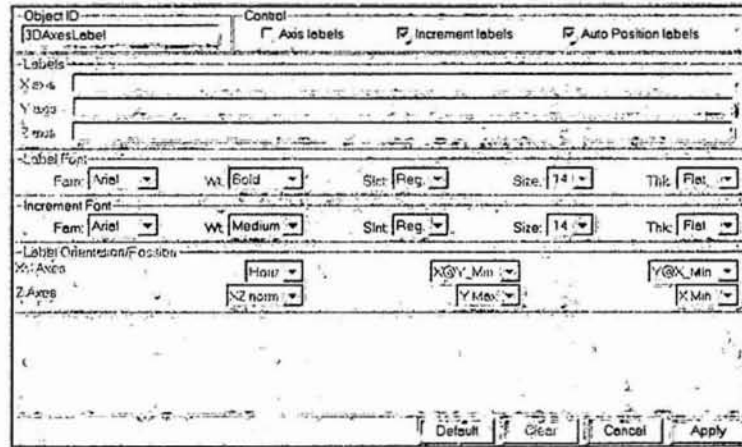


Figure 199. 3D Axes Labels Window

**Properties:**

### Control

Axis labels

Labels are plotted at each axis if turned on.

Increment labels

Numeric values of major increments are plotted at each axis if turned on.

Auto Position labels

The orientation and location of labels are adjusted as the view azimuth and elevation are changed.

### Labels

If toggle Axis labels is selected, the text entered here will be displayed at the appropriate axis

X axis

Label displayed under X axis.

Y axis

Label displayed under Y axis.

Z axis

Label displayed adjacent to Z axis.

### Label Font

The font used for axes labels. The font dialog is described in Section 6.3.4.

Increment Font

The font used for axes increment labels.

**Label Orientation/Position**

Controls text plane, orientation and position of X, Y, and Z labels if Auto Position Labels is not selected.

XYaxes

plane

Vertical or horizontal.

X\_pos

X axis labelling is at X axis associated with Y min or Y max.

Y\_pos

Y axis labelling is at Y axis associated with X min or X max.

Z Axes

plane

XZ or YZ, normal or reversed.

Y\_pos

Z axis labelling is at Z axis associated with Y min or Y max.

X\_pos

Z axis labelling is at Z axis associated with X min or X max.

## 13.7 3D Axes Format

**What:** This rather complex menu provides control over general formatting of 3D plot axes.

**Appearance:**

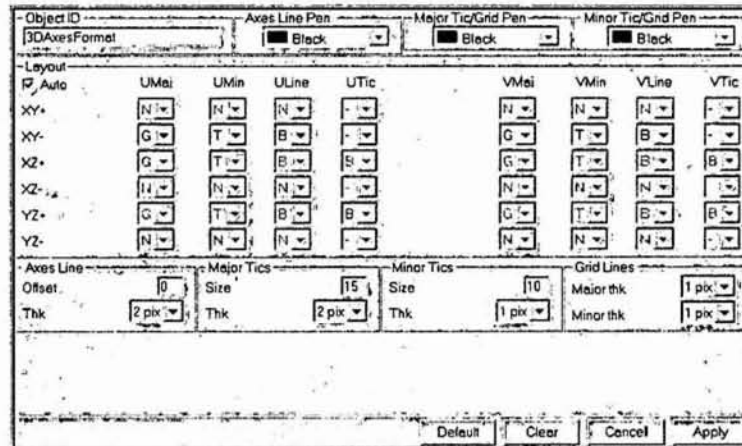


Figure 200. 3D Axes Format Window

**Properties:**

**Axes Line Pen**

The pen color used for the axes lines.

**Major Tic/Grid Pen**

The pen color used for major tics and grid lines (and the increment labels and axes labels).

**Minor Tic/Grid Pen**

The pen color used for minor tics and grid lines.

**Layout**

A 3D plot is a cube which has 6 sides available for axes tics and grid lines. The controls in the Layout frame provide complete control over the appearance of each side. There are four controls for each axis direction on each plane. The AU@ controls affect the horizontal axes on vertical planes and the AX@ axes on the horizontal planes. The AV@ controls affect the vertical axes (Z axes) on vertical planes and the AY@ axes on the horizontal planes.

Auto

If set, the bottom XY plane (XY-) is used as a template for the XZ and YZ planes which are on the far side of the data view from the viewer.

<u>Maj</u>		Controls presence of major tics/grid lines:
	<i>N</i>	No tic marks/grid lines.
	<i>T</i>	Tic marks at major increments.
	<i>G</i>	Grid lines at major increments.
<u>Min</u>		Controls presence of minor tics/grid lines:
	<i>N</i>	No minor tic marks/grid lines.
	<i>T</i>	Tic marks at minor increments.
	<i>G</i>	Grid lines at minor increments.
<u>Line</u>		Controls presence of axes lines:
	<i>N</i>	No axes lines drawn.
	-	Axes line drawn at other axes minimum.
	+	Axes line drawn at other axes maximum.
	<i>B</i>	Axes line drawn at both ends of other axes.
<u>Tics</u>		Controls presence of tics (if major or minor tics are specified):
	-	Tics drawn at other axes minimum.
	+	Tics drawn at other axes maximum.
	<i>B</i>	Tics drawn at both ends of other axes.
<b>Axes Line</b>		The offset of the axes line in pixels away from the data plotting area, and the thickness of the lines used to draw the axes.
<b>Major Tics</b>		The length of the major tics in pixels and their thickness.
<b>Minor Tics</b>		The length of the minor tics in pixels and their thickness.
<b>Grid Lines</b>		The thickness of major and minor grid lines in pixels.

**Note: All axes lines and tic marks can be disabled by pressing the Clear button for the menu.**

## 13.8 3D Lighting

**What:** Provides control over Open GL lighting used on all 3D plots.

**Appearance:**

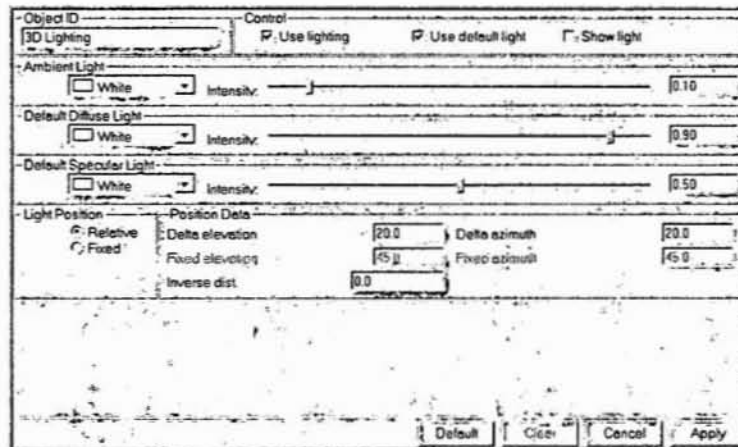


Figure 201. 3D Lighting Window

### Properties:

#### Control

Overall determination of lighting

#### Use lighting

If set, OpenGL lighting is used. If not set there is no lighting and object edges will need to be displayed to gain perspective information.

#### Use default light

If set, a point source diffuse light and ambient (background) lighting are used. If not set, only ambient lighting is used.

#### Show light

Shows the location of the diffuse light as a black cube. The vector from the center of the view to the light is shown as a straight red line.

#### Ambient Light

A combination control that sets the color and relative intensity of the ambient light.

#### Default Diffuse Light

A combination control that sets the color and relative intensity of the directional light.

#### Default Specular Light

Not used at this time.

**Light position**

Relative

How the position of the diffuse light is specified.

Light position is relative to the current view elevation and azimuth.

Fixed

Light is at a fixed XYZ, independent of the view.

**Position data**

Delta elevation

The actual location of the light source.

For relative position, added to view elevation.

Delta azimuth

For relative position, added to view azimuth.

Fixed elevation

For fixed position.

Fixed azimuth

For fixed position.

Inverse Dist.

1 / distance to light. A value 0.0 means light is infinite.

## DATA DISPLAY PLOT OBJECTS

### 13.9 Confidence Limits

**What:** Plots single, dual or triple confidence limits of a covariance matrix.

**Why:** To plot confidence limits of data.

**Used By:** Series Legend

**Appearance:** This object appears different in 2D and 3D.

#### 2D

Object ID	Plot Settings
Cover Limits	Layer 0 <input checked="" type="checkbox"/> Plot
Covariance Data	Pen Blue
None available	
X Variable	Y Variable
Y	Y
Confidence Limits	Limit Type
95.4	Single
	Plot Format
	Line
Ellipse Pts	Line Thickness
500	1 pix
Legend Description	
<input checked="" type="checkbox"/> New Label	

Figure 202. 2D Confidence Limits Window

#### 3D

Object ID	Plot Settings	
Cover Limits	PlotVol 0.0E+00 <input checked="" type="checkbox"/> Plot	
Covariance Data	Pen Blue	
None available		
X Variable	Y Variable	Z Variable
Y	Y	Y
Confidence Limits	Limit Type	Plot Format
95.4	Single	Line
Ellipse Pts	Ellipsoid Slices	Ellipsoid Meridians
500	50	50
Line Thickness	Tube Extension	Cap Ends
1 pix	<input checked="" type="checkbox"/>	Triangle 5 pix
Legend Description		
<input checked="" type="checkbox"/> New Label		
Offset		
X 0.000	Y 0.000	Z 0.000

Figure 203. 3D Confidence Limits Window

**Input Data:** Extract Covariance Matrices

**Output Data:** series legend specifications

#### Properties:

Covariance Data

Confidence limits are plotted for the covariance data selected.

Pen

The color of the confidence limits is selected from

	the plot window's plot pen set.
<b>X Variable</b>	A parameter is selected for the X axis from a list of available parameters based on the covariance data selected.
<b>Y Variable</b>	A parameter is selected for the Y axis from a list of available parameters based on the covariance data selected.
<b>Z Variable</b>	For 3D plot object, a parameter is selected for the Z axis from a list of available parameters based on the covariance data selected.
<b>Confidence Limits</b>	A probability is selected (99.0, 95.4, 90.0, 68.3) for the confidence limits. The probability indicates the likelihood the true parameter values are within the plotted confidence error bar or region.
<b>Limit Type</b>	
<i>Single</i>	An error bar for each axes will define the confidence limits.
<i>Dual</i>	An ellipse will be used to define the confidence region. In 3D, an ellipse is plotted in all three planes (XY, YZ and XZ).
<i>Triple</i>	For 3D plot object, an ellipsoid will be used to define the confidence region.
<b>Plot Format</b>	
<i>Line</i>	The only plot format for Single limit type. For Dual limit type, the confidence region is plotted as a Line surrounding the region. For Triple limit type, the lines of the slices and meridians of the ellipsoid are drawn.
<i>Solid</i>	For Dual or Triple limit type, the ellipse/ellipsoid defining the confidence region is solid, filled with the color defined in Pen.
<i>Tube</i>	For 3D plot object, plots the same information as for <i>Line</i> plot format, but the lines are plotted as three-dimensional tubes.
<b>Ellipse Pts</b>	For Dual limit type, the number of points defining the ellipse of the confidence region can be defined.
<b>Ellipsoid Slices</b>	For 3D plot object and Triple limit type, defines the resolution of the ellipsoid. For example, if the



<b>Ellipsoid Meridians</b>	ellipsoid was a globe, the slices would represent the globe's latitude.
<b>Line Thickness</b>	For 3D plot object and Triple limit type, defines the resolution of the ellipsoid. For example, if the ellipsoid was a globe, the meridians would represent the globe's longitude.
<b>Tube Extrusion</b>	The thickness of the error bars, ellipse line or slices and meridians is defined in pixels.
<u>Cap Ends</u>	For 3D plot object and Tube plot format.
<u>Polygon type</u>	The ends of the tube are filled with a polygon, such that the viewer cannot see inside the tube.
<u>Polygon size</u>	The tube can be several shapes: <i>Triangle, Square, Octagon or Round.</i>
<b>Legend Description</b>	Point size of each polygon of the tube in pixels.
<u>New Label</u>	A label used for the <b>Series Legend</b> object can be entered in the text box. If the <u>New Label</u> checkbox is not selected, the Object ID is used as the legend label.
<b>Offset</b>	For 3D plot object, XYZ offset is used to improve visibility of objects (see discussion of 3D plot object visibility in Section 8.1.2.1).

## 13.10 Cube Color Block

**What:** Displays color blocks around each cube data value for specified cube indices within specified cube value limits. Blocks are colored according to the associated value.

**Why:** Displays cube data in a 3D plot window.

**Used By:** **Color Legend**

**Appearance:**

Figure 204. Color Cube Block Window

**Input Data:** cube data, cube indexes and color map

**Output Data:** color map limit specifications

**Properties:**

Cube Data To Plot	The cube data set to be plotted is selected.
Cube Indexes	The indexes of cube data to be plotted are selected. Cube indexes are defined in an <b>Extract Cube Indexes</b> object.
Limit Selection	A master/slave control to connect the data limits to those specified in another object (e.g. <b>Cube Color Point, Grid Color Block</b> , etc.). Master/Slave controls are described in Section 6.3.1.
Color Map	The color map used to associate colors with data values is selected.
Data Limits	Controls how data values in the input data are mapped to colors in the input color map. This involves minimum and maximum data limit values that correspond to the first and last color in the color

<u>Auto</u>	map respectively. If set, then the data limits are extracted from the data, based on the <u>Auto Source</u> . If not set, then the data limits specified by the <u>Min</u> and <u>Max</u> properties are used.
<u>Log</u>	If set, the log range is mapped to the colors, and the log of the data values are used in calculating the mapped color. Otherwise, linear mapping is used.
<u>Auto Source</u>	The method for determining the data limits automatically.
<i>All Data</i>	The data limits are based on all data values.
<i>Cube in View</i>	The data limits are based on the data values within the window view.
<u>Min</u>	Minimum data value for color mapping.
<u>Max</u>	Maximum data value for color mapping.
<b>Out-of-Range</b>	Colors used for data values outside the data limits.
<u>Extend</u>	Values below the minimum data limit are given the first color in the color map, values above the maximum data limit are given the last color in the color map.
<u>Clip</u>	Values outside the data limits range are not plotted.
<b>Reduction Factor</b>	Factor by which the plotted blocks are reduced. Reduction is performed by shrinking the block along the lines between block vertices and the enclosed node by the factor.
<b>Edges</b>	Controls the plotting of block edges with lines.
<u>Plot</u>	If selected, edges are plotted.
<u>Pen</u>	Color for edges selected from the plot window's plot pen set.
<u>Thk</u>	Edge line thickness.
<u>PolyOff</u>	Polygon offset of lines. Used only for OpenGL 1.1.
<b>3D Co-ordinate Mapping</b>	Determines which cube variable is plotted as the X, Y and Z axis. Once the input data has been selected and applied, the three <u>Cube</u> dialog prompts will be replaced with the name of each cube variable.

**Offset**

XYZ offset is used to improve the visibility of objects (see discussion of 3D plot object visibility, Section 8.1.2.1).

## 13.11 Cube Color Point

**What:** Displays points at each cube data value for specified cube indices within specified cube value limits. Points are colored according to the associated value.

**Why:** Displays cube data in a 3D plot window.

**Used By:** **Color Legend**

**Appearance:**

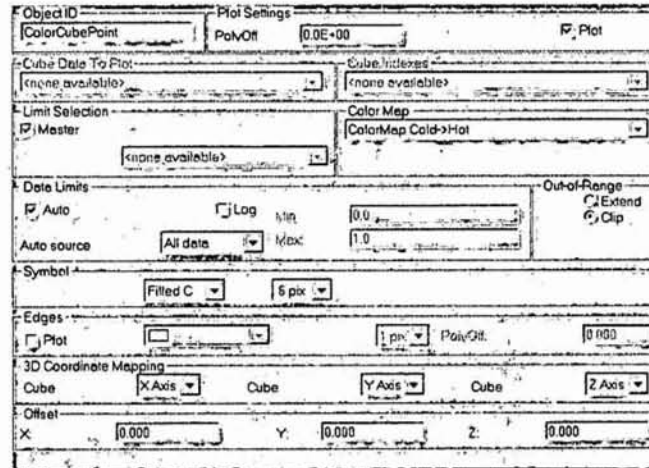


Figure 205. Cube Color Point Window

**Input Data:** cube data, cube indexes and color map

**Output Data:** color map limit specifications

**Properties:**

<b>Cube Data To Plot</b>	The cube data set to be plotted is selected.
<b>Cube Indexes</b>	The indexes of cube data to be plotted are selected. Cube indexes are defined in an <b>Extract Cube Indexes</b> object.
<b>Limit Selection</b>	A master/slave control to connect the data limits to those specified in another object (e.g. <b>Cube Color Block</b> , <b>Grid Color Block</b> , etc.). Master/Slave controls are described in Section 6.3.1.
<b>Color Map</b>	The color map used to associate colors with data values is selected.
<b>Data Limits</b>	Controls how data values in the input data are mapped to colors in the input color map. This involves minimum and maximum data limit values that correspond to the first and last color in the color

	map respectively.
<u>Auto</u>	If set, then the data limits are extracted from the data, based on the <u>Auto Source</u> . If not set, then the data limits specified by the <u>Min</u> and <u>Max</u> properties are used.
<u>Log</u>	If set, the log range is mapped to the colors, and the log of the data values are used in calculating the mapped color. Otherwise, linear mapping is used.
<u>Auto Source</u>	The method for determining the data limits automatically.
<i>All Data</i>	The data limits are based on all data values.
<i>Cube in View</i>	The data limits are based on the data values within the window view.
<u>Min</u>	Minimum data value for color mapping.
<u>Max</u>	Maximum data value for color mapping.
<b>Out-of-Range</b>	Colors used for data values outside the data limits.
<u>Extend</u>	Values below the minimum data limit are given the first color in the color map, values above the maximum data limit are given the last color in the color map.
<u>Clip</u>	Values outside the data limits range are not plotted.
<b>Symbol</b>	Select from available symbols: X, +, square, circle, triangle, diamond, filled square, filled circle, filled triangle and filled diamond. The approximate relative size in pixels is also selected.
<b>Edges</b>	Controls the plotting of point edges with lines. Only available for filled symbols.
<u>Plot</u>	If selected, edges are plotted.
<u>Pen</u>	Color for edges selected from the plot window's plot pen set.
<u>Thk</u>	Edge line thickness.
<u>PolyOff</u>	Polygon offset of lines. Used only for OpenGL 1.1.
<b>3D Co-ordinate Mapping</b>	Determines which cube variable is plotted as the X, Y and Z axis. Once the input data has been selected and applied, the three <u>Cube</u> dialog prompts will be replaced with the name of each cube variable.

Covariance	Covariance List	Covariance
Jacobian	Jacobian List	Jacobian
OptRun	Optimization Results	List Optimization Run

## 16.4 Output Objects

Output Object Names		
Object Tree	Object Menu	Object Description
WriteColorMap	Write Color Map File	Write Color Map
WriteCurveArray	Write Curve File	Write Curve File
WriteGrid	Write Grid File	Write Grid
WriteTable	Write Table to File	Write Table
WriteXY	Write XY Data to File	Write XY Data

XYMath	Vector Math	XY Math
XYStatistics	Statistics	XY Statistics
XYToXYArray	Add XY to Array	XY To XY Array

## 16.2 Plot Objects

Plot Object Names		
Object Tree	Object Menu	Object Description
2DAnalytic	Analytics: Line Data	2D Line Analysis
2DPlotAnno	2D Plot Annotation	2DPlot Annotation
2D-XY	2D XY Main Menu	2D XY Plot
3D Lighting	3D Lighting	3D Light Setup
3DAxesFormat	3D Axes Format	3D Axes Formatting
3DAxesLabel	3D Axes Labels	3D Axes Labelling
3DXY Data	XY Series	3D XY Data
3D-XYZ	3D XYZ Main Menu	3D XYZ Plot
ColorContour	Grid Contour	Grid Contour
ColorCubeBlock	Cube Color Block	Cube Color Block
ColorCubePoint	Cube Color Point	Cube Color Point
ColorGridBlock	Grid Color Block	Grid Color Block Fill
ColorGridFill	Grid Color Fill	Grid Color Range Fill
ColorGridPoint	Grid Color Point	Grid Color Point
ColorLegend	Color Legend	Color Legend
Covar Limits	Confidence Limits	Covariance Matrix Confidence Limits
DataLabels	Data Labels	Data Labels
EditXYOnPlot	Modify: Enter/Edit XY	Enter/Edit XY On Plot
Grid Fishnet	Grid Fishnet	Grid Fishnet
GridLine	Extra Grid Lines	2D Grid Line
Multiple Table	Multiple Table Series	Multiple Table Data
SequenceGridLines	Sequence Grid Lines	Sequence Lines
SeriesLegend	Series Legend	Series Legend
TableHistogram	Table Histogram	Table Histogram
TableSeries	Single Table Series	Table Series
TableXYZ	Table Series	3D Table Data Series
UserLabels	User Labels	User Labels
X Axis	2D XY Axes	Single 1D Axis
XY Data	XY Series	XY Data
XYHistogram	XY Histogram	XY Histogram
XY Horsetail	XY Array Horsetail	XY Array Horsetail
XY Labels	XY Labels	XY Labels
XYZ Labels	XYZ Labels	XYZ Labels
Y Axis	2D XY Axes	Single 1D Axis
Z Axis	3D XYZ Axes	Single 1D Axis

## 16.3 List Objects

List Object Names		
Object Tree	Object Menu	Object Description



ReadLabelArray	Read XYZ Label Data	Read Labels
ReadOptSimResults	Read nSIGHTS Optimizer Results	Read Optimizer Results File
ReadProfileSimResults	Read nSIGHTS Profile Results	Read Profile Sim Results File
ReadRangeSimResults	Read nSIGHTS Range Results	Read Range Results File
ReadSequenceTimes	Read Sequence Time Interval Data	Read Sequence Times
ReadTable	Read Table File	Read Table Data
ReadXY	Read XY Data	Read XY Data
ReadXYSimResults	Read nSIGHTS XY Results	Read XY Sim ResultsFile
Real S/T	Scale/Transform	Real Scale/Transform
RealToTable	Real Value(s) To Table	Real Values To Table
Reduction	Reduction	XY Reduction
Remove Duplicate	Remove Duplicates	XY Remove Duplicates
ResidualDiagnostic	Calculate Residual Diagnostic	Residual Diagnostic
SelectCurve	Select Curve from File	Select Curve
SelectOptCovar	Extract Covariance Matrices	Select Covariance Matrices
SelectOptJacob	Extract Jacobian	Select Jacobian Data
SelectOptResid	Extract Residuals	Select Residuals
SelectOptResults	Extract Optimizer Results Table	Select Results
SelectProfile	Extract Profile Grid	Select Profile from Profile Sim Results
SelectRangeCube	Extract Range Cube	Select Range Cube
SelectRangeGrid	Extract Range Grid	Select Range Grid
SelectRTCube	Select Range Cube	Select RunTime Range Cube
SelectRTGrid	Select Range Grid	Select RunTime Range Grid
SelectXY	Select XY from XY Array	Select XY
SelectXYfromXYSimResults	Extract XY from XY Results	Select XY from Results
SequenceFit	Sequence Fit	Sequence Fit
SingleFit	(Basic) Single Fit	Single Fit
Smooth/Filter	Smooth/Filter	XY Smooth/Filter
SumTables	Sum Tables	Sum Tables
Table Col S/T	Table Column Scale/Transform	Table Column Scale/Transform
TableColCorr	Table Column Correlations	Calculate Table Column Correlation
TableColumnMath	Table Column Math	Table Column Math
TableHistogram	Table Column To Histogram	Table Column Histogram
TableInterpVal	Interpolate Table Columns	Interpolate Real from Table
TableRangeExtract	Extract Table Rows	Table Column Range Extract
TableRowIndexLogic	Table Row Index Logic	Table Row Index Logic
TableRowStatistics	Table Row Statistics	Table Row Summary Statistics
TableStatistics	Table Column Statistics	Table Column Statistics
TableToReal	Extract Real from Table	Extract Real from Table
TableToXY	Table Columns To XY	Extract XY From Table
Transpose	Transpose	XY Transpose
ViewTable	View Table Data	View Table Data
ViewXY	View XY Data	View XY Data
WriteColorMap	Write Color Map	Write Color Map
WriteCurveArray	Write Curve File	Write Curve File
WriteTable	Write Table File	Write Table
WriteXY	Write XY File	Write XY Data
XY Array S/T	Array Scale/Transform	XY Array Scale/Transform
XY Range Extract	Extract Range	XY Range Extraction
XY S/T	Single Scale/Transform	XY Scale/Transform
XYHistogram	Histogram	XY Histogram

# Information Only

## 16 APPENDIX E – OBJECT NAMES

Object names sometimes appear different in the object menu, the object tree and the object description area. The following tables provide alternate names given the object name in the object tree, sorted alphabetically. Object names used in the user manual, including object description appendices, refer to the object menu name.

### 16.1 Data Objects

Data Object Names		
Object Tree	Object Menu	Object Description
AddNoise	Add Noise	XY Add Noise
BasicResidual	Calculate Basic Residual	Basic Residual Calculation
BasicTimeExtract	Time Limits Extraction/Interpolation	Extract/Interpolate XY Data by Time Limits
CompositeFit	Composite Fit	Composite Fit
CreateCurve	Create Curve from XY Data	Create Curve Data
CreateRealValue	Create Real Value	Create Real Value
CreateTimeProcess	P(t) Time Processing	Create Time Process Data
CreateXYArray	Create XY Array	Create XY Array
Cube S/T	Scale/Transform	Cube Scale/Transform
CubeExtractGrid	Extract Grid	Cube Extract Grid
CubeHistogram	Histogram	Cube Histogram
CubeMath	Matrix Math	Cube Math
CubeNormalize	Normalize	Cube Normalize
CubeStatistics	Statistics	Cube Statistics
CubeToIndex	Extract Cube Indexes	Cube To Index
CurveInterp	Interpolate XY Data from Curve	Curve Interpolate
DataPgDesc		Data Page Description
Derivative	P(t) Derivative Calculation	Create Derivative Data
Dual XY S/T	Dual Scale/Transform	Dual XY Scale/Transform
EnterTable	Enter Table Data	Enter Table Data
EnterXY	Enter XY Data	Enter XY Data
ExtractSequence	Extract Sequence(s)	Extract Sequence Interval
FFT	Fourier Transform on Y	XY Fourier Transform
FullTableCorr	Full Table Correlations	Calculate Full Table Correlation
Grid S/T	Scale/Transform	Grid Scale/Transform
GridExtractXY	Extract XY	Grid ExtractXY
GridHistogram	Histogram	Grid Histogram
GridMath	Matrix Math	Grid Math
GridNormalize	Normalize	Grid Normalize
GridStatistics	Statistics	Grid Statistics
Integrate	Integrate	XY Integrate
JacobianToTable	Jacobian To Table	Jacobian To Table
LinColorMap	Linear Color Map	Linear Color Map
MergeColorMap	Merge Color Maps	Merge Color Maps
PenSet	Pen Set	Pen Set
PulseNormalize	Pulse Normalization	Normalize Pulse Data
ReadColorMap	Read Color Map	Read Color Map
ReadCubeData	Read Cube Data	Read Cube Data
ReadCurveArray	Read Curve File	Read Curve File
ReadGridData	Read Grid Data	Read Grid Data

## 15 APPENDIX D – NPOST OUTPUT OBJECT DESCRIPTIONS

As most nPost output objects are identical to nPre data objects, refer to Appendix A for a description of all output objects except **Write Grid File**.

### 15.1 Write Grid File

**What:** Writes a grid to a text file.

**Why:** Allows grid data to be used or manipulated outside the nSIGHTS application (for example, in another nSIGHTS application).

**Appearance:**

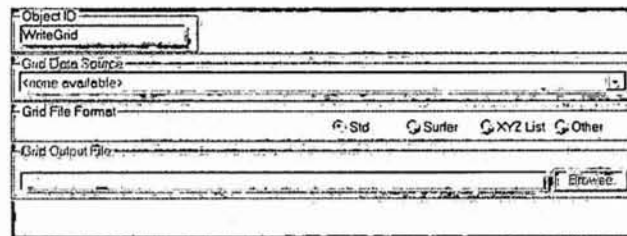


Figure 239. Write Grid File Window

**Application:** nPost

**Input Data:** table data

**Output Data:** text output file containing grid data compatible with **Read Grid Data**, default file extension \*.grd

**Properties:**

<b>Grid Data Source</b>	Selects the grid data to be output.
<b>Grid File Format</b>	One of four file formats can be selected. See the <b>Read Grid Data</b> object description for standard and XYZ list file formats.
<u>S</u> td	The standard grid file format.
<u>S</u> urfer	The grid format produced by Surfer Version 7 software, based on the <i>GS ASCII (*.grd)</i> file format.
<u>X</u> YZ List	List of XYZ points.
<u>O</u> ther	For future use, not currently supported.
<b>Grid Output File</b>	The name of the output file is entered in the text bar or the <b>Browse</b> button is used to find the file path using the standard Windows open file dialog.

The output file is only written once the Apply button is selected.

or cases allows the user to select the runs or cases to be viewed in the list window.

#### Covariance Matrix

Estimated

Covariance matrices use the estimated standard deviation specified by the user for each parameter.

Actual

Covariance matrices use the actual standard deviation calculated during the simulation.

Sub-fits

Allows the covariance matrix of sub-fits to be extracted. A sub-fit is a single fit of a composite fit.

#### Multiple List Output

All Cases

Results for each case selected in the **Selected Runs to List** are displayed.

Best Fit

Only the best fit of all selected cases are displayed.

Statistics

Provides statistics (minimum, maximum, mean and standard deviation) of the **Fit Value** and **Fitted Parameter Value** data.

#### Listing Selections

Specifies which optimization results to display in the list window.

## 14.3 Optimization Results

**What:** Displays optimizer results output, including a summary of the simulation, fit value data, fitted parameter values, parameter correlation values and 95% confidence intervals in a list window.

**Why:** Provides text values of optimization results.

**Used By:** Nothing.

**Appearance:**

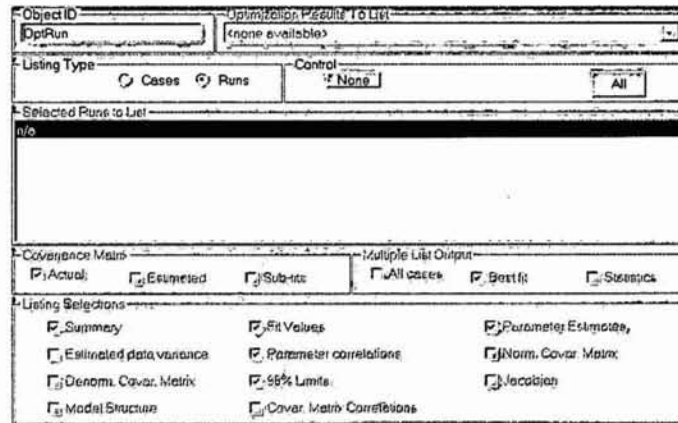


Figure 238. Optimization Results Window

**Input Data:** nSIGHTS Optimizer Results

**Output Data:** none

**Properties:**

**Optimization Results To List**

Select the **nSIGHTS Optimizer Results** object to be displayed in the list window.

**Listing Type**

Cases

All cases will be displayed in the **Selected Runs to List** window.

Runs

Only runs will be displayed in the **Selected Runs to List** window.

**Control**

None

Clears all runs or cases selected in the **Selected Runs to List** window.

All

Selects all runs or cases in the **Selected Runs to List** window.

**Selected Runs to List**

A selection box containing a list of the available runs

## 14.2 Jacobian List

**What:** Displays Jacobian data, as well as each parameter's and each fit's percentage of the total sensitivity in a list window.

**Why:** Provides text values and properties of the Jacobian matrix.

**Used By:** Nothing.

**Appearance:**




Figure 237. Jacobian List Window

**Input Data:** Extract Jacobian Data

**Output Data:** none

**Properties:**

Jacobian Data To List

Select the **Extract Jacobian Data** object to be displayed in the list window.

## 14 APPENDIX C – NPOST LIST OBJECT DESCRIPTIONS

### 14.1 Covariance List

**What:** Displays the values of the covariance matrix in a list window.

**Why:** Provides text values of the covariance matrix.

**Used By:** Nothing.

**Appearance:**




Figure 236. Covariance List Window

**Input Data:** Extract Covariance Matrices

**Output Data:** none

**Properties:**

Covariance Data To List

Select the **Extract Covariance Matrices** object to be displayed in the list window.

Points to Delete

formatting options are as described for Points to Keep.

Points selected with the mouse in Delete mode are represented by the specified symbol. Once the Apply command is selected, the selected points will be deleted from the object. Symbol formatting options are as described for Points to Keep.

Pen for Connecting Line

Existing and entered points are connected by a line of the specified color.

### Pop-Up Window:

Within the 2D plot window, in select mode, a new pop-up window specific to this object is available, as shown in figure 235:

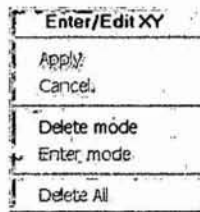


Figure 235.

Apply

Equivalent to the Apply button on the **Modify: Enter/Edit XY** object's property window.

Cancel

Equivalent to the Cancel button on the **Modify: Enter/Edit XY** object's property window.

Delete mode

Once selected, all clicks of the mouse near an existing point will change the point's symbol to the Points to Delete symbol. Once the Apply button is selected, all points with the Points to Delete symbol will be deleted.

Enter mode

New points, represented by the Entered Points symbol, will be created with each click of the mouse in the 2D plot window. A line will connect the point with the previously selected, created or closest point. Once the Apply button is selected, all points with the Entered Points symbol will be entered.

Delete All

All points within all active **Modify: Enter/Edit XY** objects will be deleted.



### 13.33 Modify: Enter/Edit XY

**What:** Object creates or deletes XY data points.

**Why:** Allows the user to create a new XY data set or add and delete points from an existing data set interactively.

**Used By:** Any object using XY data points.

**Appearance:**

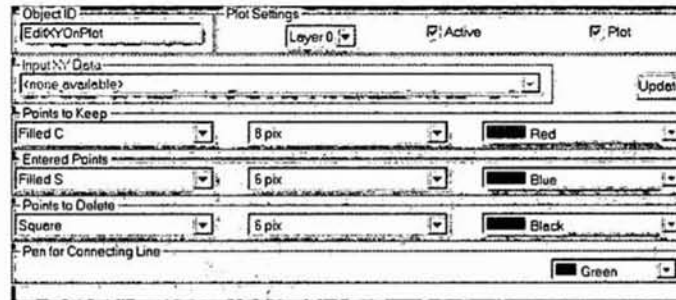


Figure 234. Modify: Enter/Edit XY Window

**Input Data:** none or XY data

**Output Data:** XY data

#### Properties:

<b>Input XY Data</b>	Select an XY data source to be edited. Will not be used as a source unless the <b>Update</b> button is selected.
<b>Update</b>	The <b>Update</b> button will delete all existing points, and create new points based on the XY points of the object selected as <b>Input XY Data</b> .
<b>Points to Keep</b>	Existing points are represented by the specified symbol.
<u>Symbol type</u>	One of the available symbols is selected: X, +, square, circle, triangle, diamond, filled square, filled circle, filled triangle and filled diamond.
<u>Symbol size</u>	The approximate relative size of the symbol in pixels is selected.
<u>Pen</u>	Select the color of the symbol from the plot window's plot pen set.
<b>Entered Points</b>	Points entered with the mouse (in <b>Enter</b> mode) are represented by the specified symbol. Once the <b>Apply</b> command is selected, the entered points will be represented by the <b>Points to Keep</b> symbol. Symbol

**Line End Handle**

within the 2D window rotates and changes the length of the analytic line. Symbol formatting options are as described for the **Center Point**.

Two points on each end of the analytic line are represented by the specified symbol. Dragging either of these points within the 2D window changes the length of the analytic line, as well as the location of the line end. Symbol formatting options are as described for the **Center Point**.

**Line**

The analytic line formatting options.

Line type

The line pattern is selected: *Solid*, *Dashed*, or *Double-Dash*.

Line thk

Thickness of the line in pixels.

Pen

Select the color of the symbol from the plot window's plot pen set.

**Results**

The resulting line properties are provided, including the center point X and Y co-ordinate, the line length, the X and Y component of the line length, the line slope and the line Y intercept.

**Pop-Up Window:**

Within the 2D plot window, in select mode, a new pop-up window specific to this object is available, as shown in figure 233:




Figure 233.

**Apply**

Equivalent to the **Apply** button on the **Analytics: Line Data** object's property window.

**Reset**

Returns the analytic line to the default location, length and rotation.

## ACTIVE PLOT OBJECTS

### 13.32 Analytics: Line Data

**What:** Creates a line with 5 points in a 2D plot window. Each point in the line can be dragged to move, rotate, extend or shrink the line. The location of the line, in addition to its length, slope and Y intercept, are provided in the object property window, and are output as data labels.

**Why:** Allows the user to create a straight line on a 2D plot interactively.

**Used By:** Data Labels

**Appearance:**

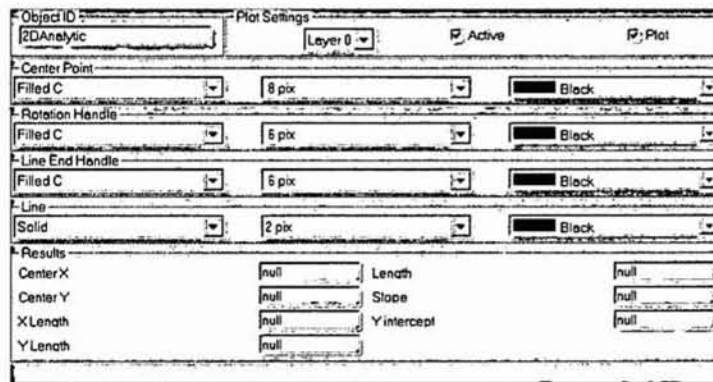


Figure 232. 2D Analytic Line Data Window

**Input Data:** none

**Output Data:** data labels of line properties

**Properties:**

**Center Point**

The center of the analytic line is represented by the specified symbol. Dragging the center point moves the entire line.

Symbol type

One of the available symbols is selected: X, +, square, circle, triangle, diamond, filled square, filled circle, filled triangle and filled diamond.

Symbol size

The approximate relative size of the symbol in pixels is selected.

Pen

Select the color of the symbol from the plot window's plot pen set.

**Rotation Handle**

Two points, one each between the center and the ends of the analytic line, are represented by the specified symbol. Dragging either of these points

<b>Vertical Align</b>	ordinate. Vertical justification relative to the label co-ordinate.
<b>Label Font</b>	Specifies the font used for labels. Font formatting options are described in Section 6.3.4.
<b>Offset</b>	XYZ offset is used to improve the visibility of objects (see discussion of 3D plot object visibility, Section 8.1.2.1).

## 13.31 XYZ Labels

- What:** Displays 3D labels in 3D data space.
- Why:** Text annotation of data values, cultural features.
- Used By:** Nothing (no object output).
- Appearance:**

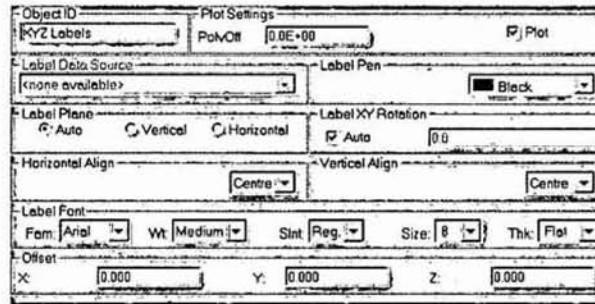


Figure 231. XYZ Labels Window

**Input Data:** Read XYZ Labels, Create XYZ Label for Real

**Output Data:** none

### Properties:

<b>Label Data Source</b>	Select the object containing the source of the XYZ labels.
<b>Label Pen</b>	Pen color used for labels, selected from the plot window's plot pen set.
<b>Label Plane</b>	
<u>Auto</u>	The plane onto which the text will be displayed is determined by the current view elevation. The label plane is horizontal if the view elevation is greater than 45 degrees, vertical otherwise.
<u>Vertical</u>	The text is displayed orthogonal to the XY plane.
<u>Horizontal</u>	The text is displayed parallel to the XY plane.
<b>Label XY Rotation</b>	
<u>Auto</u>	Label rotation in the XY plane is perpendicular to the current view azimuth.
<u>Rotation</u>	If not <u>Auto</u> , the rotation angle of the label in the XY plane is entered in degrees (0.0 is parallel to X axis).
<b>Horizontal Align</b>	Horizontal justification relative to the label co-

## 13.30 XY Labels

- What:** Displays 3D labels in a 2D data space.
- Why:** Text annotation of data values, cultural features.
- Used By:** Nothing (no object output).
- Appearance:**

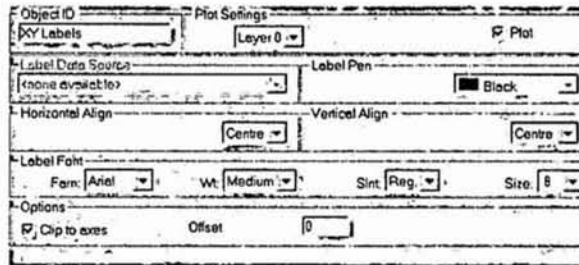


Figure 230. XY Labels Window

**Input Data:** Read XYZ Labels, Create XYZ Label for Real

**Output Data:** none

### Properties:

<b>Label Data Source</b>	Select the object containing the source of the XY labels.
<b>Label Pen</b>	Pen color used for labels, selected from the plot window's plot pen set.
<b>Horizontal Align</b>	Horizontal justification relative to the label co-ordinate.
<b>Vertical Align</b>	Vertical justification relative to the label co-ordinate.
<b>Legend Font</b>	Specifies the font used for labels. Font formatting options are described in Section 6.3.4.
<b>Options</b>	
<u>Clip to Axes</u>	XY labels outside the current axes limits will not be plotted.
<u>Offset</u>	XY label location will be offset by the entered value (based on a 0-100 annotation co-ordinate space).

text boxes within the scroll box, one text box per line of resulting label text.

Selected

Checkbox must be selected for the entered label to be included in the legend box.

Label Text

Label text is entered in the text box.

Justification

Justification of the label text within the legend box.

## 13.29 User Labels

**What:** Annotation object that displays a legend box containing user entered text.

**Why:** Standard annotation.

**Used By:** Nothing (no object output).

**Appearance:**

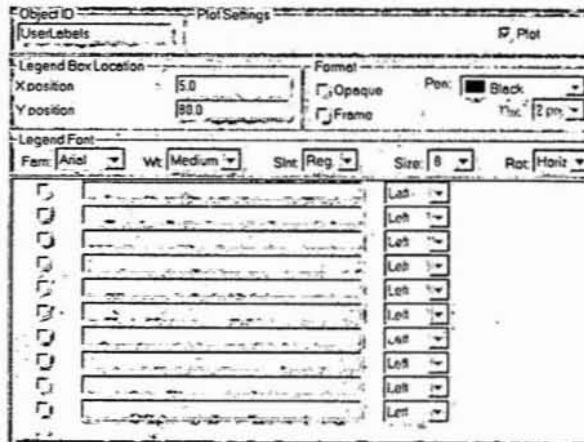


Figure 229. User Labels Window

**Input Data:** none

**Output Data:** none

### Properties:

#### Legend Box Location & Size

X, Y Position

Location of upper left corner of the legend in a 0-100 annotation co-ordinate system.

#### Legend Box Format

Opaque

Places the legend box on an opaque rectangle of background color (allows labels to be overlaid on data areas).

Frame

Places a rectangular frame around the legend box.

Legend Pen

Pen color used for labels and frame, selected from the plot window's plot pen set.

Thk

Thickness (in pixels) of frame.

#### Legend Font

Specifies the font used for labels. Font formatting options are described in Section 6.3.4.

#### Label Text

Twelve lines of user-input label can be displayed by each **User Labels** object. The text is entered in the



	the plot window's plot pen set.
<u>Thk</u>	Thickness (in pixels) of frame.
<b>Legend Font</b>	Specifies the font used for labels. Font formatting options are described in Section 6.3.4.
<b>Legend Label</b>	Additional label placed in upper right corner of legend.
<b>Legend Data</b>	Legend data from 12 different input objects can be displayed by each <b>Series Legend</b> object. The input objects are selected in the scroll box, one input object per line.
<u>Selected</u>	Checkbox must be selected for the input objects to be included in the legend.
<u>Data Source</u>	Series data to include in the legend are selected.

## 13.28 Series Legend

**What:** Annotation object creates a legend box for describing symbols and/or lines used by other plot objects.

**Why:** Standard plot annotation.

**Used By:** Nothing (no object output).

**Appearance:**

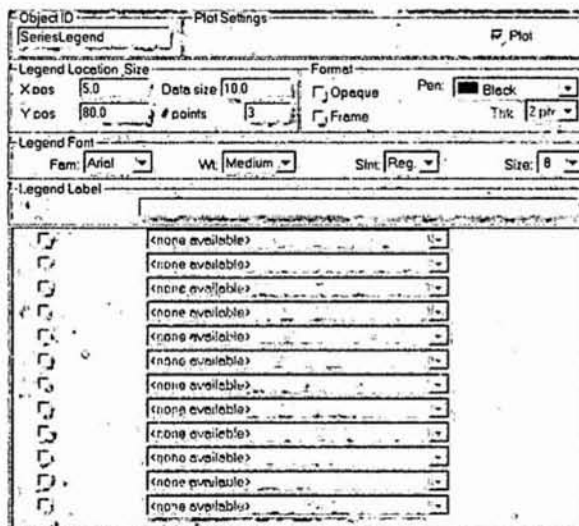


Figure 228. Series Legend Window

**Input Data:** Confidence Limits, Grid Contour, Grid Fishnet, Multiple Table Series, Table Series, XY Array Horsetail, XY Series.

**Output Data:** none

**Properties:**

### Legend Box Location & Size

X, Y Position

Location of upper left corner of the legend in a 0-100 annotation co-ordinate system.

Data Size

Length in 0-100 space of symbol/line display.

# points

Number of points in symbol/line display.

### Legend Box Format

Opaque

Places the series legend on an opaque rectangle of background color (allows legend to be overlaid on data areas).

Frame

Places a rectangular frame around the series legend.

Legend Pen

Pen color used for labels and frame, selected from

	system from the start to the end of the grid line.
<u>H</u>	Horizontal justification.
<u>V</u>	Vertical justification.
<u>Off</u>	Offset space between the grid line and the label.
<u>Blank</u>	Creates a blank in the grid line, where the grid line and label intersect.
<b>Label Font</b>	Specifies the font used for the label. Font formatting options are described in Section 6.3.4.
<b>Options</b>	
<u>Show END label</u>	A grid line is created for the starting time of each sequence, in addition to the end time of the last sequence. If this checkbox is selected, a label of "END" will be placed adjacent to the grid line representing the end time of the last sequence.

## 13.27 Sequence Grid Lines

**What:** Displays a grid line to define sequence intervals. Grid lines are created for the starting time of each sequence and for the end time of the last sequence. The grid lines may be labelled with the sequence identifier.

**Why:** To emphasize the beginning and starting points of sequences.

**Used By:** Nothing (no object output).

**Appearance:**

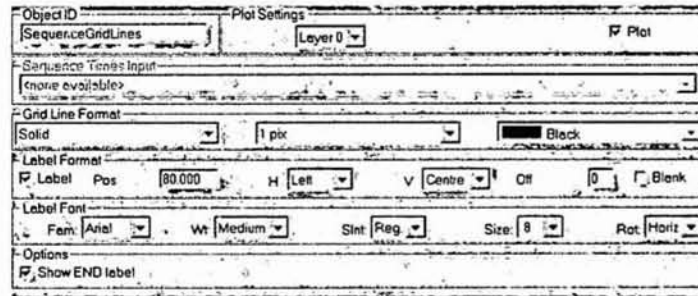


Figure 227. Sequence Grid Lines Window

**Input Data:** Sequence Time Interval Data

**Output Data:** none

**Properties:**

**Sequence Times Input**

The sequence time data set is selected. In nPre, the sequence time data are by default a global object defined in the Sequence input window. In nPost, the sequence time data must be read in with a **Sequence Time Interval Data** object, or with XY or profile simulation results.

**Grid Line Format**

Line type

The grid line pattern is selected: *Solid*, *Dashed*, or *Double-Dash*.

Line thk

Thickness of the grid line in pixels.

Pen

Select the color of the grid line from the plot window's plot pen set.

**Label Format**

Label

If selected, the sequence identifier will be placed adjacent to the grid line.

Pos.

Position of the label, based on a 0-100 co-ordinate

<u>Label</u>	If selected, a label will be placed adjacent to the grid line.
<u>Pos.</u>	Position of the label, based on a 0-100 co-ordinate system from the start to the end of the grid line.
<u>H</u>	Horizontal justification.
<u>V</u>	Vertical justification.
<u>Off</u>	Offset space between the grid line and the label.
<u>Blank</u>	Creates a blank in the grid line, where the grid line and label intersect.
<b>Label Font</b>	Specifies the font used for the label. Font formatting options are described in Section 6.3.4.
<b>Label</b>	Label text is user-input in the text box.

## 13.26 Extra Grid Lines

**What:** Displays a grid line at a specified X or Y value. The grid line may also be labelled.

**Why:** To emphasize a value in the X or Y axis.

**Used By:** Nothing (no object output).

**Appearance:**

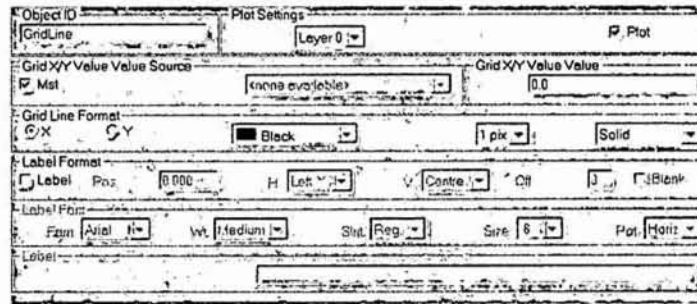


Figure 226. Extra Grid Lines Window

**Input Data:** none

**Output Data:** none

**Properties:**

**Grid X/Y Value Value Source**

A master/slave control to connect the Grid X/Y Value to a value specified in another object (e.g. another **Extra Grid Lines** object). Master/Slave controls are described in Section 6.3.1.

**Grid X/Y Value Value**

The X or Y value at which the grid line will be drawn.

**Grid Line Format**

X

The Grid X/Y Value Value will represent an X coordinate.

Y

The Grid X/Y Value Value will represent a Y coordinate.

Pen

Select the color of the grid line from the plot window's plot pen set.

Line thk

Thickness of the grid line in pixels.

Line type

The grid line pattern is selected: *Solid*, *Dashed*, or *Double-Dash*.

**Label Format**

## Data Labels

described in Section 6.3.4.

Each **Data Labels** object can plot up to 6 data labels, plotted consecutively within one legend box, one data label per line. The scroll box in the property window contains 6 input areas, separated by horizontal lines. Each input area is used to describe one data label.

### Select

The toggle box in the upper left corner of each input area must be selected to plot the selected data label.

### Data Source

The data label to be plotted is selected in the adjacent drop-down list.

### Justification

Each data label is justified within an enclosing sub-rectangle. This property controls the justification within the sub-rectangle.

### New format

If the data value is associated with a numeric value, the user can override the existing format. Numeric formatting options are described in Section 6.3.3.

### New Label

If selected, the existing description associated with the label is overridden. The first text box will create a label in front of the data (e.g. data descriptor), the second text box will create a label after the data (e.g. units of the data).

## 13.25 Data Labels

**What:** Annotation object that displays property and input settings for other objects in a legend box.

**Why:** Ensures annotation is updated as objects change.

**Used By:** Nothing (no object output).

**Appearance:**

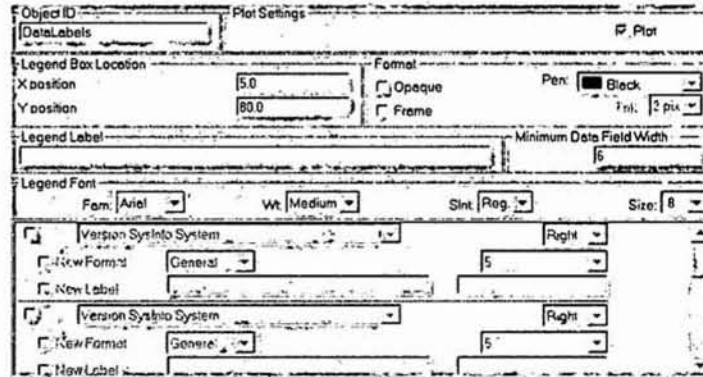


Figure 225. Data Labels Window

**Input Data:** many objects produce one or more label outputs

**Output Data:** none

**Properties:**

### Legend Box Location

X, Y Position

Location of upper left corner of legend box in a 0-100 annotation co-ordinate system.

### Format

Opaque

Places text on opaque rectangle of background color.

Frame

Places a rectangular frame around data label.

Pen

Pen color used for text and frame, selected from the plot window's plot pen set.

Thk

Thickness (in pixels) of frame.

### Legend Label

User-input label placed above specified data labels.

### Minimum Data Field Width

Specifies minimum width of label, based on the number of characters.

### Legend Font

Specifies the font used for the legend label and the specified data labels. Font formatting options are



# of inc

Actual number of increments, if Auto is not selected.

**Information Only**

<u>Bar length</u>	Height (if vertical) or width (if horizontal) in annotation units.
<u>Aspect ratio</u>	Width (if vertical) = length / aspect ratio.
<b>Legend Box Format</b>	
<u>Tics</u>	Draws tic marks at increments.
<u>Opaque</u>	Places the color bar and annotation on an opaque rectangle of background color (allows bar to be overlaid on data areas).
<u>Frame</u>	Places a rectangular frame around the color bar and annotation.
<u>Thk</u>	Thickness (in pixels) of frame.
<b>Legend Font</b>	Specifies the font used for increments and the main label. Font formatting options are described in Section 6.3.4.
<b>Main Label</b>	
<u>Label</u>	Includes a data label next to the color bar.
<u>Above/Left</u>	If selected, the data label is above the color bar (if horizontal), or to the left of the color bar (if vertical). If not selected, the data label is below the color bar (if horizontal) or to the right of the color bar (if vertical).
<u>Default</u>	When toggled on, the main label is entered by the user in the adjacent text box. When toggled off, the main label is based on the object ID of the selected color object.
<b>Inc. Label</b>	
<u>Above/Left</u>	If selected, the increment labels are placed above the color bar (if horizontal), or to the left of the color bar (if vertical). If not selected, the increment labels are placed below the color bar (if horizontal) or to the right of the color bar (if vertical).
<b>Increment Label Format</b>	Specifies the numeric format of the increment labels. Number formatting is described in Section 6.3.3.
<b>Increments</b>	Specifies the number of increments in the color bar.
<u>Auto</u>	The number of increments is based on data type (lin/log) and range. Not implemented.

## ANNOTATION PLOT OBJECTS

### 13.24 Color Legend

**What:** Annotation object that displays a color bar and associated data limits.

**Why:** Gives numeric context to plot objects using color maps.

**Used By:** Nothing (no object output).

**Appearance:**

The screenshot shows the 'Color Legend' window with the following settings:

- Object ID:** ColorLegend
- Plot Settings:**  Plot
- Color Legend Data Source:** (cache available)
- Orientation:** Horiz
- Legend Pen:** Black
- Legend Box Location & Size:**
  - X position: 5.0
  - Y position: 80.0
  - Bar length: 25.0
  - Aspect ratio: 20.00
- Legend Box Format:**
  - Tics
  - Opaque
  - Frame
  - Frame Thk: 2 ptx
- Legend Font:**
  - Fam: Arial
  - Wt: Medium
  - Slnt: Reg
  - Size: 8
- Main Label:**
  - Label
  - Above
  - Default
- Inc. Label:**
  - Above
- Increment Label Format:**
  - General
  - 5
  - Increments:  Auto

Figure 224. Color Legend Window

**Input Data:** Color Cube Block, Color Cube Point, Color Grid Block, Color Grid Fill, XY Array Horsetail

**Output Data:** none

**Properties:**

<b>Color Legend Data Source</b>	Select the color plot object the color legend will represent.
<b>Orientation</b>	
<i>Horizontal</i>	Legend is horizontal.
<i>Right</i>	Legend is vertical, main label is read from top to bottom.
<i>Left</i>	Legend is vertical, main label is read from bottom to top.
<b>Legend Pen</b>	Pen color used for label, tics, and frame, selected from the plot window's plot pen set.
<b>Legend Box Location &amp; Size</b>	
<u>X, Y Position</u>	Location of upper left corner of bar in a 0-100 annotation co-ordinate system.

<u>Tube size</u>	selected: <i>Triangle, Square, Octagon or Round</i> . The relative size of the tube in pixels is selected.
<b>Edges</b>	
<u>SymEdges</u>	If selected, plots a line around plotted symbols.
<u>TubeEdges</u>	If selected, plots a line around plotted tubes.
<u>Edge Pen</u>	Select the color of the symbol or tube edges.
<u>Edge line thk</u>	Thickness of edge lines in pixels.
<u>PolyOff</u>	Polygon offset of lines. Used only for OpenGL 1.1.
<b>Z Value Source</b>	Master/Slave controls for the Z value. Master/Slave controls are described in Section 6.3.1.
<b>Z Value</b>	XY values will be plotted at the constant Z value entered.
<b>3D Co-ordinate Mapping</b>	Determines which X, Y and Z values are plotted as the X, Y and Z axis.
<b>Series Label</b>	
<u>New label</u>	When toggled on, the label output is entered by the user in the adjacent text box. When toggled off, the label output is the object output ID of the input XY data.
<b>Offset</b>	XYZ offset is used to improve the visibility of objects (see discussion of 3D plot object visibility, Section 8.1.2.1).

<b>Select</b>	The toggle box in the upper left corner of input area must be selected to plot the selected XY series. The XY series to be plotted is selected in the drop-down list.
<u>Type</u>	The XY series is plotted as lines and/or symbols.
<u>Pen</u>	Select the color of the lines and/or symbols from the plot window's plot pen set.
<u>Symbol type</u>	Available if <u>Type</u> is not <i>Line</i> , one of the available symbols is selected: X, +, square, circle, triangle, diamond, filled square, filled circle, filled triangle and filled diamond.
<u>Symbol size</u>	The approximate relative size of the symbol in pixels is selected.
<u>Line type</u>	Available if <u>Type</u> is not <i>Symbol</i> , the line pattern is selected: <i>Solid, Dashed, or Double-Dash</i> .
<u>Line thk</u>	Thickness of the line in pixels.
<u>New label</u>	When toggled on, the label output is entered by the user in the adjacent text box. When toggled off, the label output is the object output ID of the input XY data.

### 3D Plot Object Properties:

Each **XY Data Series** object can plot only one XYZ series, using X and Y from the selected XY data, and Z values specified as the Z value source.

#### Plotting Spec.

<u>Type</u>	The XY series is plotted as lines and/or symbols.
<u>Pen</u>	Select the color of the lines and/or symbols from the plot window's plot pen set.
<u>Symbol type</u>	Available if <u>Type</u> is not <i>Line</i> , one of the available symbols is selected: X, +, square, circle, triangle, diamond, filled square, filled circle, filled triangle and filled diamond.
<u>Symbol size</u>	The relative size of the symbol in pixels is selected.
<u>Line type</u>	Available if <u>Type</u> is not <i>Symbol</i> , the line pattern is selected: <i>Solid, Dashed, Double-Dash or Extruded</i> .
<u>Line thk</u>	Thickness of the line in pixels.
<u>Tube type</u>	Available if <u>Line type</u> is <i>Extruded</i> , the tube pattern is

### 13.23 XY Series

**What:** Displays multiple XY data using symbols and/or lines.

**Why:** Standard XY data display.

**Used By:** Series Legend

**Appearance:** This object appears different in 2D and 3D.

#### 2D

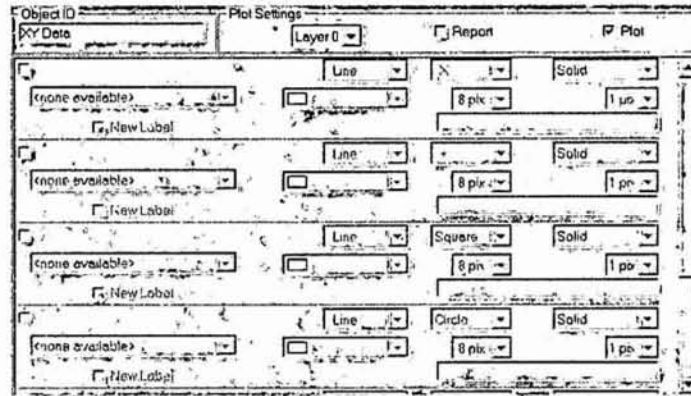


Figure 222. 2D XY Data Series Window

#### 3D

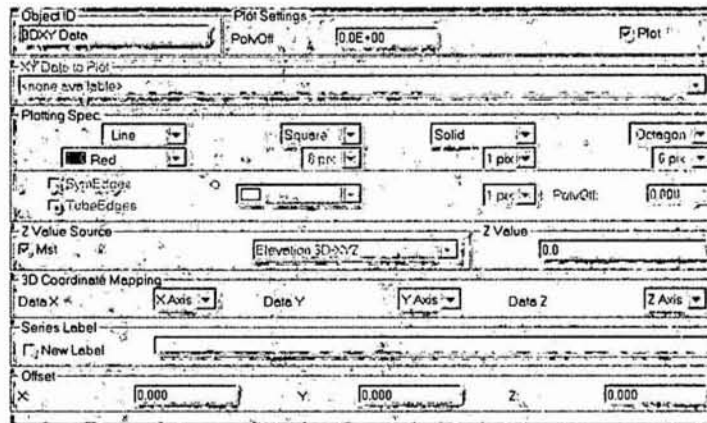


Figure 223. 3D XY Data Series Window

**Input Data:** XY data

**Output Data:** series legend specifications

#### 2D Plot Object Properties:

Each XY Data Series object can plot up to 8 XY series, each plotted using a different format. The scroll box contains 8 input areas, separated by horizontal lines. Each input area is used to describe one XY series.

<u>Line</u>	Histogram bars are plotted as lines.
<u>X Value</u>	Histogram bars are plotted as bars, with a thickness specified as an X increment.
<u>Pixels</u>	Histogram bars are plotted as bars, with a thickness specified as a pixel width. Similar to lines, however a rectangle is created which can be surrounded by an edge.
<u>% Avail</u>	Histogram bars are plotted as bars, with a thickness specified as percentage of the minimum distance between bars.
<b>Line Thk</b>	For histogram bars plotted as lines, the line thickness is specified.
<b>X Thick</b>	For histogram bar thickness specified as an X value, the thickness as an X increment is specified.
<b>Pixels</b>	For histogram bar thickness specified as a pixel width, the thickness in pixels is specified.
<b>% Available</b>	For histogram bar thickness specified as the percentage of space between X values, the thickness as a percentage is specified.
<b>Edges</b>	For all histogram width types except line.
<u>Plot</u>	If toggled, edges of the bars will be plotted using the pen color and pixel thickness specified within this dialog frame.
<b>Legend</b>	
<u>New label</u>	When toggled on, the label output is entered by the user in the adjacent text box. When toggled off, the label output is the object ID of the input object.

## 13.22 XY Histogram

**What:** Plots XY data as bars in a standard histogram format.

**Why:** Standard histogram data display.

**Used By:** Series Legend

**Appearance:**

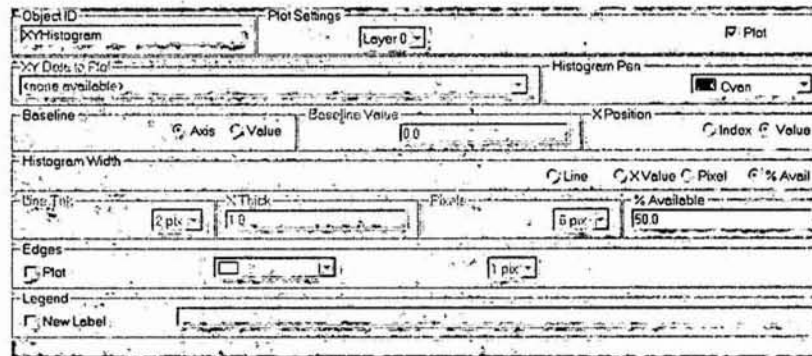


Figure 221. XY Histogram Window

**Input Data:** XY data

**Output Data:** series legend specifications

**Properties:**

<b>XY Data to Plot</b>	The XY data set to be plotted is selected.
<b>Histogram Pen</b>	All histogram bars are plotted in the specified color.
<b>Baseline</b>	
<u>A</u> xis	Histogram bars will extend down to the X axis, regardless of the Y value at the X axis.
<u>V</u> alue	Histogram bars will extend down (or up) to the Y value specified in the <b>Baseline Value</b> box.
<b>Baseline Value</b>	If <u>V</u> alue is specified as the <b>Baseline</b> , the minimum Y value of the histogram bars is specified.
<b>X Position</b>	
<u>I</u> ndex	The X value of histogram bars is based on the index value (e.g. the first Y value is plotted at an index of 1, the second at an index of 2, etc.)
<u>V</u> alue	The X value of histogram bars is based on the X value in the data set.
<b>Histogram Width</b>	



## 13.21 XY Array Horsetail

**What:** Displays all XY data sets contained within an XY array.

**Why:** Standard XY data display of many XY data sets.

**Used By:** Series Legend, Color Legend

**Appearance:**

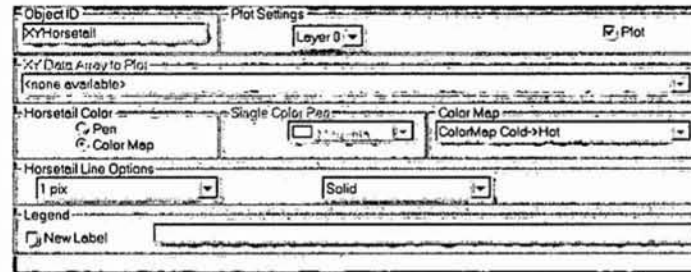


Figure 220. XY Array Horsetail Window

**Input Data:** XY array

**Output Data:** series and color legend specifications

**Properties:**

<b>XY Data Array to Plot</b>	The XY array data set to be plotted is selected.
<b>Horsetail Color</b>	
<u>P</u> en	All data set lines are plotted in the same color.
<u>C</u> olor Map	Each data set line is plotted in a different color.
<b>Single Color Pen</b>	If <u>P</u> en is selected, select the color of the lines from the plot window's plot pen set.
<b>Color Map</b>	If <u>C</u> olor Map is selected, select a color map from the drop-down list.
<b>Horsetail Line Options</b>	
<u>L</u> ine thk	Thickness of the line in pixels.
<u>L</u> ine type	The line pattern is selected: <i>Solid</i> , <i>Dashed</i> , or <i>Double-Dash</i> .
<b>Legend</b>	
<u>N</u> ew label	When toggled on, the label output is entered by the user in the adjacent text box. When toggled off, the label output is the object ID of the input object.

<u>Type</u>	The XY series is plotted as lines and/or symbols.
<u>Pen</u>	Select the color of the lines and/or symbols from the plot window's plot pen set.
<u>Symbol type</u>	Available if <u>Type</u> is not <i>Line</i> , one of the available symbols is selected: X, +, square, circle, triangle, diamond, filled square, filled circle, filled triangle and filled diamond.
<u>Symbol size</u>	The relative size of the symbol in pixels is selected.
<u>Line type</u>	Available if <u>Type</u> is not <i>Symbol</i> , the line pattern is selected: <i>Solid</i> , <i>Dashed</i> , <i>Double-Dash</i> or <i>Extruded</i> .
<u>Line thk</u>	Thickness of the line in pixels.
<u>Tube type</u>	Available if <u>Line type</u> is <i>Extruded</i> , the tube pattern is selected: <i>Triangle</i> , <i>Square</i> , <i>Octagon</i> or <i>Round</i> .
<u>Tube size</u>	The relative size of the tube in pixels is selected.
<b>Edges</b>	
<u>SymEdges</u>	If selected, plots a line around plotted symbols.
<u>TubeEdges</u>	If selected, plots a line around plotted tubes.
<u>Edge Pen</u>	Select the color of the symbol or tube edges.
<u>Edge line thk</u>	Thickness of edge lines in pixels.
<u>PolyOff</u>	Polygon offset of lines. Used only for OpenGL 1.1.
<b>Series Label</b>	
<u>New label</u>	When toggled on, the label output is entered by the user in the adjacent text box. When toggled off, the label output is the column ID of the Z data.
<b>Offset</b>	XYZ offset is used to improve the visibility of objects (see discussion of 3D plot object visibility, Section 8.1.2.1).

## 13.20 Table Series

**What:** In a 3D plot, displays columns of single table as XYZ data using symbols and/or lines.

**Why:** Standard XYZ data display.

**Used By:** Series Legend

**Appearance:**

Figure 219. Table XYZ Series Window

**Input Data:** table data

**Output Data:** series legend specifications

**Properties:**

Table Data	The table data set to be plotted is selected
X data column	The column in the input table that will form the X co-ordinate of the series.
Y data column	The column in the input table that will form the Y co-ordinate of the series.
Z data column	The column in the input table that will form the Z co-ordinate of the series.
<b>Options</b>	
<u>Plot all rows</u>	If toggled off, only rows 1 to the specified # of rows will be plotted.
<u># of rows to plot</u>	If <u>Plot all rows</u> is toggled off, the maximum number of rows to be plotted is specified.
<b>Plotting Spec.</b>	

<u>Value</u>	The X value of histogram bars is based on the X value in the data set.
<b>Histogram Width</b>	
<u>Line</u>	Histogram bars are plotted as lines.
<u>X Value</u>	Histogram bars are plotted as bars, with a thickness specified as an X increment.
<u>Pixels</u>	Histogram bars are plotted as bars, with a thickness specified as a pixel width. Similar to lines, however a rectangle is created which can be surrounded by an edge.
<u>% Avail</u>	Histogram bars are plotted as bars, with a thickness specified as percentage of the minimum distance between bars.
<b>Line Thk</b>	For histogram bars plotted as lines, the line thickness is specified.
<b>X Thick</b>	For histogram bar thickness specified as an X value, the thickness as an X increment is specified.
<b>Pixels</b>	For histogram bar thickness specified as a pixel width, the thickness in pixels is specified.
<b>% Available</b>	For histogram bar thickness specified as the percentage of space between X values, the thickness as a percentage is specified.
<b>Edges</b>	For all histogram width types except line.
<u>Plot</u>	If toggled, edges of the bars will be plotted using the pen color and pixel thickness specified within this dialog frame.
<b>Legend</b>	
<u>New label</u>	When toggled on, the label output is entered by the user in the adjacent text box. When toggled off, the label output is the object ID of the input object.

## 13.19 Table Histogram

**What:** Plots two columns of table data as bars in a standard histogram format.

**Why:** Standard histogram data display.

**Used By:** Series Legend

**Appearance:**

The screenshot shows the 'Table Histogram' window with the following settings:

- Object ID:** TableHistogram
- Plot Settings:** Layer 0, Plot
- Table Data to Plot:** (none available)
- Histogram Pen:** Cyan
- X Data Column:** n/a
- Y Data Column:** n/a
- Baseline:** Axis, Value, Baseline Value: 0.0, X Position: Index, Value
- Histogram Width:** Line, X Value, Pixel, % Avail
- Line Thick:** 3 pix, X Thick: 1.0, Points: 6 pix, % Available: 50.0
- Edges:** Plot, 1 pix
- Legend:** New Label

Figure 218. Table Histogram Window

**Input Data:** table data

**Output Data:** series legend specifications

**Properties:**

<b>Table Data to Plot</b>	The table data set to be plotted is selected.
<b>Histogram Pen</b>	All histogram bars are plotted in the specified color.
<b>X Data Column</b>	The table column to be used as the X data is selected.
<b>Y Data Column</b>	The table column to be used as the Y data is selected.
<b>Baseline</b>	
<u>Axis</u>	Histogram bars will extend down to the X axis, regardless of the Y value at the X axis.
<u>Value</u>	Histogram bars will extend down (or up) to the Y value specified in the Baseline Value box.
<b>Baseline Value</b>	If <u>Value</u> is specified as the Baseline, the minimum Y value of the histogram bars is specified.
<b>X Position</b>	
<u>Index</u>	The X value of histogram bars is based on the index value (e.g. the first Y value is plotted at an index of 1, the second at an index of 2, etc.)

<b>Select</b>	The toggle box in the upper left corner of input area must be selected to plot the selected XY series.
<u>Y</u>	The table column from the selected table to be used as the Y data of the series.
<u>Type</u>	The XY series is plotted as lines and/or symbols.
<u>Pen</u>	Select the color of the lines and/or symbols from the plot window's plot pen set.
<u>Symbol type</u>	Available if <u>Type</u> is not <i>Line</i> , one of the available symbols is selected: X, +, square, circle, triangle, diamond, filled square, filled circle, filled triangle and filled diamond.
<u>Symbol size</u>	The approximate relative size of the symbol in pixels is selected.
<u>Line type</u>	Available if <u>Type</u> is not <i>Symbol</i> , the line pattern is selected: <i>Solid</i> , <i>Dashed</i> , or <i>Double-Dash</i> .
<u>Line thk</u>	Thickness of the line in pixels.
<u>New label</u>	When toggled on, the label output is entered by the user in the adjacent text box. When toggled off, the label output is the column ID of the Y data in the input table.

## 13.18 Single Table Series

**What:** In a 2D plot, displays columns of single table as XY data using symbols and/or lines. Only one column is selected as the X data column. Multiple columns can be selected for the Y data.

**Why:** Standard XY data display.

**Used By:** Series Legend

**Appearance:**

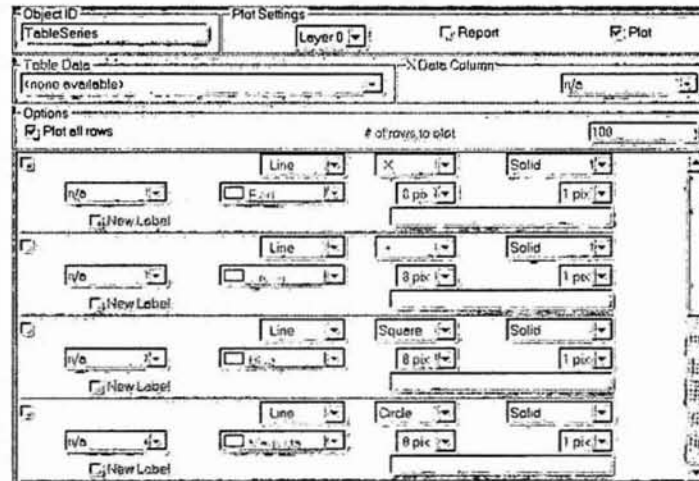


Figure 217. Single Table Series Window

**Input Data:** table data

**Output Data:** series legend specifications

**Properties:**

Table Data	The table data set to be plotted is selected
X data column	The column in the input table that will form the X co-ordinate of the series.
<b>Options</b>	
<u>Plot all rows</u>	If toggled off, only rows 1 to the specified # of rows will be plotted.
<u># of rows to plot</u>	If <u>Plot all rows</u> is toggled off, the maximum number of rows to be plotted is specified.

Each **Single Table Series** object can plot up to 8 XY series from one table, all using the same X values specified in the X data column. A different format can be used to plot each XY series selected. The scroll box contains 8 input areas, separated by horizontal lines. Each input area is used to describe one XY series.

symbols is selected: X, +, square, circle, triangle, diamond, filled square, filled circle, filled triangle and filled diamond.

Symbol size

The approximate relative size of the symbol in pixels is selected.

Line type

Available if Type is not *Symbol*, the line pattern is selected: *Solid*, *Dashed*, or *Double-Dash*.

Line thk

Thickness of the line in pixels.

New label

When toggled on, the label output is entered by the user in the adjacent text box. When toggled off, the label output is the object output ID of each table input.



## 13.17 Multiple Table Series

**What:** In a 2D plot, displays columns of up to 8 multiple tables as XY data using symbols and/or lines. X and Y data columns are specified for each table.

**Why:** Standard XY data display.

**Used By:** Series Legend

**Appearance:**

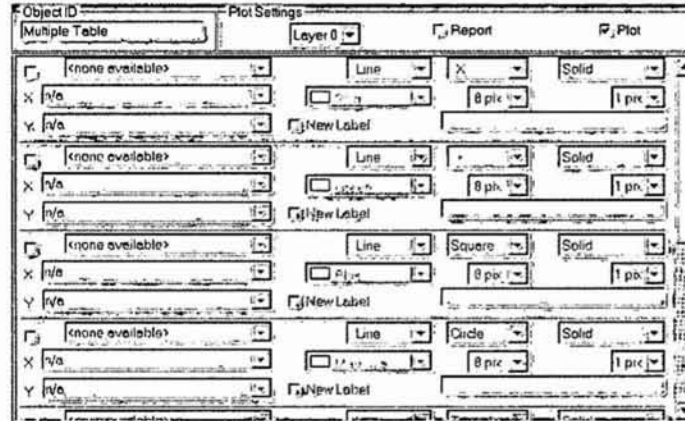


Figure 216. Multiple Table Series Window

**Input Data:** table data

**Output Data:** series legend specifications

**Properties:**

Each **Multiple Table Series** object can plot up to 8 XY series. The scroll box contains 8 input areas, separated by horizontal lines. Each input area is used to describe one XY series. A different format can be used to plot each XY series selected.

<u>Select</u>	The toggle box in the upper left corner of input area must be selected to plot the selected XY series. The table data object from which to extract the XY series is selected from the adjacent drop-down-box.
<u>X</u>	The table column from the selected table to be used as the X data of the series.
<u>Y</u>	The table column from the selected table to be used as the Y data of the series.
<u>Type</u>	The XY series is plotted as lines and/or symbols.
<u>Pen</u>	Select the color of the lines and/or symbols from the plot window's plot pen set.
<u>Symbol type</u>	Available if <u>Type</u> is not <i>Line</i> , one of the available

	<u>Lines</u> , or 3D <u>Tubes</u> .
<b>Line Thickness</b>	The thickness of the grid fishnet lines is selected.
<b>Line Type</b>	The line pattern of the grid fishnet lines is selected.
<b>Tube Extrusion</b>	For 3D plot object and <u>Tubes</u> plot type.
<u>Cap Ends</u>	The ends of the tube are filled with a polygon, such that the viewer cannot see inside the tube.
<u>Polygon type</u>	The tube can be several shapes: <i>Triangle</i> , <i>Square</i> , <i>Octagon</i> or <i>Round</i> .
<u>Polygon size</u>	Point size of each polygon of the tube in pixels.
<b>Options</b>	
<u>X modulus</u>	Reduces the number of X grid points included in the fishnet by the user-specified factor.
<u>Plot Last X</u>	Ensures that the last X grid line (grid line at maximum X value) is plotted.
<u>Y modulus</u>	Reduces the number of Y grid points included in the fishnet by the user-specified factor.
<u>Plot Last Y</u>	Ensures that the last Y grid line (grid line at maximum Y value) is plotted.
<b>Legend Label</b>	If <u>New Label</u> is toggled, up to 40 characters of user-entered text in the text box is used in legend label data output by the object. If the <u>New Label</u> checkbox is toggled off, the default legend label data will be the object ID.
<b>3D Co-ordinate Mapping</b>	For 3D plots, determines which grid and Z variable is plotted as the X, Y and Z axis.
<b>Offset</b>	XYZ offset is used to improve the visibility of objects (see discussion of 3D plot object visibility, Section 8.1.2.1).

## 13.16 Grid Fishnet

**What:** Plots grid lines of the grid, connecting all nodes of the grid. The number of grid lines can be reduced, based on an X and Y modulus.

**Why:** To view the grid in a plot window.

**Used By:** Series Legend

**Appearance:** This object appears different in 2D and 3D.

### 2D

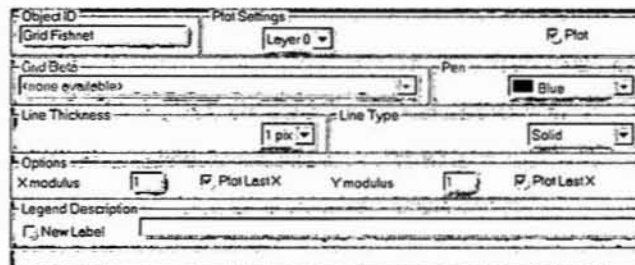


Figure 214. 2D Grid Fishnet Window

### 3D

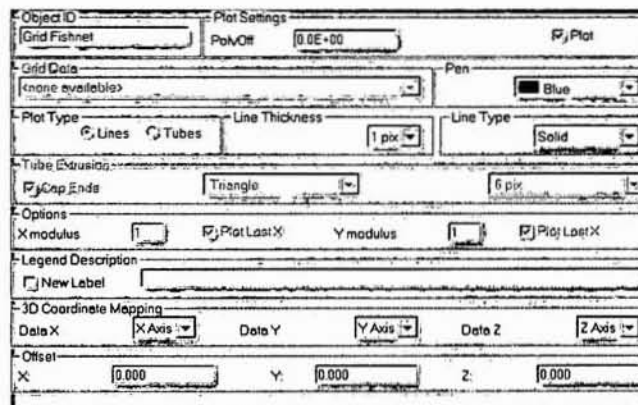


Figure 215. 3D Grid Fishnet Window

**Input Data:** grid data

**Output Data:** series legend specifications

### Properties:

Grid Data	The grid data set to be plotted is selected.
Pen	The color of the grid fishnet is selected from the plot window's plot pen set.
Plot Type	For 3D plots, the grid fishnet can be plotted as 2D

<u># of Inc</u>	Number of contour increments to plot. Contour lines will be drawn for number + 1 values. Enter 0 to plot a single line at the start value.
<b>Line Format</b>	The appearance of each contour line. Color, line width, and line pattern can be specified.
<b>Legend Label</b>	If the <u>New Label</u> is toggled, up to 40 characters of user-entered text in the text box is used in legend label data output by the object. If the <u>New Label</u> checkbox is toggled off, the default legend label data will be the object ID.
<b>Options</b>	
<u>XYZ line output</u>	If set, the contour data are exported from the object as XYZ co-ordinate array data. Note that the XYZ line output is calculated even if the <u>Plot</u> toggle is off.
<b>3D Co-ordinate Mapping</b>	For 3D plots, determines which grid and Z variable is plotted as the X, Y and Z axis.
<b>Offset</b>	XYZ offset is used to improve the visibility of objects (see discussion of 3D plot object visibility, Section 8.1.2.1).

<b>Grid Data To Plot</b>	The grid data set to be plotted is selected.
<b>Z value</b>	For 3D plots, a Z value needs to be identified to plot XY data in a 3D plot.
<i>Same</i>	The grid value at each grid co-ordinate is used as the Z value.
<i>Other Grid</i>	Grid value is based on the grid value from another grid of the same size.
<i>Constant</i>	The grid is plotted at a constant Z value. The Z value may be specified, or based on the Z value of another object.
<b>Z Value Grid</b>	For 3D plots, a grid is selected of the same size as the <b>Grid Data To Plot</b> . The value from the selected grid is used as the Z value.
<b>Fixed Z Value Value Source</b>	For 3D plots, Master/Slave controls for a <i>Constant Z</i> value. For grids extracted from a cube, the grid extraction value may be used as the constant Z value. Master/Slave controls are described in Section 6.3.1.
<b>Fixed Z Value Value</b>	For 3D plots and <i>Constant Z</i> value, the constant Z value at which to plot the grid.
<b>Contour Specification</b>	A master/slave control to connect the contour specifications to those specified in another object (e.g. another <b>Grid Contour</b> object). Master/Slave controls are described in Section 6.3.1.
<b>Increment Size</b>	How the contour increment is specified.
<u>Specified</u>	Enter minimum and increment, calculate maximum.
<u>Calculated</u>	Enter minimum and maximum, calculate increment.
<b>Increment Type</b>	Increments are equally spaced in linear or logarithmic data space.
<b>Increment Values</b>	The contour lines to plot.
<u>Start</u>	Data value of first contour to plot (minimum contour value).
<u>End</u>	Data value of last contour to plot (maximum contour value) if <b>Increment Size</b> is <u>Calculated</u> .
<u>Inc Size</u>	Delta between lines if <b>Increment Size</b> is <u>Specified</u> . For log increments the value is in terms of log cycles.

## 13.15 Grid Contour

**What:** Displays single contour lines of the nodes of a grid based on specified grid values.

**Why:** Display grid contours in a plot window.

**Used By:** Series Legend

**Appearance:** This object appears different in 2D and 3D.

2D

The screenshot shows the '2D Color Contour Window' dialog box. It has a title bar with 'Object ID' and 'Plot Settings'. The 'Object ID' field contains 'ColorContour'. The 'Plot Settings' section includes a 'Layer 0' dropdown and a 'Plot' checkbox. Below this is a 'Data To Plot' section with a dropdown set to '<none available>'. The 'Contour Specification' section has a 'Master' checkbox checked and a 'Save to:' dropdown set to '<none available>'. The 'Increment Size' section has 'Specified' selected over 'Calculated'. The 'Increment Values' section has 'Start' at 0.0, 'End' at 1.0, 'Inc size' at 0.1, and '# of inc' at 10. The 'Line Format' section has 'Red' selected for color and 'Solid' for line style. The 'Increment Type' section has 'Linear' selected over 'Logarithmic'. The 'Legend Label' section has a 'New Label' checkbox unchecked. The 'Options' section has an 'XYZ line output' checkbox unchecked.

Figure 212. 2D Color Contour Window

3D

The screenshot shows the '3D Color Contour Window' dialog box. It has a title bar with 'Object ID' and 'Plot Settings'. The 'Object ID' field contains 'ColorContour'. The 'Plot Settings' section includes a 'PlotOff' checkbox, a '0.0E+00' value field, and a 'Plot' checkbox. Below this is a 'Grid Data To Plot' section with a dropdown set to '<none available>', a 'Z Value' dropdown set to 'Same', and a 'Z Value Grid' dropdown set to '<none available>'. The 'Fixed Z Value Value Source' section has 'Met' selected over 'Elevation 3D-XYZ', and a 'Fixed Z Value Value' field set to 0.0. The 'Contour Specification' section has a 'Master' checkbox checked and a 'Save to:' dropdown set to 'Contour Spec ColorContour'. The 'Increment Size' section has 'Specified' selected over 'Calculated'. The 'Increment Values' section has 'Start' at 0.0, 'End' at 1.0, 'Inc size' at 0.1, and '# of inc' at 10. The 'Line Format' section has 'Red' selected for color and 'Solid' for line style. The 'Increment Type' section has 'Linear' selected over 'Logarithmic'. The 'Legend Label' section has a 'New Label' checkbox unchecked. The 'Options' section has an 'XYZ line output' checkbox unchecked. The '3D Coordinate Mapping' section has 'Data X' set to 'X Axis', 'Data Y' set to 'Y Axis', and 'Data Z' set to 'Z Axis'. The 'Offset' section has 'X' at 0.000, 'Y' at 0.000, and 'Z' at 0.000.

Figure 213. 3D Color Contour Window

**Input Data:** grid data

**Output Data:** series legend specifications

**Properties:**

<u>Auto Source</u>	The method for determining the data limits automatically.
<i>All Data</i>	The data limits are based on all data values.
<i>Grid in View</i>	The data limits are based on the data values within the window view.
<u>Min</u>	Minimum data value for color mapping.
<u>Max</u>	Maximum data value for color mapping.
<b>Out-of-Range</b>	Colors used for data values outside the data limits.
<u>Extend</u>	Values below the minimum data limit are given the first color in the color map, values above the maximum data limit are given the last color in the color map.
<u>Clip</u>	Values outside the data limits range are not plotted.
<b>Symbol</b>	Select from available symbols: X, +, square, circle, triangle, diamond, filled square, filled circle, filled triangle and filled diamond. The approximate relative size in pixels is also selected.
<b>Edges</b>	Controls the plotting of point edges with lines. Only available for filled symbols.
<u>Plot</u>	If selected, edges are plotted.
<u>Pen</u>	Color for edges selected from the plot window's plot pen set.
<u>Thk</u>	Edge line thickness.
<u>PolyOff</u>	Polygon offset of lines. Used only for OpenGL 1.1.
<b>3D Co-ordinate Mapping</b>	For 3D plots, determines which grid and Z variable is plotted as the X, Y and Z axis.
<b>Offset</b>	For 3D plots, XYZ offset is used to improve the visibility of objects (see discussion of 3D plot object visibility, Section 8.1.2.1).

<b>Grid Data To Plot</b>	The grid data set to be plotted is selected.
<b>Z value</b>	For 3D plots, a Z value needs to be identified to plot XY data in a 3D plot.
<i>Same</i>	The grid value at each grid co-ordinate is used as the Z value.
<i>Other Grid</i>	Grid value is based on the grid value from another grid of the same size.
<i>Constant</i>	The grid is plotted at a constant Z value. The Z value may be specified, or based on the Z value of another object.
<b>Z Value Grid</b>	For 3D plots, a grid is selected of the same size as the <b>Grid Data To Plot</b> . The value from the selected grid is used as the Z value.
<b>Fixed Z Value Value Source</b>	For 3D plots, Master/Slave controls for a <i>Constant Z</i> value. For grids extracted from a cube, the grid extraction value may be used as the constant Z value. Master/Slave controls are described in Section 6.3.1.
<b>Fixed Z Value Value</b>	For 3D plots and <i>Constant Z</i> value, the constant Z value at which to plot the grid.
<b>Limit Selection</b>	A master/slave control to connect the data limits to those specified in another object (e.g. <b>Cube Color Point</b> , <b>Grid Color Block</b> , etc.). Master/Slave controls are described in Section 6.3.1.
<b>Color Map</b>	The color map used to associate colors with data values is selected.
<b>Data Limits</b>	Controls how data values in the input data are mapped to colors in the input color map. This involves minimum and maximum data limit values that correspond to the first and last color in the color map respectively.
<u>Auto</u>	If set, then the data limits are extracted from the data, based on the <u>Auto Source</u> . If not set, then the data limits specified by the <u>Min</u> and <u>Max</u> properties are used.
<u>Log</u>	If set, the log range is mapped to the colors, and the log of the data values are used in calculating the mapped color. Otherwise, linear mapping is used.



## 13.14 Grid Color Point

**What:** Displays points at each grid data value within specified grid value limits. Points are colored according to the associated value.

**Why:** Displays grid data in a plot window.

**Used By:** Color Legend

**Appearance:** This object appears different in 2D and 3D.

### 2D

The screenshot shows the '2D Color Grid Point Window' dialog box. It has a title bar 'ColorGridPoint' and a 'Plot Settings' section with a 'Layer 0' dropdown and a 'Plot' checkbox. The 'Data To Plot' section has a '<none available>' dropdown. The 'Limit Selection' section has a 'Master' dropdown and a '<none available>' dropdown. The 'Color Map' section has a 'ColorMap Cold->Hot' dropdown. The 'Data Limits' section has 'Auto' and 'Log' checkboxes, 'Min' and 'Max' input fields (both set to 0.0), and an 'Auto source' dropdown set to 'All data'. The 'Out-of-Range' section has 'Extend' and 'Clip' radio buttons. The 'Symbol' section has a 'Filled C' dropdown and a '6 pix' dropdown. The 'Edges' section has a 'Plot' checkbox, an 'E' dropdown, and a '1 px' dropdown.

Figure 210. 2D Color Grid Point Window

### 3D

The screenshot shows the '3D Color Grid Point Window' dialog box. It has a title bar 'ColorGridPoint' and a 'Plot Settings' section with a 'Plot' checkbox and a 'PolvOff' input field set to '0.0E+00'. The 'Grid Data To Plot' section has a '<none available>' dropdown, a 'Z Value' dropdown set to 'Same', and a 'Z Value Grid' dropdown set to '<none available>'. The 'Fixed Z Value Value Source' section has a 'Master' dropdown and a 'Fixed Z Value Value' input field set to '0.0'. The 'Limit Selection' section has a 'Master' dropdown and a '<none available>' dropdown. The 'Color Map' section has a 'ColorMap Cold->Hot' dropdown. The 'Data Limits' section has 'Auto' and 'Log' checkboxes, 'Min' and 'Max' input fields (both set to 0.0), and an 'Auto source' dropdown set to 'All data'. The 'Out-of-Range' section has 'Extend' and 'Clip' radio buttons. The 'Symbol' section has a 'Filled C' dropdown and a '6 pix' dropdown. The 'Edges' section has a 'Plot' checkbox, an 'E' dropdown, a '1 px' dropdown, and a 'PolvOff' input field set to '0.000'. The '3D Coordinate Mapping' section has 'Data X' (X Axis), 'Data Y' (Y Axis), and 'Data Z' (Z Axis) dropdowns. The 'Offset' section has 'X', 'Y', and 'Z' input fields, all set to '0.000'.

Figure 211. 3D Color Grid Point Window

**Input Data:** grid data and color map

**Output Data:** color map limit specifications

**Properties:**

<i>All Data</i>	The data limits are based on all data values.
<i>Grid in View</i>	The data limits are based on the data values within the window view.
<u>Min</u>	Minimum data value for color mapping.
<u>Max</u>	Maximum data value for color mapping.
<b>Out-of-Range</b>	Colors used for data values outside the data limits.
<u>Extend</u>	Values below the minimum data limit are given the first color in the color map, values above the maximum data limit are given the last color in the color map.
<u>Clip</u>	Values outside the data limits range are not plotted.
<b>Edges</b>	Controls the plotting of triangulation edges with lines. (The grid is automatically triangulated in order to generate contours.)
<u>Plot</u>	If selected, triangulation edges are plotted.
<u>Pen</u>	Color for edges selected from the plot window's plot pen set.
<u>Thk</u>	Edge line thickness.
<u>PolyOff</u>	Polygon offset of lines. Used only for OpenGL 1.1.
<b>Cursor Reporting Format</b>	For 2D plots, the numeric format of the values associated with the cursor position in the report area of the 2D plot window. Numeric format controls are described in Section 6.3.3.
<b>3D Co-ordinate Mapping</b>	For 3D plots, determines which grid and Z variable is plotted as the X, Y and Z axis.
<b>Offset</b>	For 3D plots, XYZ offset is used to improve the visibility of objects (see discussion of 3D plot object visibility, Section 8.1.2.1).

<b>Z value</b>	For 3D plots, a Z value needs to be identified to plot XY data in a 3D plot.
<i>Same</i>	The grid value at each grid co-ordinate is used as the Z value.
<i>Other Grid</i>	Grid value is based on the grid value from another grid of the same size.
<i>Constant</i>	The grid is plotted at a constant Z value. The Z value may be specified, or based on the Z value of another object.
<b>Z Value Grid</b>	For 3D plots, a grid is selected of the same size as the <b>Grid Data To Plot</b> . The value from the selected grid is used as the Z value.
<b>Fixed Z Value Value Source</b>	For 3D plots, Master/Slave controls for a <i>Constant Z</i> value. For grids extracted from a cube, the grid extraction value may be used as the constant Z value. Master/Slave controls are described in Section 6.3.1.
<b>Fixed Z Value Value</b>	For 3D plots and <i>Constant Z</i> value, the constant Z value at which to plot the grid.
<b>Limit Selection</b>	A master/slave control to connect the data limits to those specified in another object (e.g. <b>Cube Color Block</b> , <b>Grid Color Point</b> , etc.). Master/Slave controls are described in Section 6.3.1.
<b>Color Map</b>	The color map used to associate colors with data values is selected.
<b>Data Limits</b>	Controls how data values in the input data are mapped to colors in the input color map. This involves minimum and maximum data limit values that correspond to the first and last color in the color map respectively.
<u>Auto</u>	If set, then the data limits are extracted from the data, based on the <u>Auto Source</u> . If not set, then the data limits specified by the <u>Min</u> and <u>Max</u> properties are used.
<u>Log</u>	If set, the log range is mapped to the colors, and the log of the data values are used in calculating the mapped color. Otherwise, linear mapping is used.
<u>Auto Source</u>	The method for determining the data limits automatically.

### 13.13 Grid Color Fill

**What:** Displays color filled contours of the nodes of a grid based on specified grid value limits.

**Why:** Displays contours of grid data in a plot window.

**Used By:** Color Legend

**Appearance:** This object appears different in 2D and 3D.

#### 2D

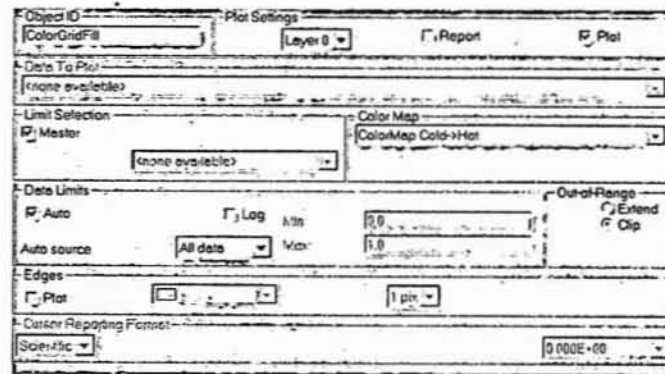


Figure 208. 2D Color Grid Fill Window

#### 3D

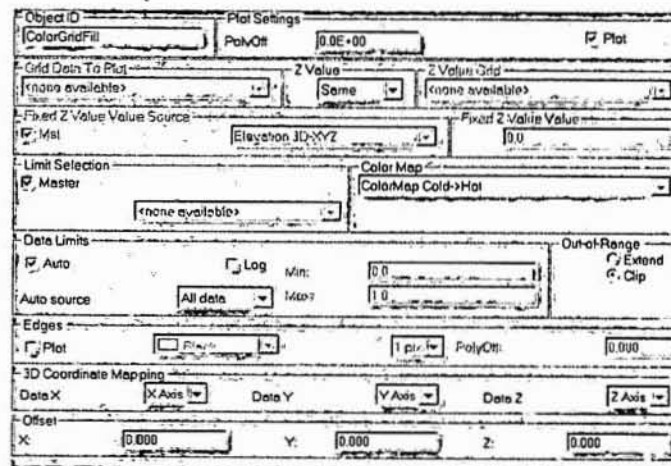


Figure 209. 3D Color Grid Fill Window

**Input Data:** grid data and color map

**Output Data:** color map limit specifications

**Properties:**

Grid Data To Plot

The grid data set to be plotted is selected.

	log of the data values are used in calculating the mapped color. Otherwise, linear mapping is used.
<u>Auto Source</u>	The method for determining the data limits automatically.
<i>All Data</i>	The data limits are based on all data values.
<i>Grid in View</i>	The data limits are based on the data values within the window view.
<u>Min</u>	Minimum data value for color mapping.
<u>Max</u>	Maximum data value for color mapping.
<b>Out-of-Range</b>	Colors used for data values outside the data limits.
<u>Extend</u>	Values below the minimum data limit are given the first color in the color map, values above the maximum data limit are given the last color in the color map.
<u>Clip</u>	Values outside the data limits range are not plotted.
<b>Area Reduction</b>	Factor by which the plotted blocks are reduced. Reduction is performed by shrinking the block along the lines between block vertices and the enclosed node by the area reduction factor.
<b>Edges</b>	Controls the plotting of block edges with lines.
<u>Plot</u>	If selected, edges are plotted.
<u>Pen</u>	Color for edges selected from the plot window's plot pen set.
<u>Thk</u>	Edge line thickness.
<u>PolyOff</u>	Polygon offset of lines. Used only for OpenGL 1.1.
<b>Cursor Reporting Format</b>	For 2D plots, the numeric format of the values associated with the cursor position in the report area of the 2D plot window. Numeric format controls are described in Section 6.3.3.
<b>3D Co-ordinate Mapping</b>	For 3D plots, determines which grid and Z variable is plotted as the X, Y and Z axis.
<b>Offset</b>	For 3D plots, XYZ offset is used to improve the visibility of objects (see discussion of 3D plot object visibility, Section 8.1.2.1).

**Output Data:** color map limit specifications

**Properties:**

<b>Grid Data To Plot</b>	The grid data set to be plotted is selected.
<b>Z value</b>	For 3D plots, a Z value needs to be identified to plot XY data in a 3D plot.
<i>Same</i>	The grid value at each grid co-ordinate is used as the Z value.
<i>Other Grid</i>	Grid value is based on the grid value from another grid of the same size.
<i>Constant</i>	The grid is plotted at a constant Z value. The Z value may be specified, or based on the Z value of another object.
<b>Z Value Grid</b>	For 3D plots, a grid is selected of the same size as the <b>Grid Data To Plot</b> . The value from the selected grid is used as the Z value.
<b>Fixed Z.Value Value Source</b>	For 3D plots, Master/Slave controls for a <i>Constant</i> Z value. For grids extracted from a cube, the grid extraction value may be used as the constant Z value. Master/Slave controls are described in Section 6.3.1.
<b>Fixed Z Value Value</b>	For 3D plots and <i>Constant</i> Z value, the constant Z value at which to plot the grid.
<b>Limit Selection</b>	A master/slave control to connect the data limits to those specified in another object (e.g. <b>Cube Color Block</b> , <b>Grid Color Point</b> , etc.). Master/Slave controls are described in Section 6.3.1.
<b>Color Map</b>	The color map used to associate colors with data values is selected.
<b>Data Limits</b>	Controls how data values in the input data are mapped to colors in the input color map. This involves minimum and maximum data limit values that correspond to the first and last color in the color map respectively.
<u>Auto</u>	If set, then the data limits are extracted from the data, based on the <u>Auto Source</u> . If not set, then the data limits specified by the <u>Min</u> and <u>Max</u> properties are used.
<u>Log</u>	If set, the log range is mapped to the colors, and the

## 13.12 Grid Color Block

**What:** Displays color blocks around each grid data value within specified grid value limits. Blocks are colored according to the associated value.

**Why:** Displays grid data in a plot window.

**Used By:** Color Legend

**Appearance:** This object appears different in 2D and 3D.

### 2D

The screenshot shows the '2D Color Grid Block' dialog box. It has several sections: 'Object ID' with 'ColorGridBlock' and 'Plot Settings' with 'Layer 0', 'Report', and 'Plot' checkboxes. 'Data To Plot' is set to '<none available>'. 'Limit Selection' has 'Master' checked and '<none available>' for the selection. 'Color Map' is 'ColorMap Cold->Hot'. 'Data Limits' has 'Auto' checked, 'Log' unchecked, 'Min.' at 0.0, and 'Max.' at 1.0. 'Auto source' is 'All data'. 'Area reduction' is 1.00000. 'Edges' has 'Plot' checked and '1 pix' for the size. 'Cursor Reporting Format' is 'Scientific' with a value of 0.000E+00.

Figure 206. 2D Color Grid Block

### 3D

The screenshot shows the '3D Color Grid Block' dialog box. It includes 'Object ID' (ColorGridBlock) and 'Plot Settings' (PolyOff: 0.0E+00, Plot checked). 'Grid Data To Plot' is '<none available>' with 'Z Value' set to 'Same' and 'Z Value Grid' as '<none available>'. 'Fixed Z Value Value Source' is 'Elevation 3D-XYZ' and 'Fixed Z Value Value' is 0.0. 'Limit Selection' has 'Master' checked. 'Data Limits' has 'Auto' checked, 'Log' unchecked, 'Min.' at 0.0, and 'Max.' at 1.0. 'Auto source' is 'All data'. 'Area reduction' is 1.00000. 'Edges' has 'Plot' checked, '1 pix' for size, and 'PolyOff: 0.000'. '3D Coordinate Mapping' has 'Data X' as 'X Axis', 'Data Y' as 'Y Axis', and 'Data Z' as 'Z Axis'. 'Offset' has X, Y, and Z all set to 0.000.

Figure 207. 3D Color Grid Block

**Input Data:** grid data and color map

**Offset**

XYZ offset is used to improve the visibility of objects (see discussion of 3D plot object visibility, Section 8.1.2.1).